


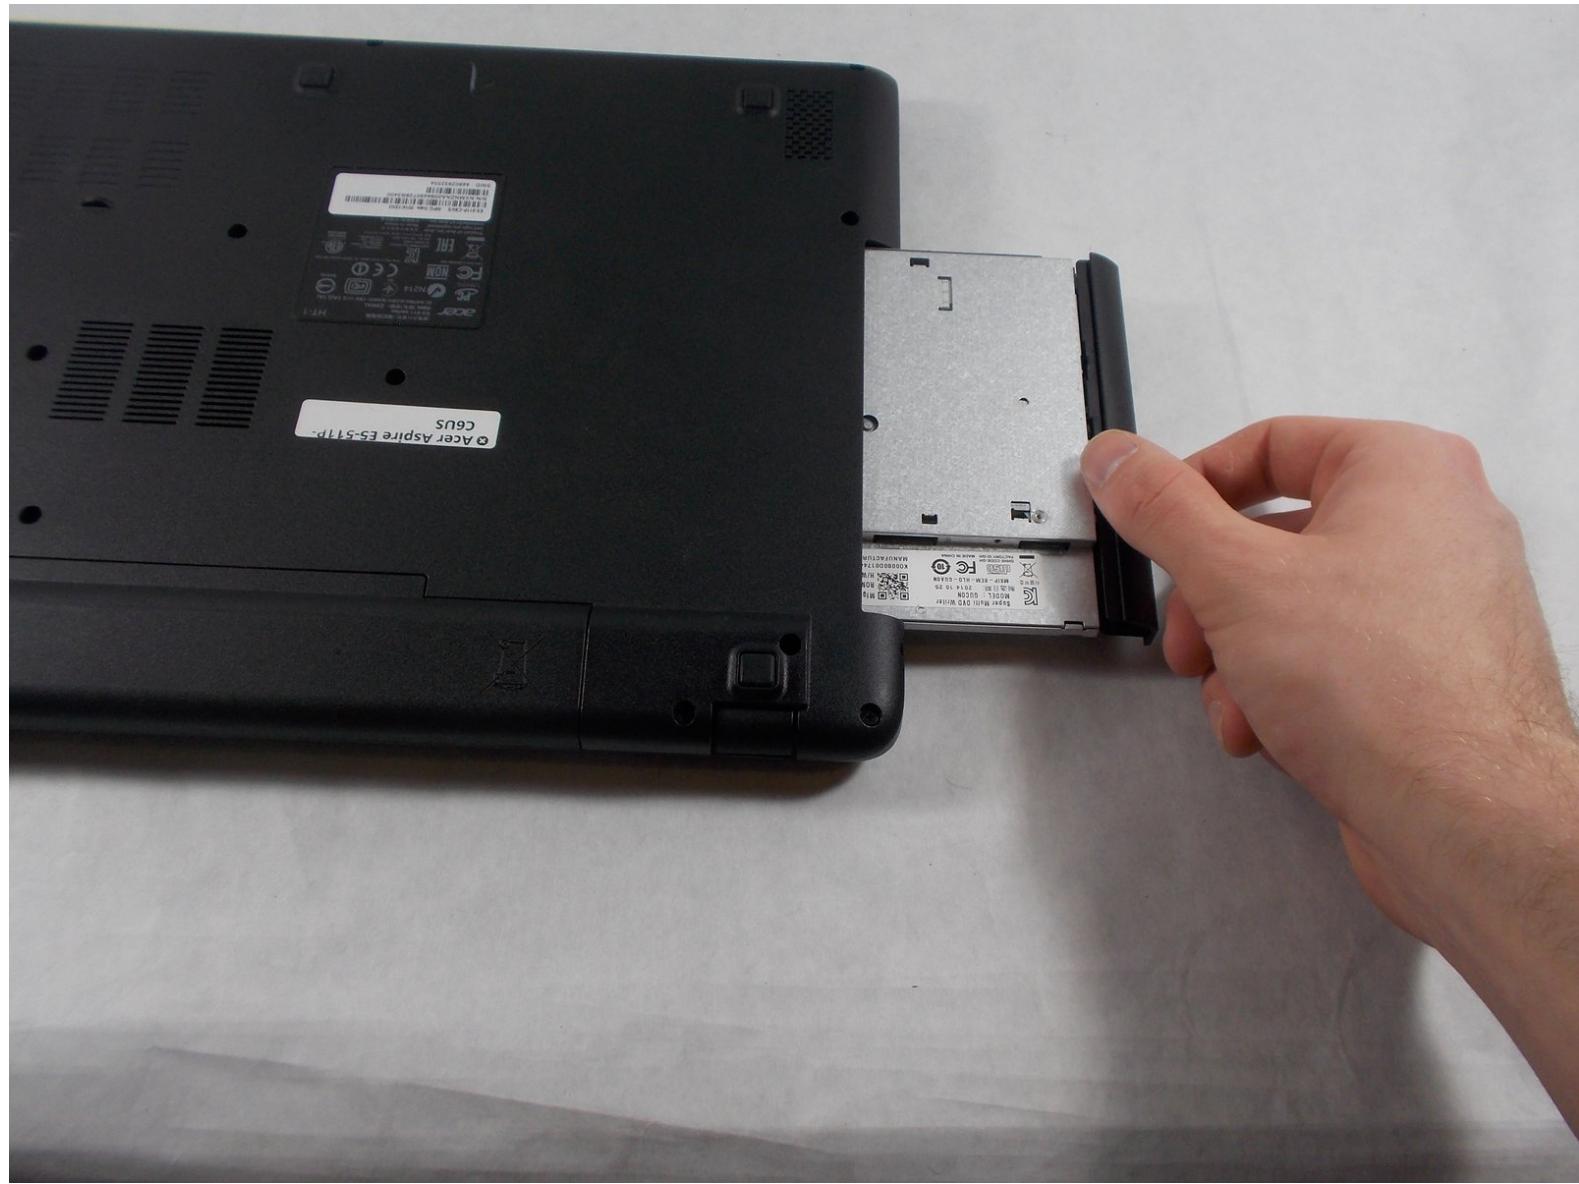

Acer Aspire E5-511p-C6US Optical Drive Replacement

The optical drive is used to read CD and DVD discs. They can get worn down or bent, but can easily be removed and replaced.

Written By: Aaron



This document was generated on 2019-11-30 10:18:09 AM (MST).

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery




- On the back of the laptop, there is a sliding lock. Push the slider and the battery will unlock

Step 2




- Pull battery to remove.

Step 3 — Optical Drive

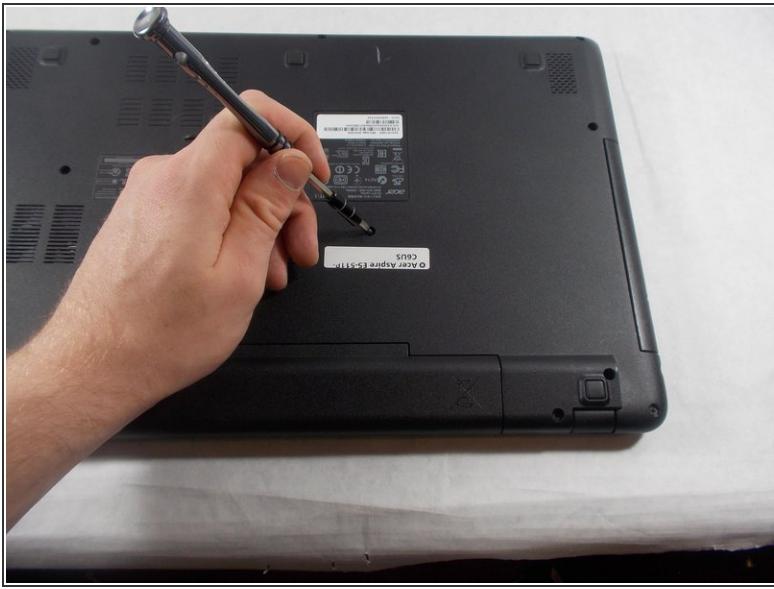

- Remove the 1 screw just above the battery with a Phillips #1 screwdriver.

Step 4

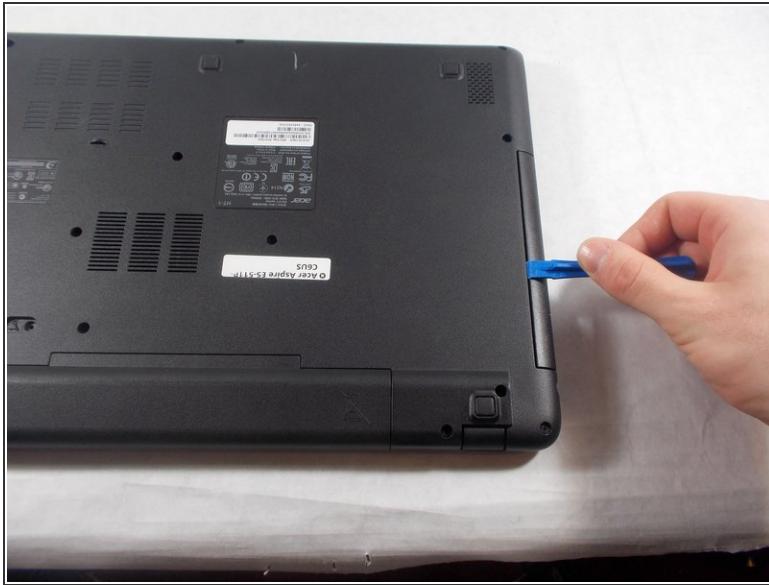

- Pull the Optical Drive out

To reassemble your device, follow these instructions in reverse order.