


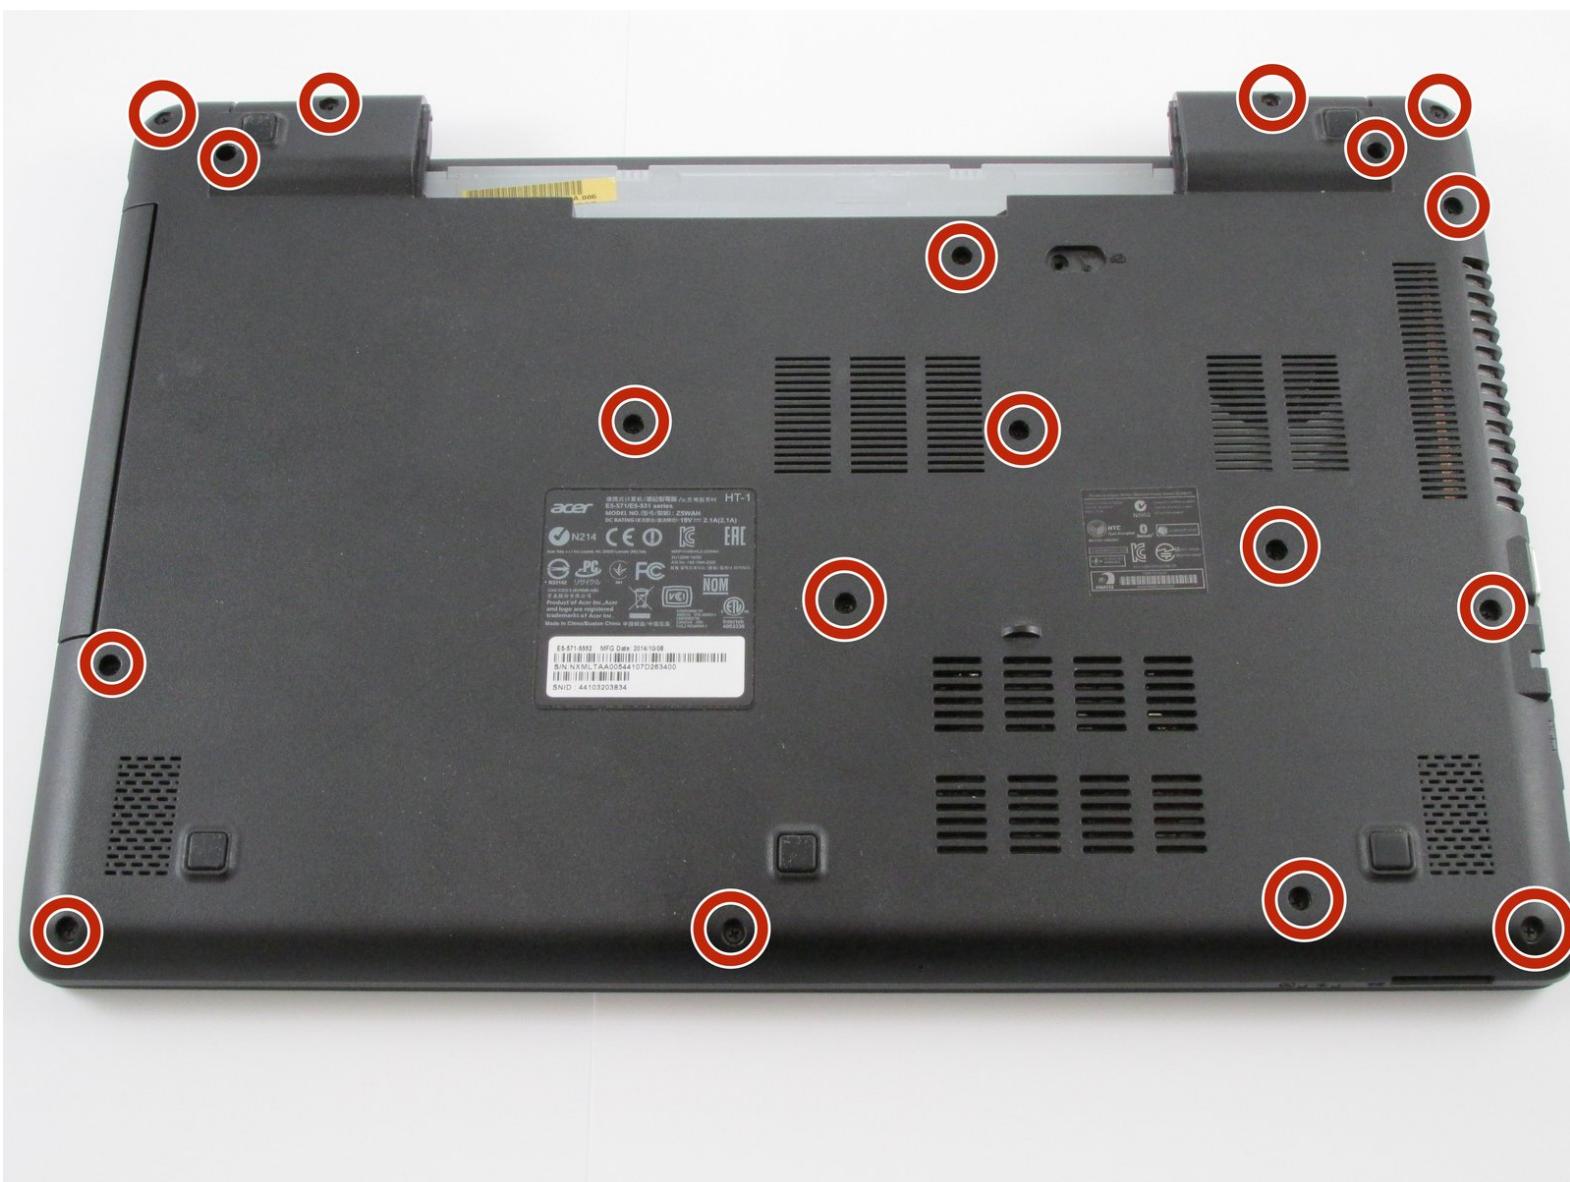

Acer Aspire E5-571 Keyboard Replacement

Keyboard/Touchpad replacement guide for your Acer Aspire E5-571.

Written By: daniel sawyer



INTRODUCTION

If the keyboard is broken on your Acer Aspire E5-571, this guide will show you how to remove and replace it.

TOOLS:

- Phillips #0 Screwdriver (1)
- Metal Spudger (1)
- iFixit Opening Tools (1)

Step 1 — Battery



 Make sure the laptop is shut down.


- Flip the laptop upside down with the battery facing towards your body and locate the battery lock circled in red.

Step 2




- Use a small screwdriver or pen and place it into the battery lock as shown.
- Gently slide it to the left until you hear the battery release.

Step 3

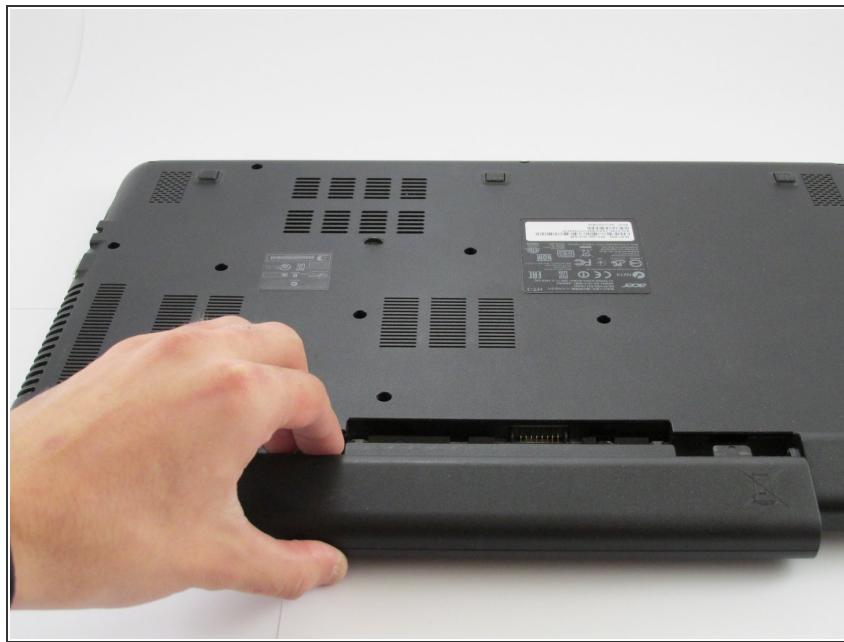

- Pull the battery towards your body as shown in the picture.

Step 4 — Keyboard

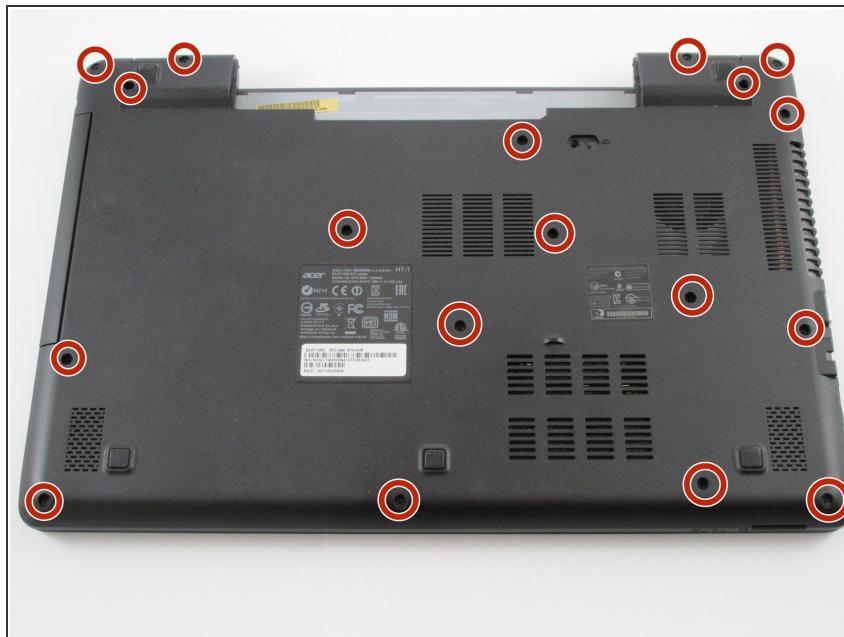

- Remove all eighteen 8 mm Phillips #0 screws with a Phillips #0 screwdriver and set aside.

(i) All of these screws are identical, 8 mm, Phillips #0 screws.


Step 5



- Move around the edge with metal spudger and carefully pry apart the keyboard.
- Be careful not to break the plastic clips.

⚠ Once all edges are loose, do not remove the keyboard until after next step!

Step 6

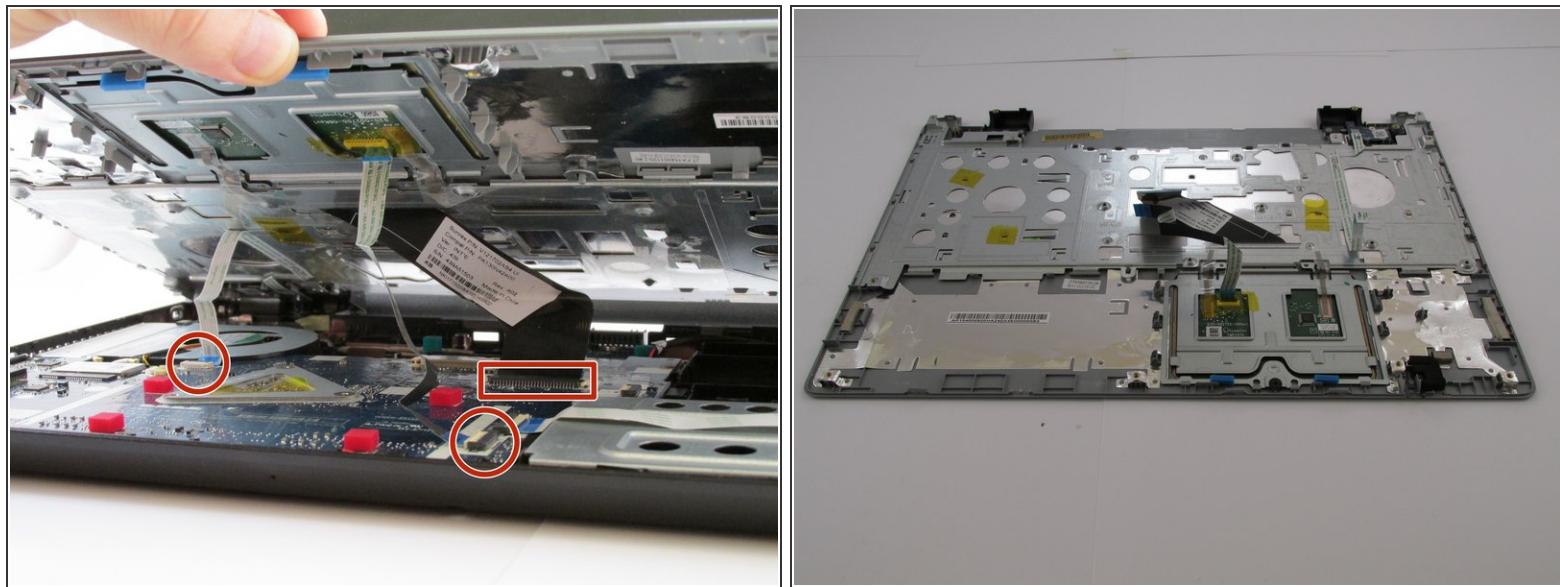

- Carefully detach the three ZIF ribbons connected to the motherboard by flipping up the white hinge.
- Lift up on the keyboard and the whole top should come right off, including the touchpad.

To reassemble your device, follow these instructions in reverse order.