


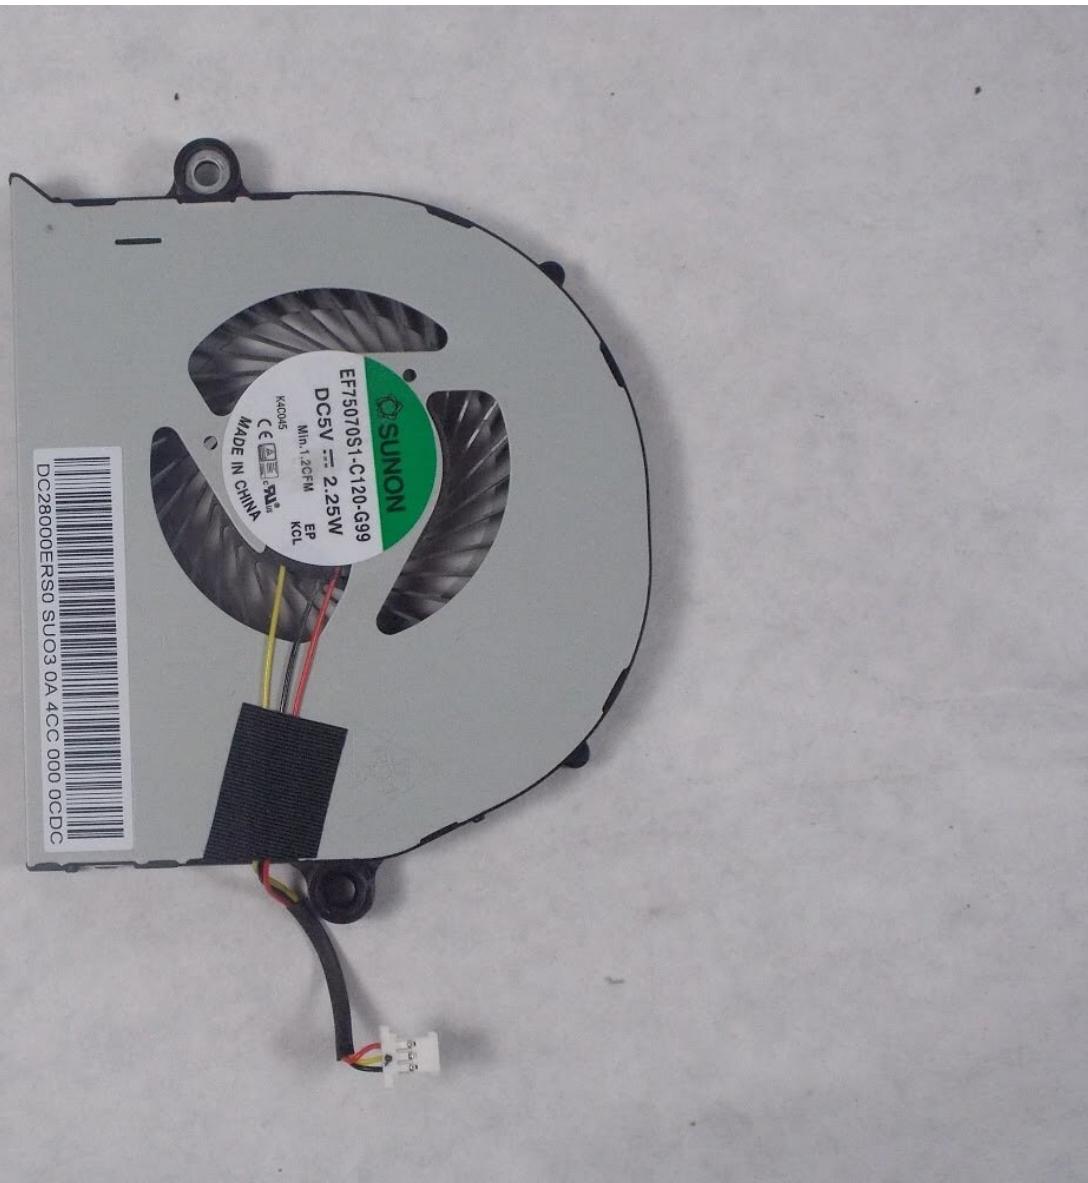

# Acer Aspire E5-571-58CG CPU Fan Replacement

This guide will show you how to remove and replace your Acer Aspire E5-571-58CG's CPU fan.

Written By: Brendan Cuthill



## INTRODUCTION

If your device is overheating, you may need to replace the laptop's CPU Fan. This guide will help you through this process.

### TOOLS:

- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [JIS #000 Screwdriver \(1\)](#)
- [JIS #0 Screwdriver \(1\)](#)

## Step 1 — Battery



! Make sure the laptop is powered off.

- Flip the laptop over and locate the battery release switch.
- Insert the pointed end of the spudger into the battery release switch.
- Push the battery release switch to the right.

## Step 2




- While the battery release switch is pushed to the right, carefully slide the battery out of its socket.

## Step 3 — CPU Fan





- Remove the top panel of the laptop with the plastic opening tool.

## Step 4

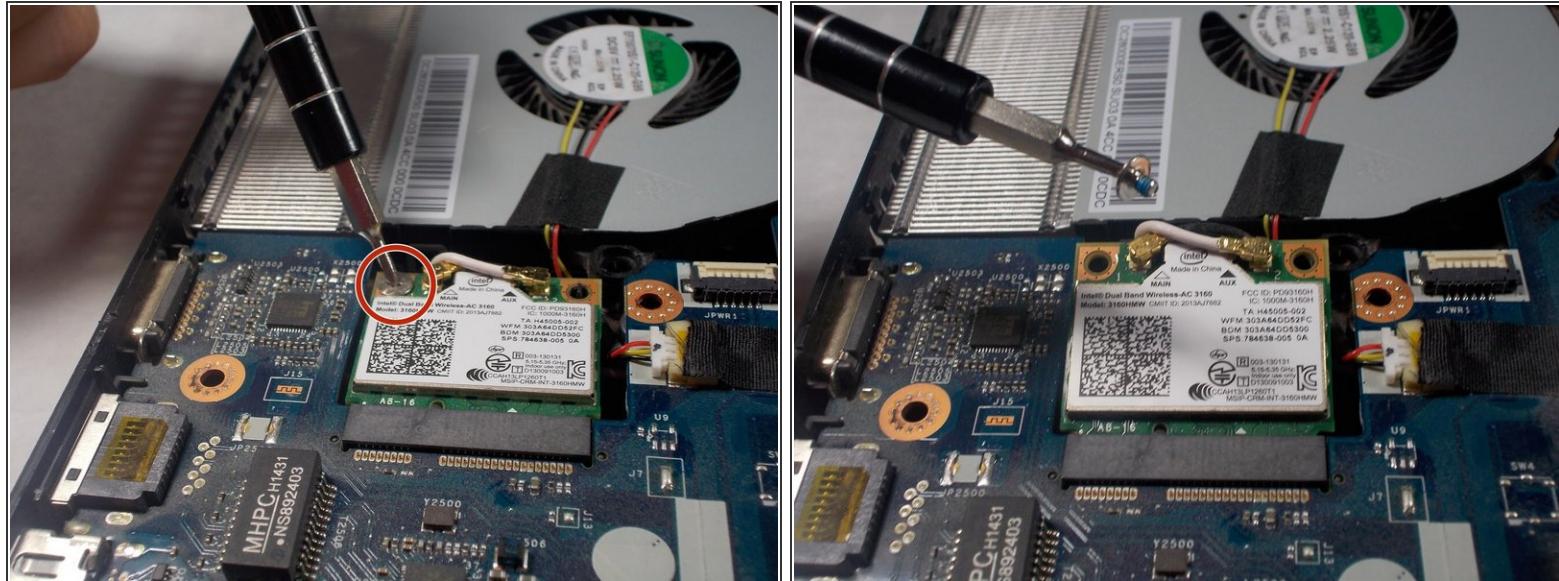



- Use a JIS #000 screw bit to remove the marked screw.

## Step 5

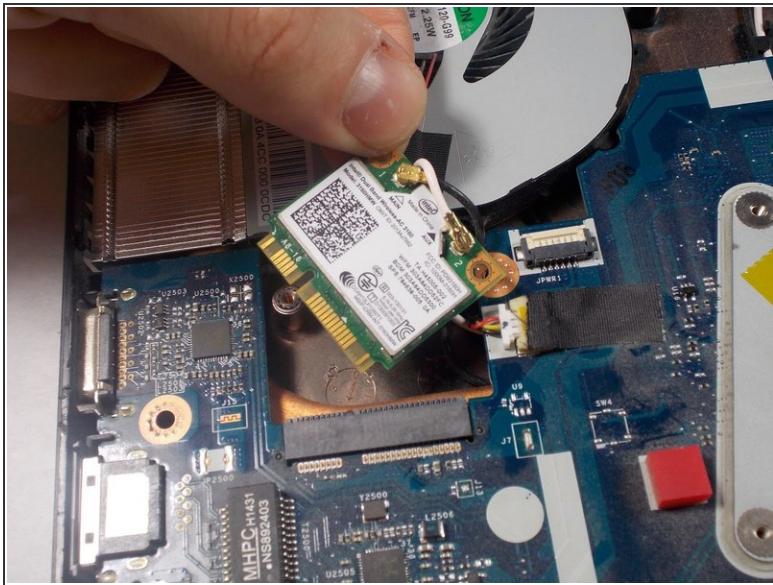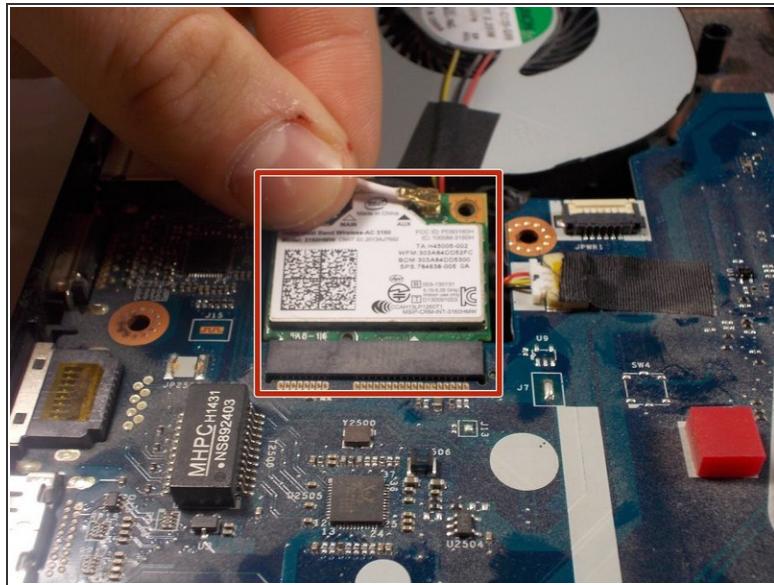

- Carefully pull the marked green chip out of the motherboard.

## Step 6

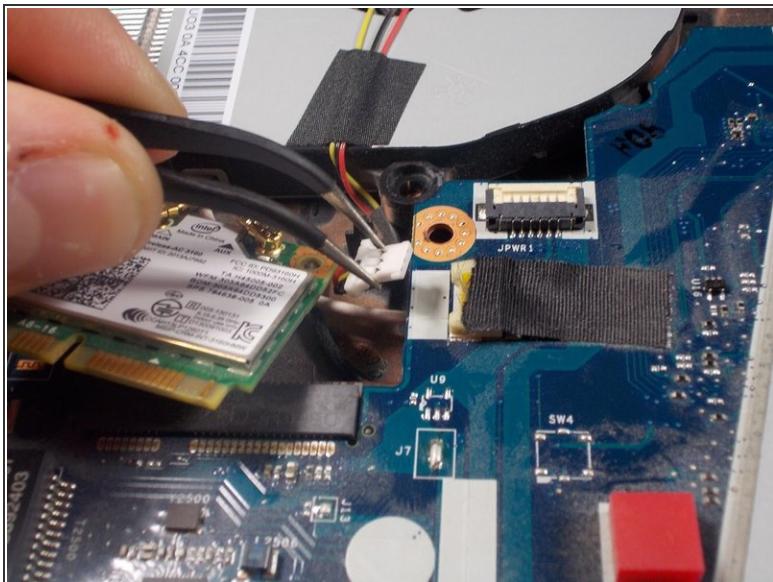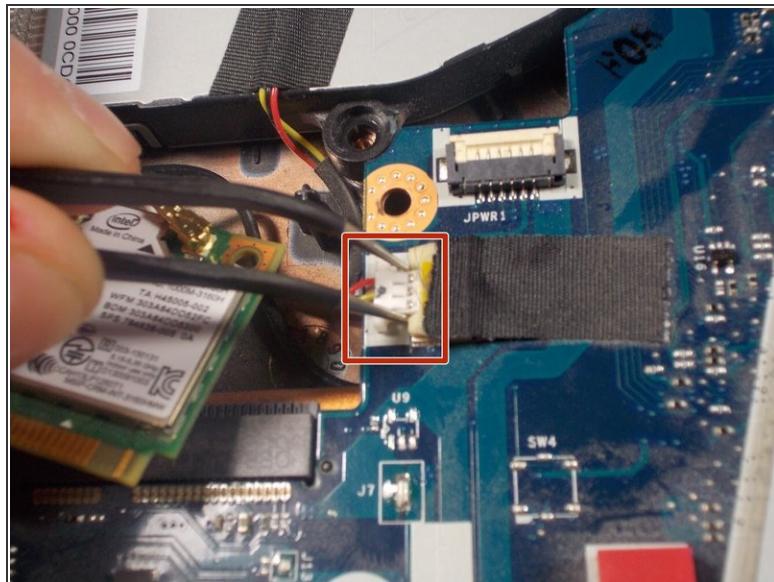

- Use tweezers to unplug the wire connecting the fan to the motherboard.

## Step 7



- Use a JIS #00 screw bit to remove the marked screws around the CPU fan.
- Carefully remove the CPU fan.

To reassemble your device, follow these instructions in reverse order.