



Acer Aspire E5-571-58CG Touchpad Replacement

This guide will show you how to remove and replace your Acer Aspire E5-571-58CG's touchpad.

Written By: Daniel Mello



INTRODUCTION

A broken touchpad may interfere with your ability to use the laptop, and it may need to be replaced. This guide will help you through this process.

TOOLS:

- [JIS #000 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Metal Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [1.5 mm Flathead Screwdriver \(1\)](#)


Step 1 — Keyboard



ⓘ Make sure laptop is upright.


- Pry the keyboard cover off with the plastic opening tool.

Step 2

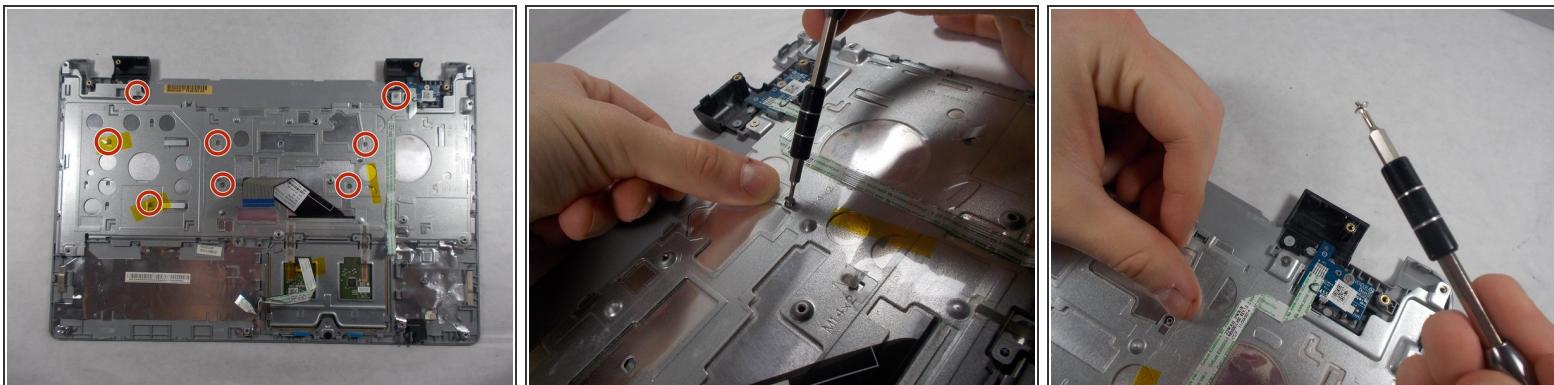


- Flip the keyboard cover upside down.
- Use the JIS #000 screw bit to remove the marked M1.4 x 2 mm screws from the back of the metal panel.

Step 3

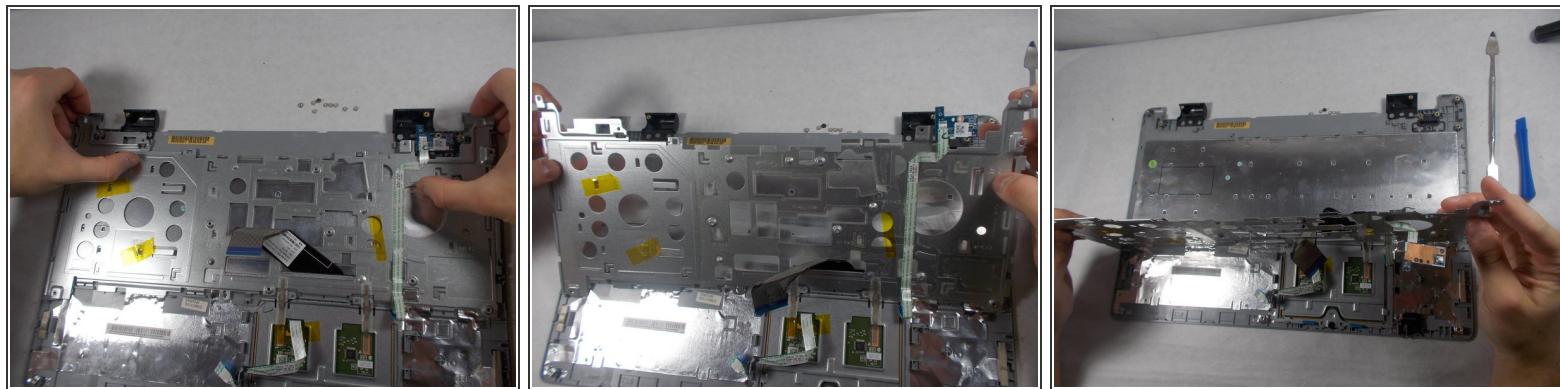


- Push the metal panel forward to unlock it from plastic holders on both sides.
- Lift the metal panel up and peel it back to expose the keyboard component.

Step 4

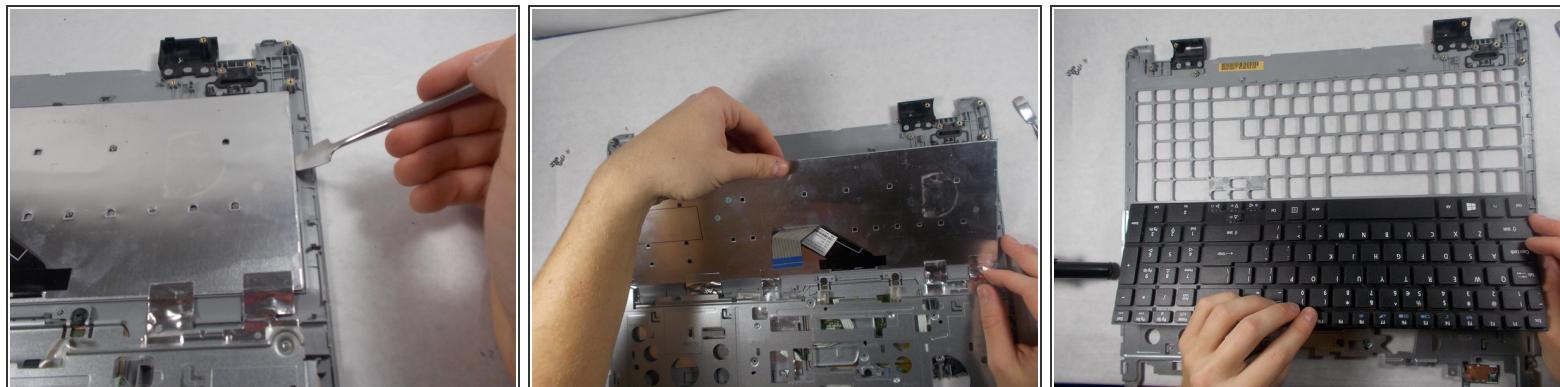

- Use the metal spudger to lift the keyboard component out of the metal panel.


Step 5 — Touchpad

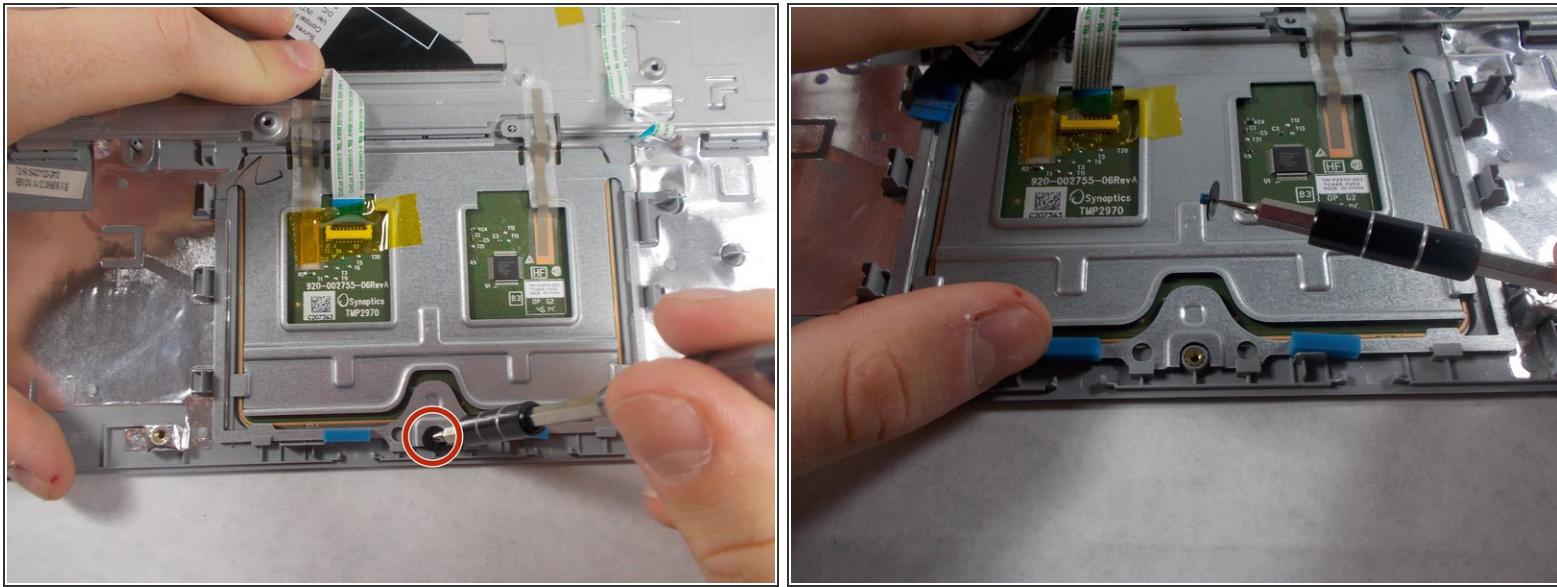

(i) Make sure you have removed the keyboard before attempting to remove the touchpad.


- Use a 1 1/2 mm flathead screw bit to remove the black screw at the bottom of the panel.

Step 6

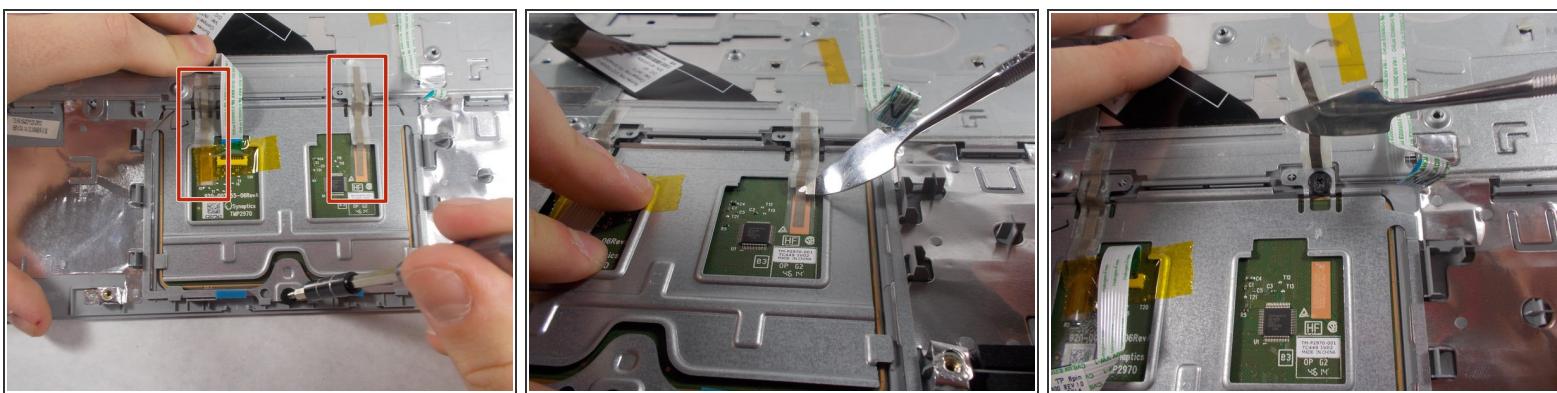


- Peel back the marked strips with the metal spudger.

Step 7

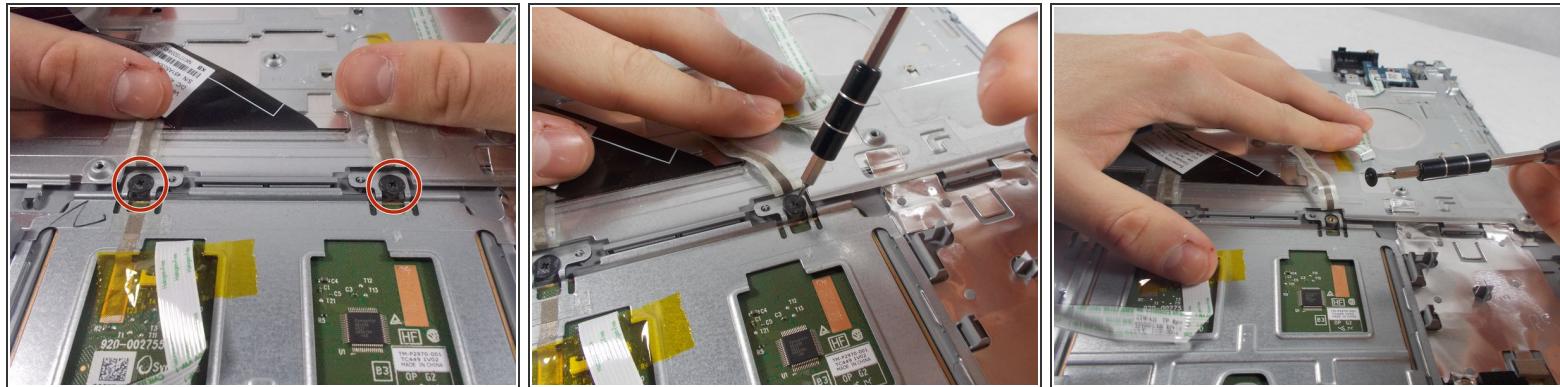

- Use a 1 1/2 mm flathead screw bit to remove the two black screws at the top of the panel.

Step 8

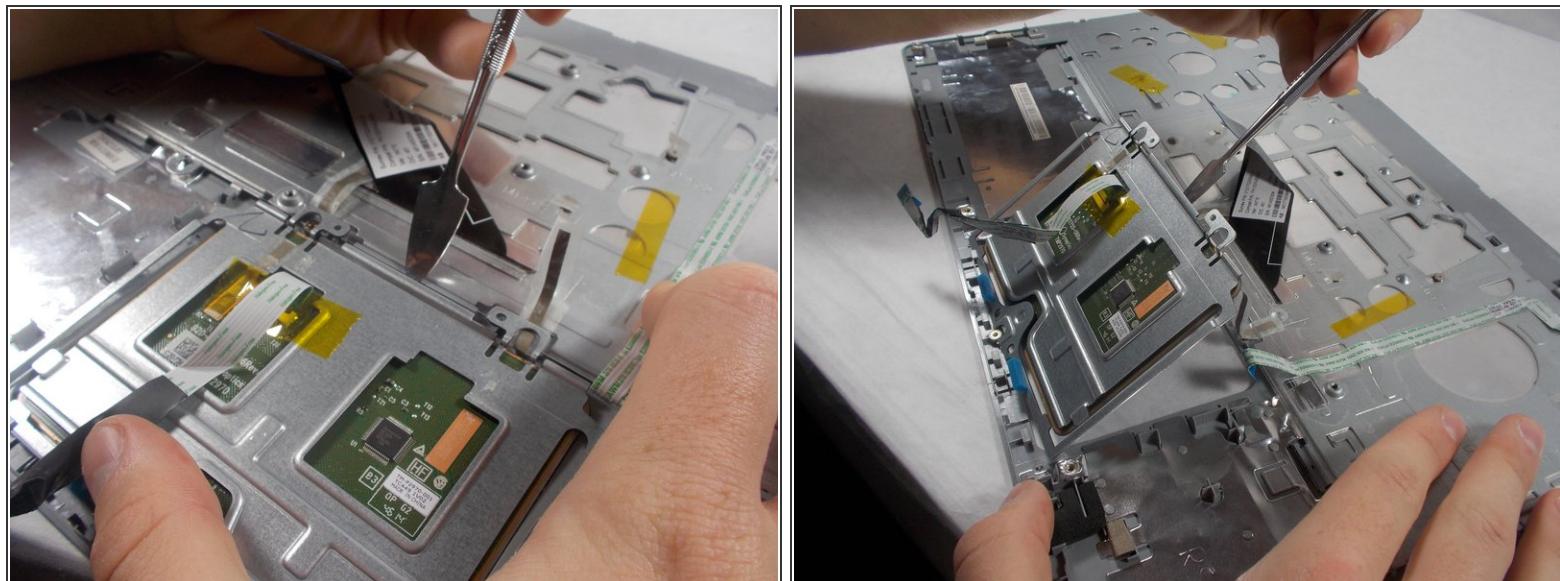

- Lift the touch pad out of the metal panel with a metal spudger.

To reassemble your device, follow these instructions in reverse order.