



# Acer Aspire E5-573G RAM Replacement

Guide on switching out the RAM on the Acer Aspire E5-573G

Written By: Alex Bahm




## INTRODUCTION

Guide on switching out the ram on the Acer Aspire E5-573G. Useful for replacing faulty ram, adding a new stick of ram, or upgrading RAM.

### TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Picks set of 6 (1)


## Step 1 — Optical Drive

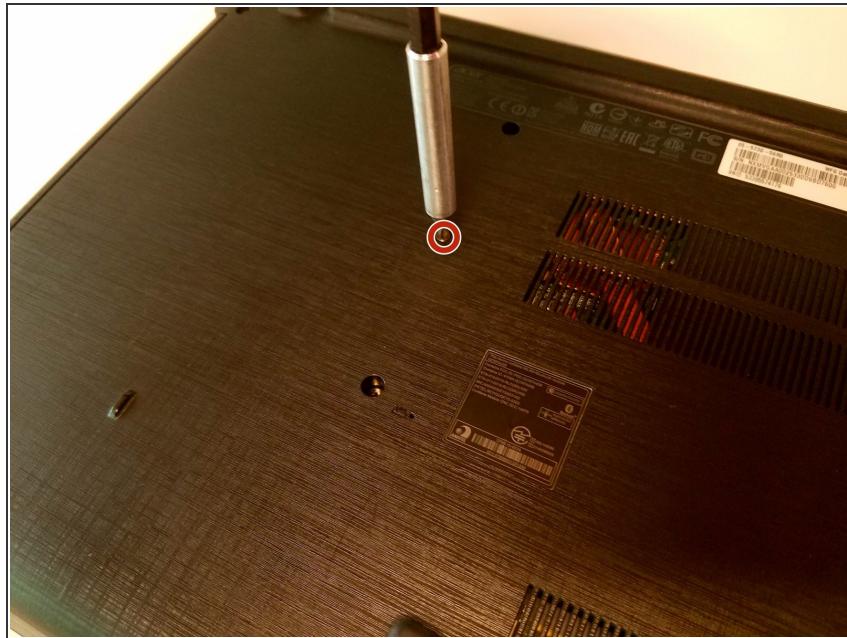

**⚠** Ensure your device is OFF before beginning this procedure.


- Unscrew the 5 mm Phillips head screw holding the drive in place.

## Step 2

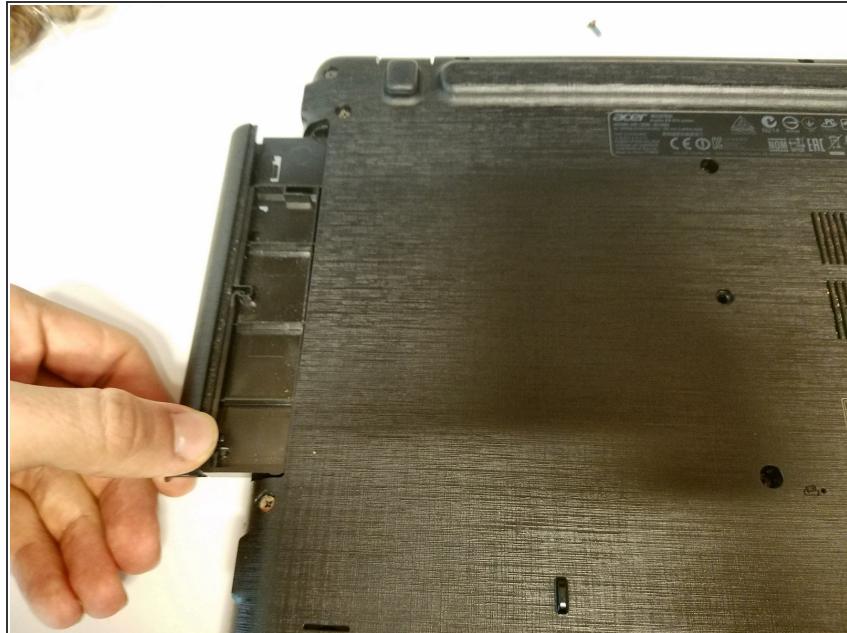


- Pull out the disk drive.

## Step 3 — RAM

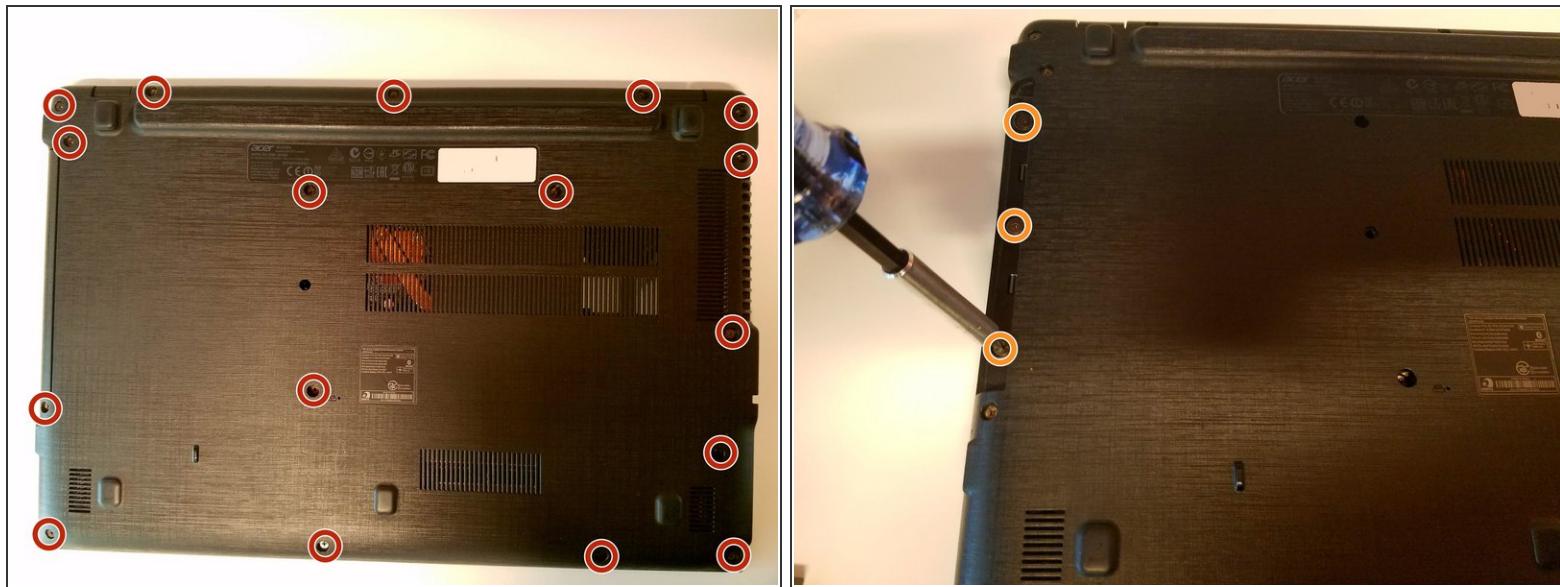


- Unscrew all 17 (5mm) Philips head screws from the bottom.
- Unscrew the 3 (2.5mm) Philips head screws underneath the optical drive.

## Step 4

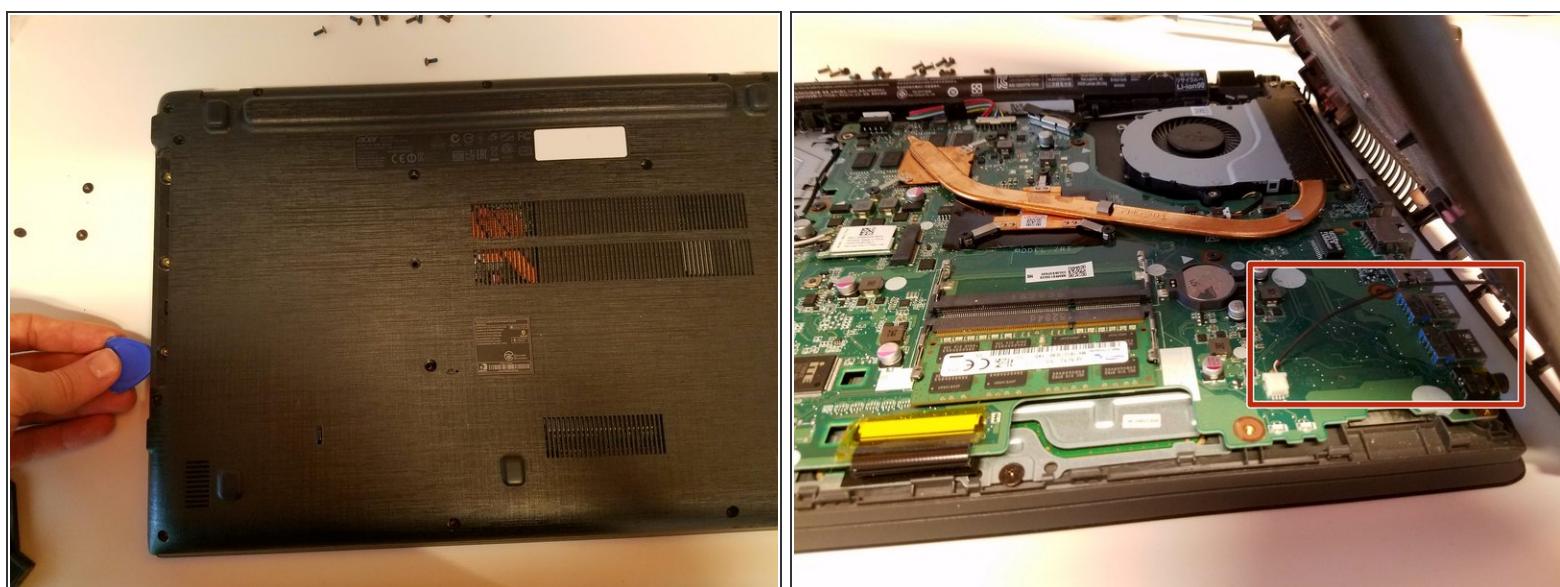

- Run a pick around the edge of the laptop (between the two parts) to open it.
- Lift the left side of the case up and unplug the speaker cable before fully taking the bottom off.

## Step 5

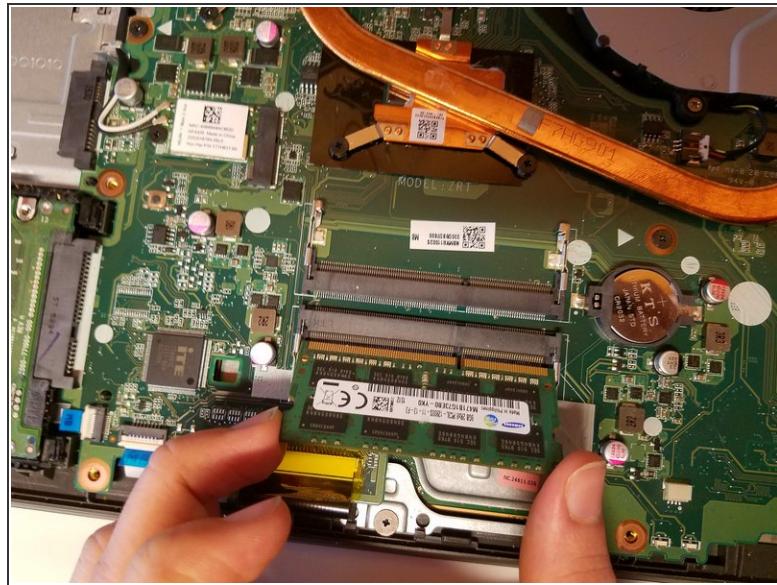

- Release the two holding pins.
- Pull out the ram.

To reassemble your device, follow these instructions in reverse order.