




Acer Aspire M5-583P-9688 Power Jack Replacement

This guide will show step by step how to replace a power jack for an Acer Aspire M5.

Written By: Joey Freeman

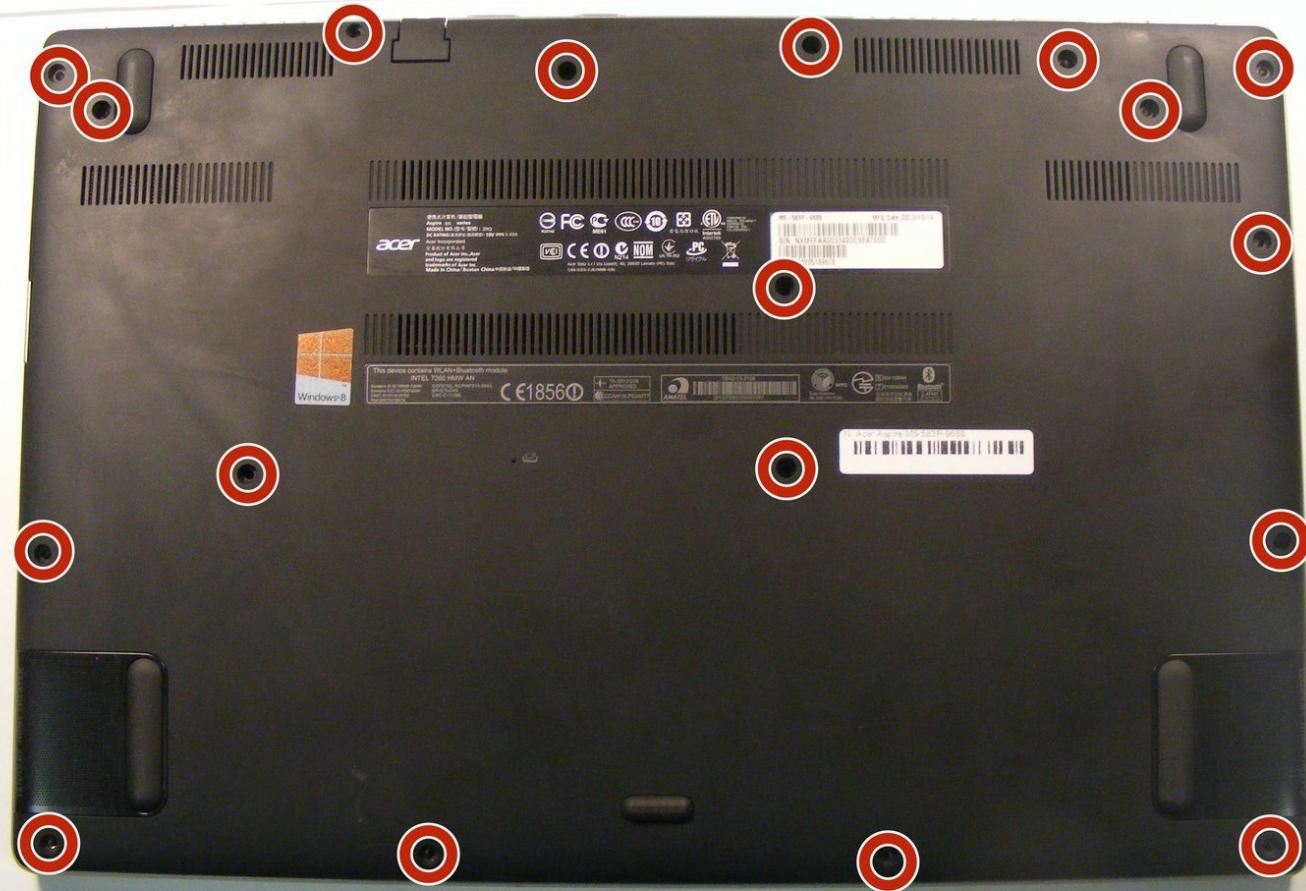

This document was generated on 2019-10-14 06:25:06 PM (MST).

INTRODUCTION

In this guide, you will be replacing the power jack, which is independently secured without the use of any internal screws.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Power Jack




- Use a Phillips #1 screwdriver to remove all eighteen 2.12 mm screws from the back plate of your Acer Aspire.

Step 2



- Use the spudger to remove the back plate in the highlighted area to carefully pop out the back plate.

Step 3

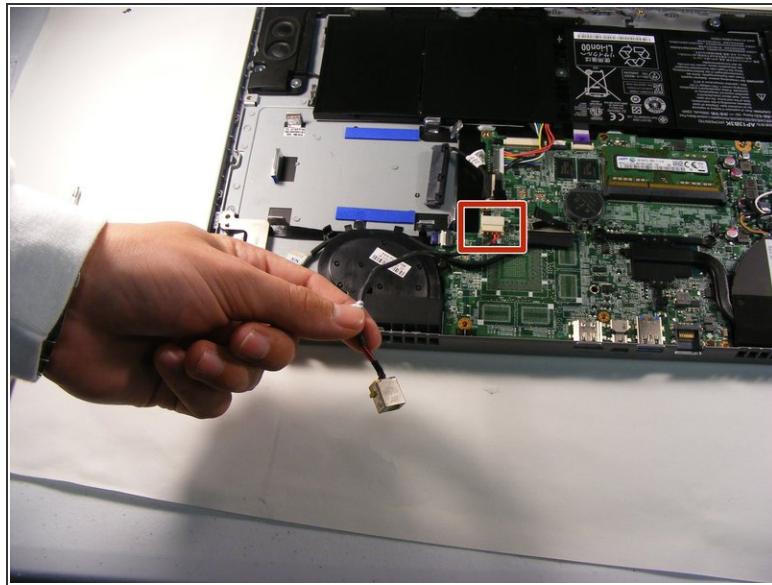

- Unplug the power jack from the receptor port on the motherboard, highlighted in red.
- Remove the power jack from designated area on the side of the computer, highlighted in orange.

To reassemble your device, follow these instructions in reverse order.