



Acer Aspire One 522 Battery Replacement

This shows how to replace the device's battery

Written By: Claudio Felix



Step 1 — Turn the netbook upside down



- With the screen closed, turn the netbook upside down on a table.

Step 2 — Unlock the battery



- Unlock the battery by sliding the indicated lock to the right. A red indication will show it is unlocked.

Step 3 — Release and remove the battery



- Slide and hold the lock to the left to release the battery.
- Pull the battery out.

To reassemble your device, follow these instructions in reverse order.