


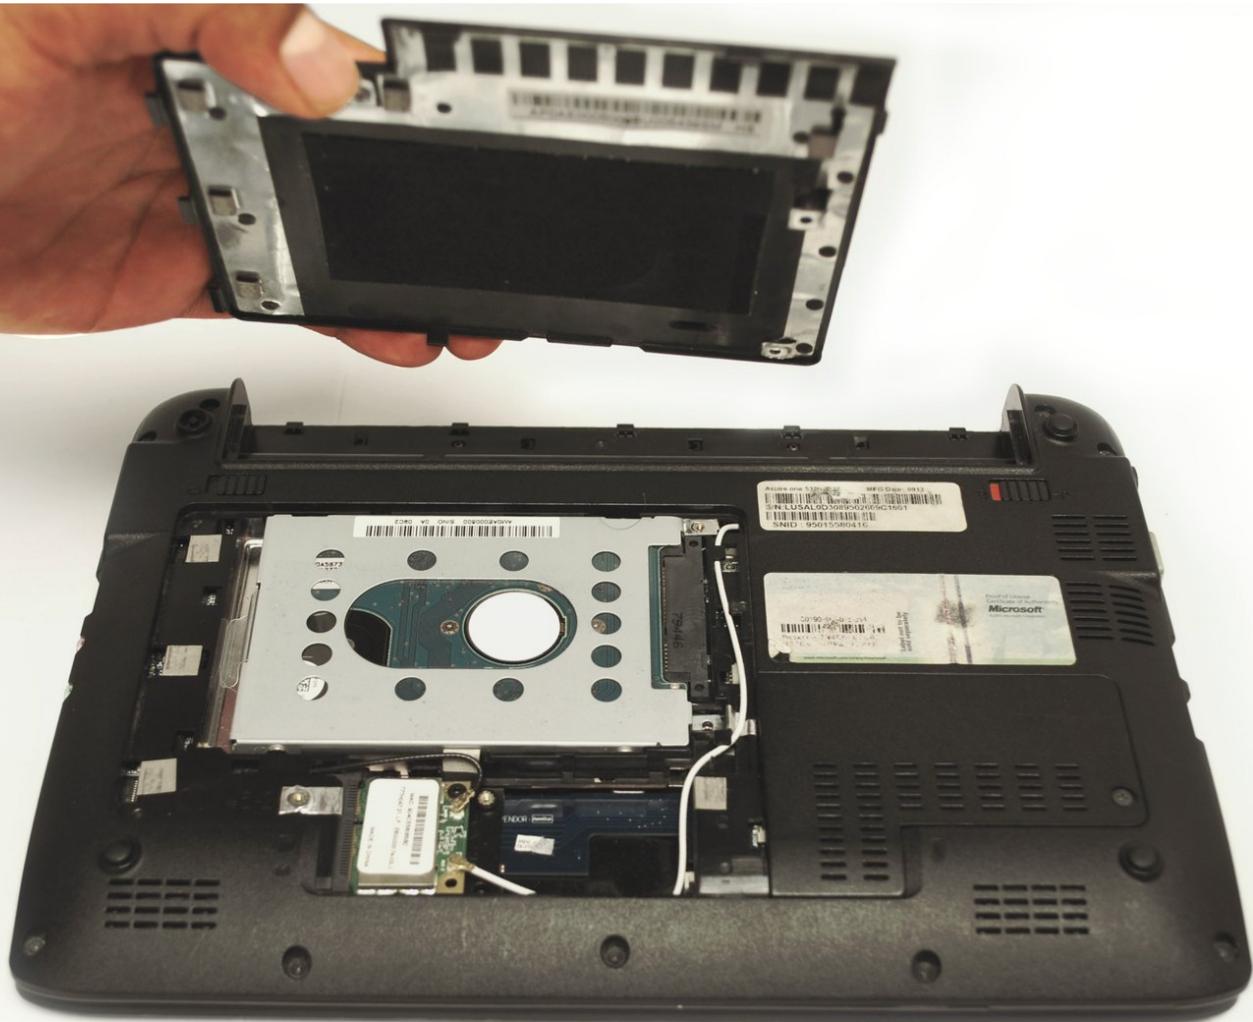

Acer Aspire One 532h-2527 Back Plate Replacement

This guide will show how to remove the large back plate for the Acer Aspire One 532h-2527.

Written By: Jair Burgos



INTRODUCTION

This guide will show how to remove the back plate on your netbook. The removal of the plate is necessary to reach a majority of your netbook's internal components.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery



- Press the power button to turn off the netbook.

Step 2



- Place the netbook bottom-side-up on a flat surface.
- Locate the unlock latch on the top right corner of the back.

Step 3




- To unlock the battery, slide the lock latch in the direction indicated by the unlocking icon. You should see the orange indicator which means that the latch is unlocked.

Step 4



- On the opposite side, slide and hold the release latch.
- Gently slide the battery out.

Step 5 — Back Plate

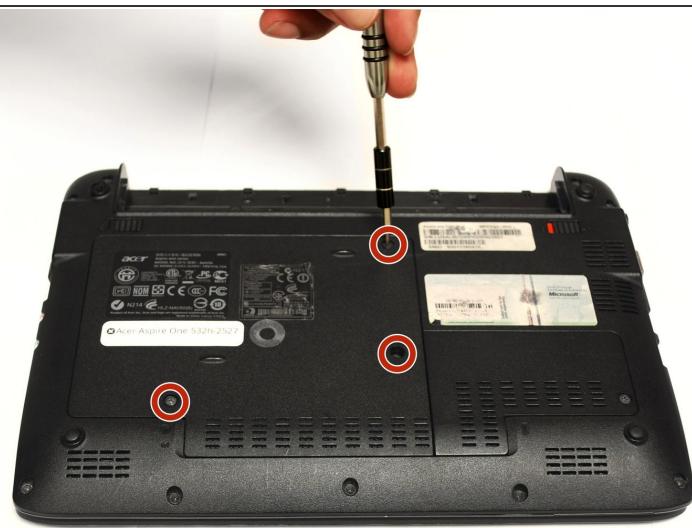

- Use a #0 Phillips screwdriver to remove the three 6mm screws from the larger back plate.

Step 6



- Use the plastic opening tool on the recessed notch at the bottom of the larger plate to gently lift the plate.

Step 7



- Once the plate becomes unhinged, gently rotate the plate to take it off of the device.

To reassemble your device, follow these instructions in reverse order.