



Acer Aspire One 532h-2806 Battery Replacement

This replacement guide is for the Acer Aspire One 532h-2806 in purple. This guide focuses on removing and replacing the battery.

Written By: Julie Paula



This document was generated on 2019-09-23 04:10:02 PM (MST).

INTRODUCTION

This guide describes how to replace the battery, which detaches from the laptop. This may need to be done if the laptop will not charge properly.

Step 1 — Battery



 Make sure the Acer Aspire One 532h-2806 is powered off and disconnected from any power outlets.


- Turn the device, upside down.
- The battery is located on the backside of the laptop. On this version, it is white.

Step 2



- Place your right thumb on the slide-release button under the battery on the right side.
- Slide the button to the right to unlock the battery. The slide-release will turn red.
- Place your left thumb on the slide-release button under the battery on the left side.
- Slide the button to the left. This will release the battery.

Step 3

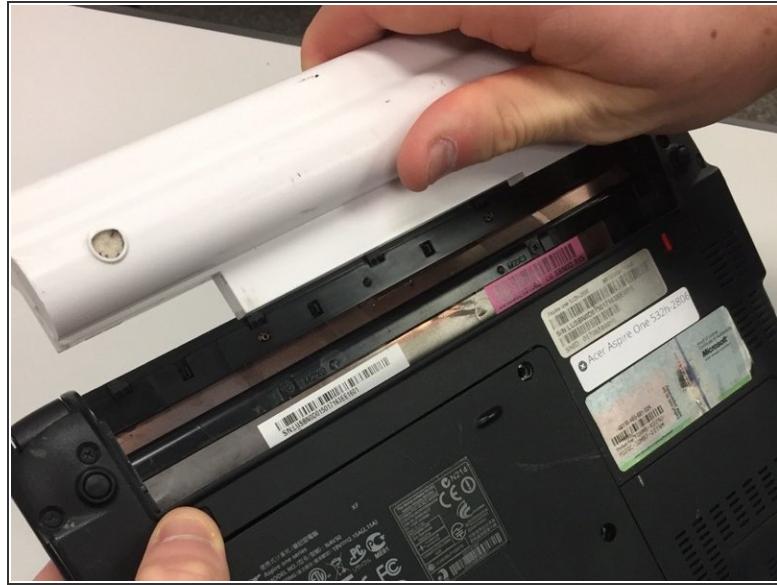

- Slide the battery away from the computer.

To reassemble your device, follow these instructions in reverse order.