



# Acer Aspire One 532h-2806 Keyboard Replacement

This guide will teach one how to replace the keyboard on the Acer Aspire One 532h-2806.

Written By: Julie Paula




## INTRODUCTION

In order to remove the keyboard from the Acer Aspire One 532h-2806, one will need a metal spudger tool. This guide may be needed if one needs to access the fan, headphones or USB jacks.

### TOOLS:

- Metal Spudger (1)


## Step 1 — Keyboard

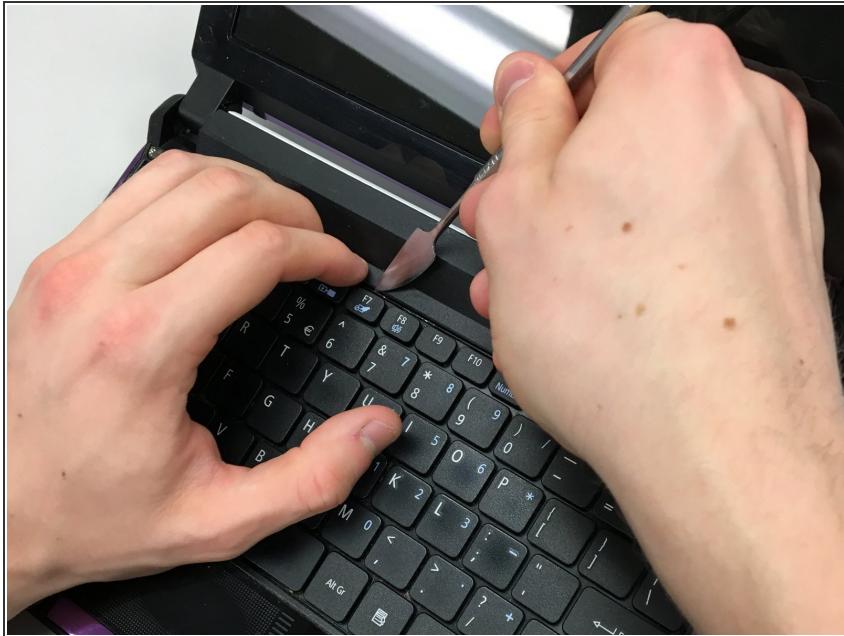

! Make sure the laptop is turned off and the battery is removed.

- Above the top row of the keys, locate three plastic latches.

## Step 2

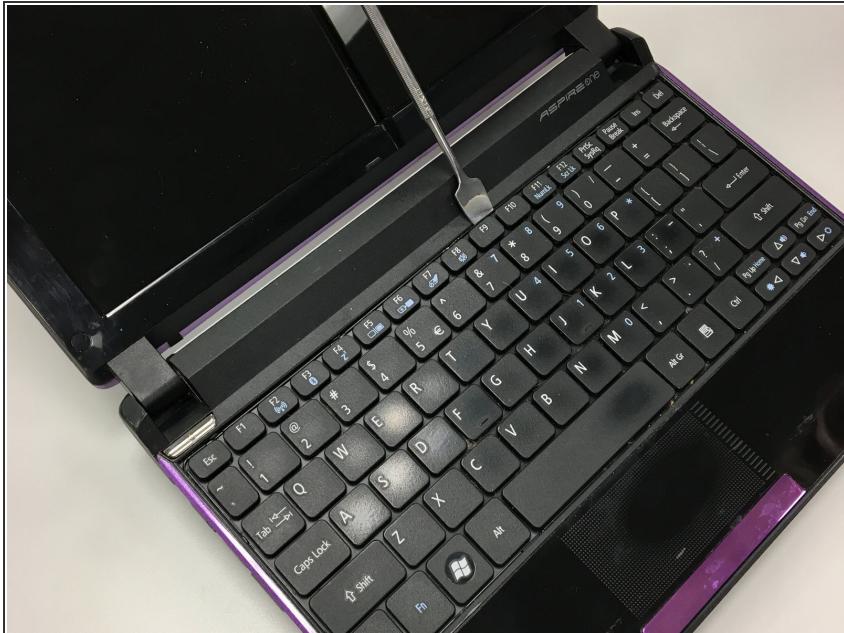

- Use the metal spudger to press each tab. The keyboard should release.

i Slide the spudger, so that the tabs do not reset after pressing each one.


## Step 3



- Gently lift the keyboard up.

**⚠** The keyboard ribbon cable is still attached to the motherboard.

## Step 4

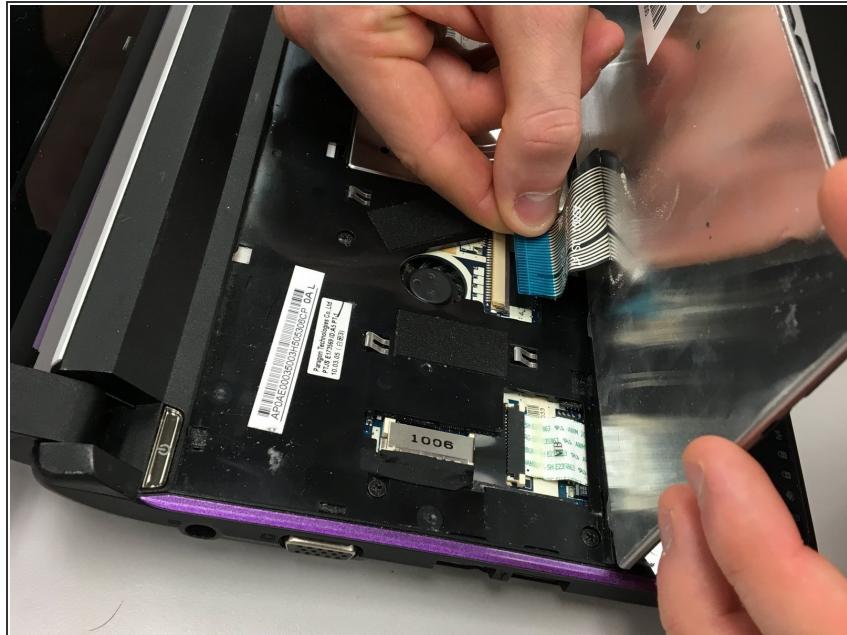

- Carefully unplug the connector sticker on the back of the keyboard.

**⚠** Be gentle, do not force it out.

## Step 5



- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.