



Acer Aspire One 532h-2806 Screen Replacement

This guide, will walk through the necessary steps to remove the screen from the Acer Aspire One 532h-2806.

Written By: Julie Paula



This document was generated on 2019-10-04 12:55:16 PM (MST).

INTRODUCTION

This guide will teach one how to fully remove the screen from the Acer Aspire One 532h-2806. A Phillips #0 Screwdriver and an opener tool is required to complete this guide. This guide may be needed if the screen is cracked and needs to be replaced.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Screen





 Turn the device off before beginning any replacements.

- Locate the two circular black stickers at the bottom corners of the laptop screen.
- Remove the stickers.


 Two 6mm Phillips Screws should now be visible.

Step 2

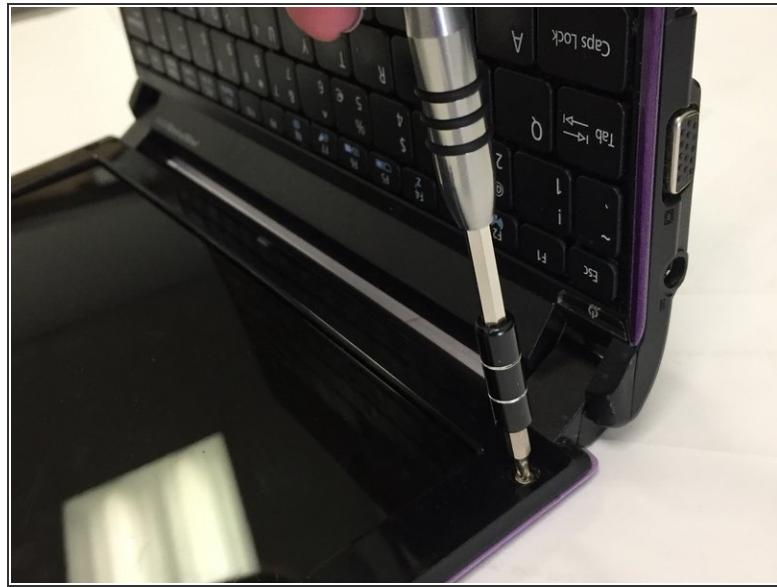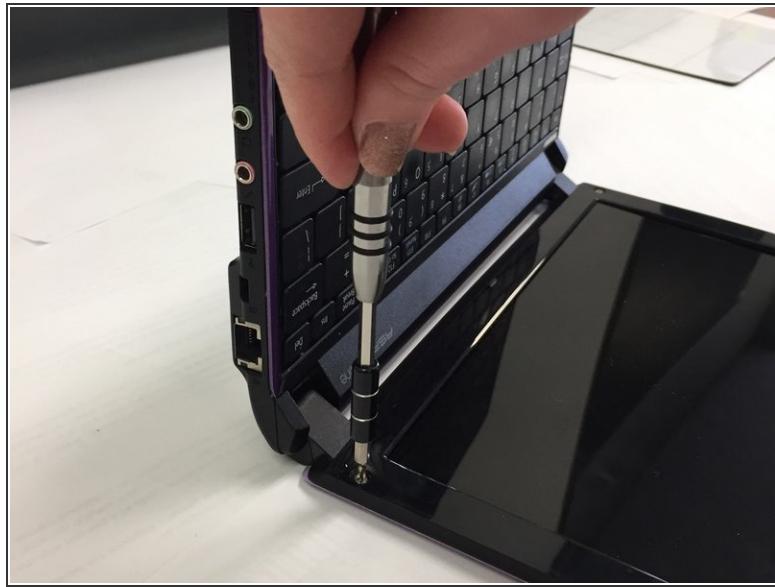


- Use a Phillips #0 Screwdriver to remove the two 6mm screws from the screen.

Step 3

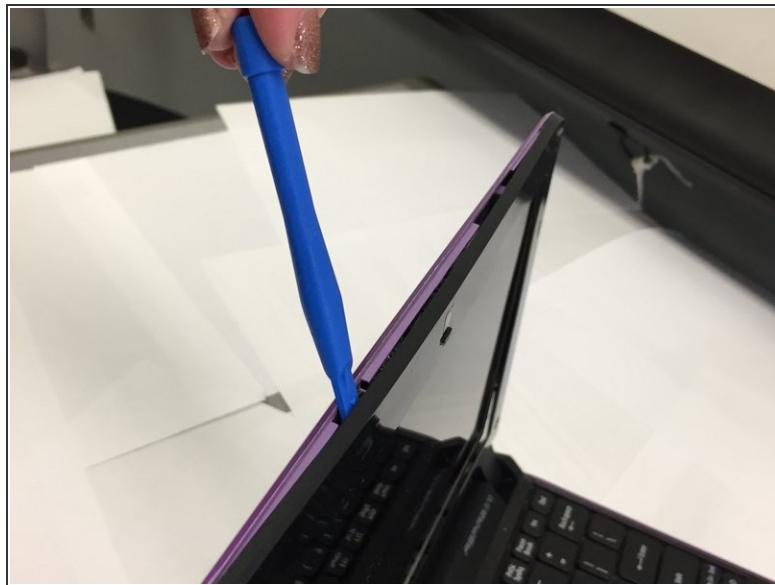

- Using the opener tool, remove the plastic cover, surrounding the screen.
- *i* It is normal to hear clicking sounds as the plastic cover is removed.


Step 4

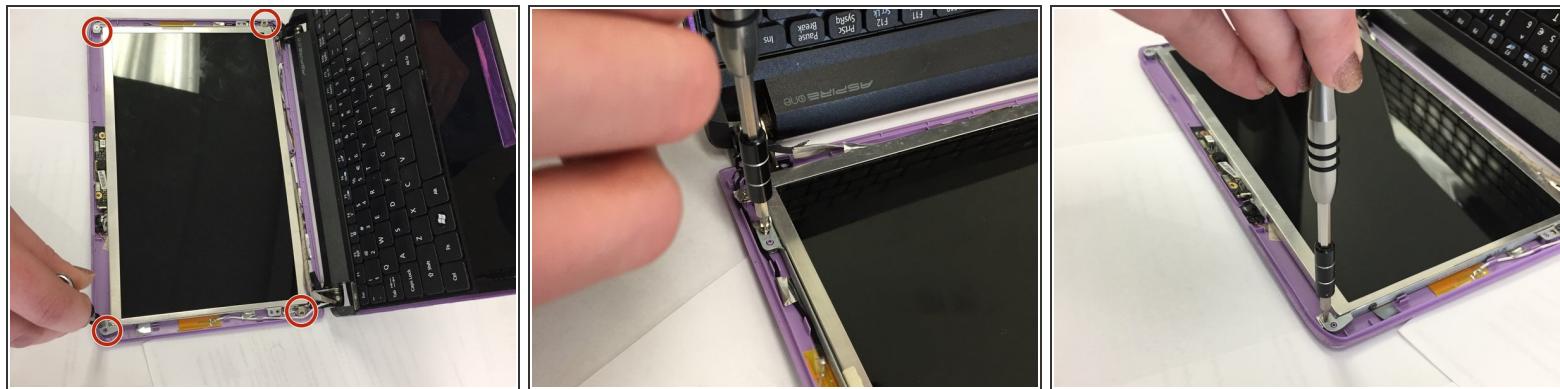

- Remove the four 6mm Phillips screws surrounding the screen.

(i) These are holding the screen in place. After the screws are removed, the screen should remove itself from the plastic outer cover.


Step 5

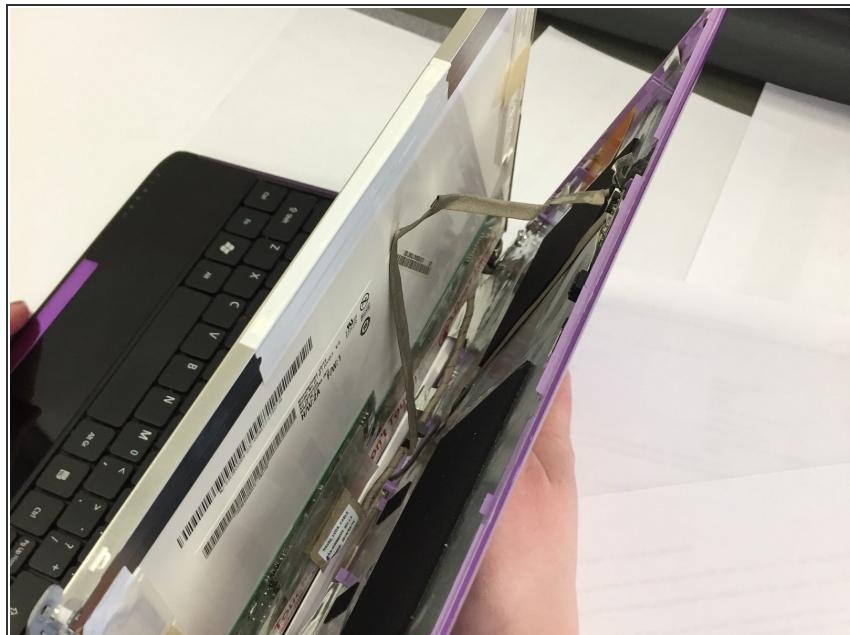

- Peel back the fuss cable from the outer laptop plastic cover.

 Be careful, not to yank or rip the cable, it should gently peel back.



Step 6

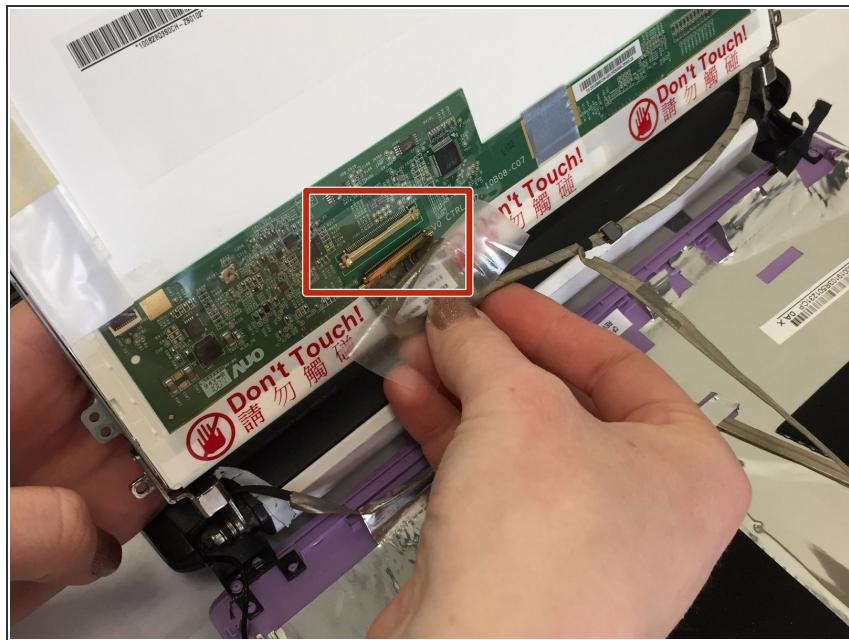

- Locate the ZIF (zero insertion force) Cable.
- Peel back any tape if necessary
- Carefully unplug it.



⚠ Do not pull hard, it should remove itself easily.

Step 7

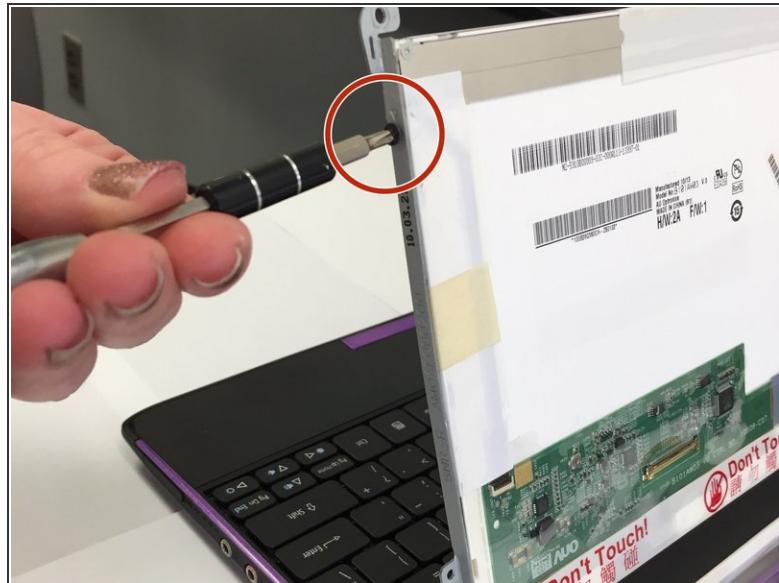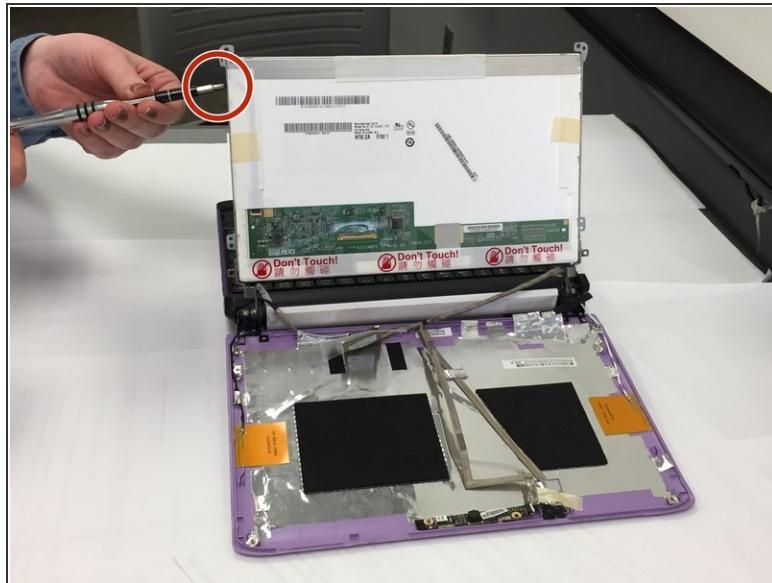

- Remove the two 6mm screws on each side of the screen with a Phillips #0 screwdriver.

Step 8

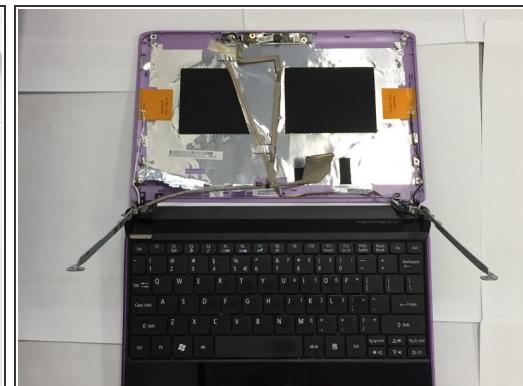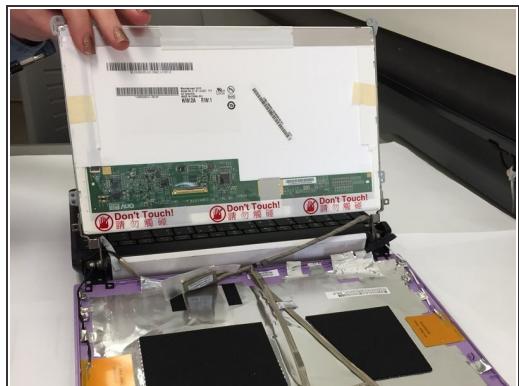

- Remove the screen.

To reassemble your device, follow these instructions in reverse order.