



# Acer Aspire One 722 Screen Replacement

If you need to replace the screen of your netbook due to a crack or dent, follow this guide on how to replace the screen on the Acer Aspire One 722.

Written By: Christian Barboza




This document was generated on 2019-09-24 07:45:32 AM (MST).

 **TOOLS:**

- Essential Electronics Toolkit (1)

## Step 1 — Battery

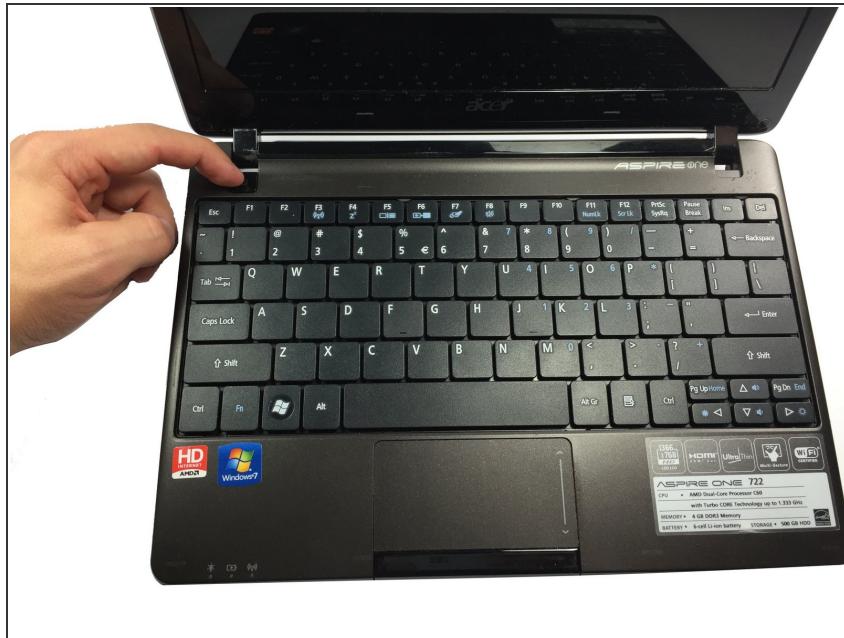

- Shut the netbook off (Power down netbook at top left corner).

## Step 2



- Close the netbook and flip it over so that the back is facing up.

## Step 3



- Slide the button below the battery to the right while simultaneously pulling the battery out.

## Step 4





- Remove the old battery and get the replacement battery.

## Step 5




- Check the thin grooves on the side of the battery entry and line the replacement battery up to that.

## Step 6 — Screen

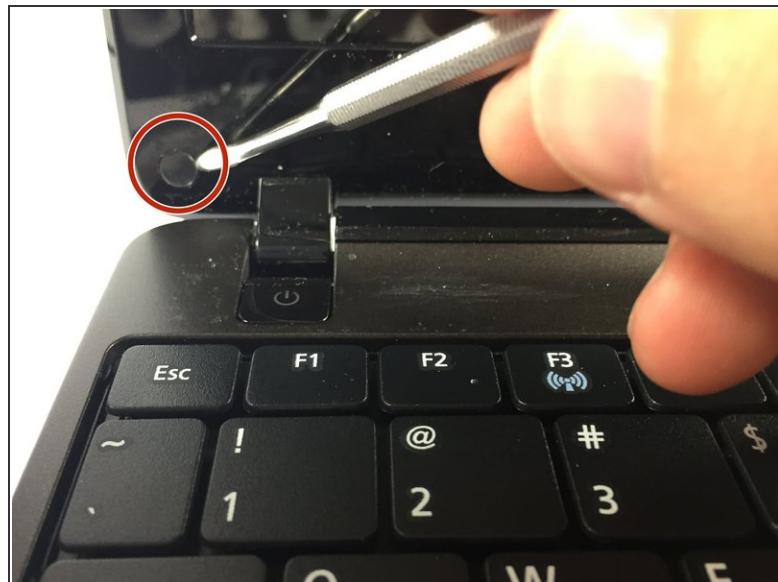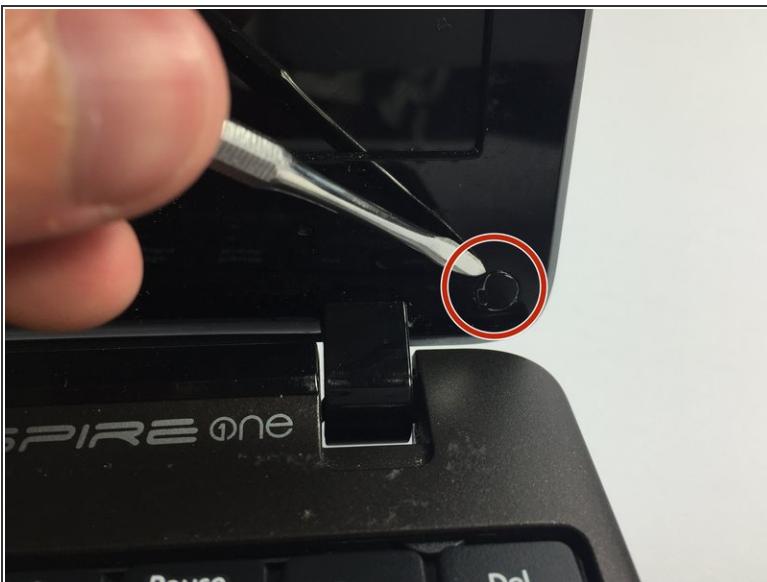

- Remove black rubber clip located on the bottom right and left of the netbook screen. Next, untighten the screws.

## Step 7

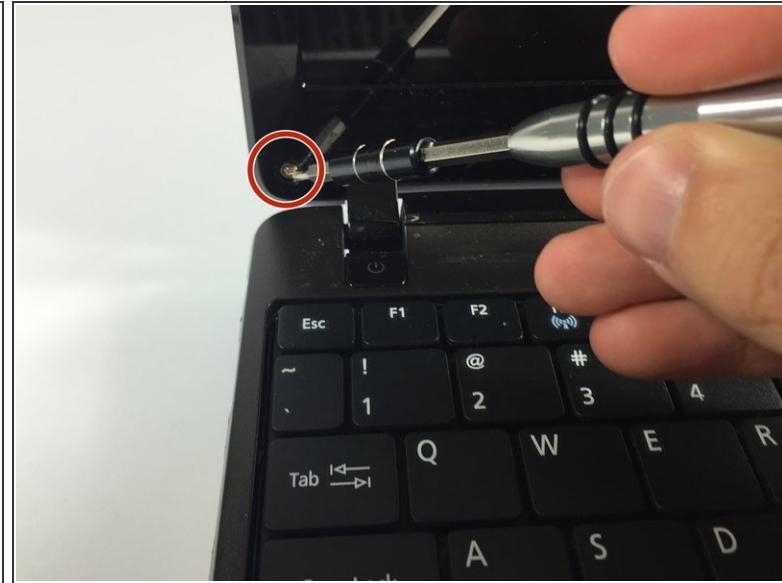

- Remove the screws under the black caps.


## Step 8



- Slowly separate the screen casing from the screen.

 Be careful when detaching the screen casing from the screen. If it is not done slowly it can break.

## Step 9

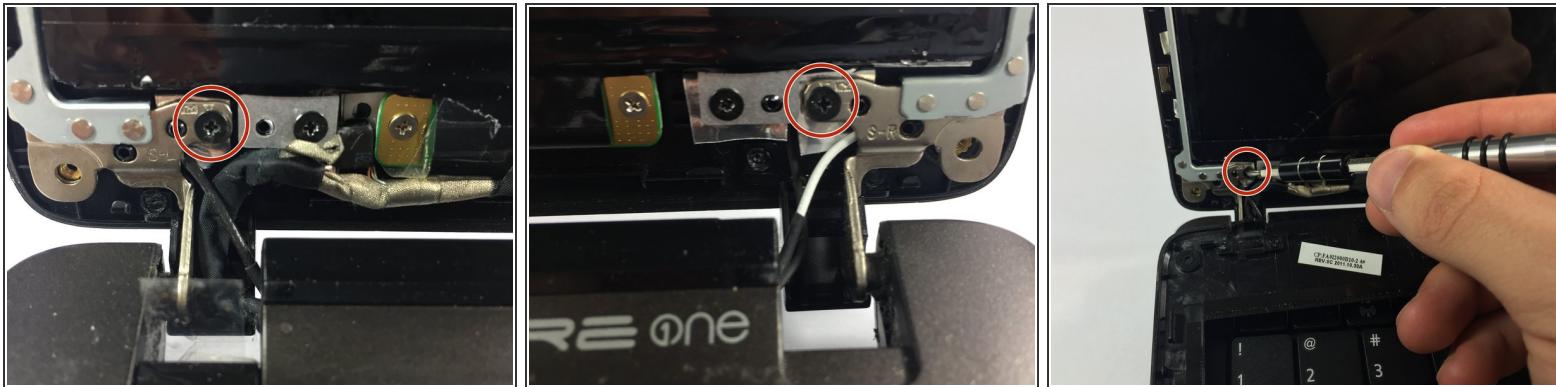

- Remove the screws located on the four corners of the screen.

## Step 10



- Remove the two bottom screws.

*(i)* Taking out these screws will allow you to remove the screen from its attachment.

## Step 11



- On the bottom left of the screen there is a cord attached. Remove the tape that is attached to the screen.

## Step 12



- On the green board, unscrew the two screens.
- Remove the board.

To reassemble your device, follow these instructions in reverse order.