



Acer Aspire One 751h-1948 Display Replacement

This guide will help you replace the display of your Acer Aspire One 751h-1948.

Written By: Chris Bolton



INTRODUCTION

This guide will help you replace the display of your Acer Aspire One 751h-1948.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Battery




- Close the laptop and flip it over to view the back of the laptop.

Step 2



- Unlock the right side of the battery by sliding the battery lock to the right. Then slide the left lock to the left and remove the battery.

Step 3 — Network Card

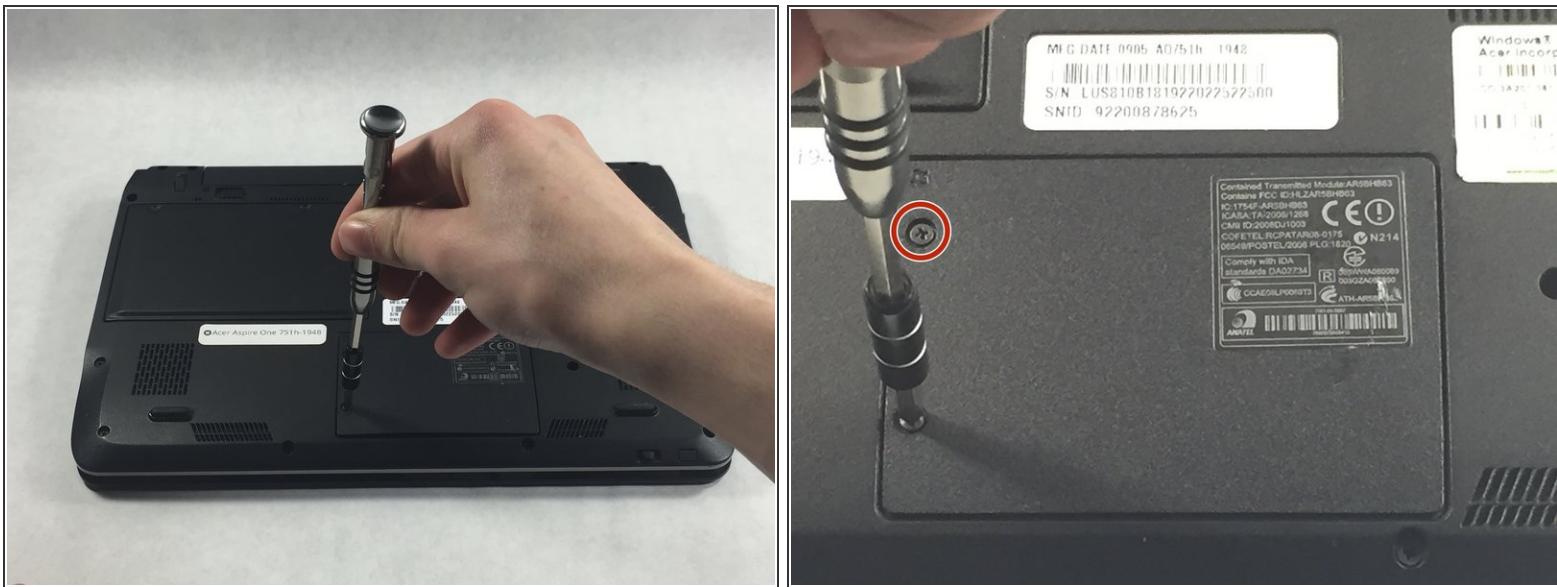

- Unscrew the two Phillips #0 (M2-L2.5 mm) holding down the network card panel.
- These screws don't come all the way out.

Step 4



- Unplug the two connecting cables by lifting them up. They should unclip easily.

Step 5



- Remove the screw Phillips #0 (M2-L3 mm) holding down the network card. Pull out the card.


Step 6 — Hard Drive



- Unscrew the Phillips 0# (M2 L2.5 mm) screw and remove the cover panel.


i These screws will not come out all the way.

Step 7

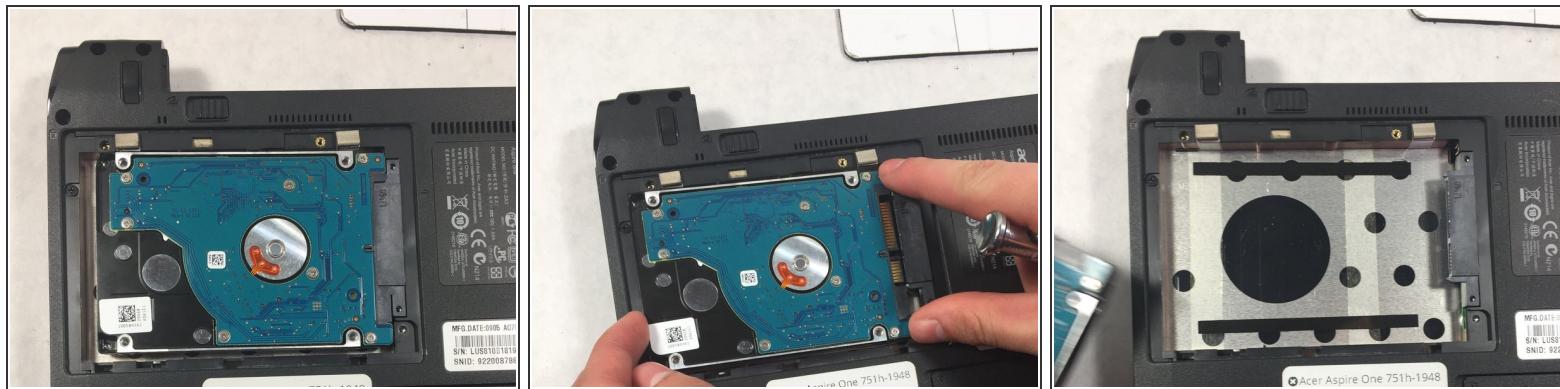


- Remove the hard drive by sliding it to the left and pull it out.

Step 8

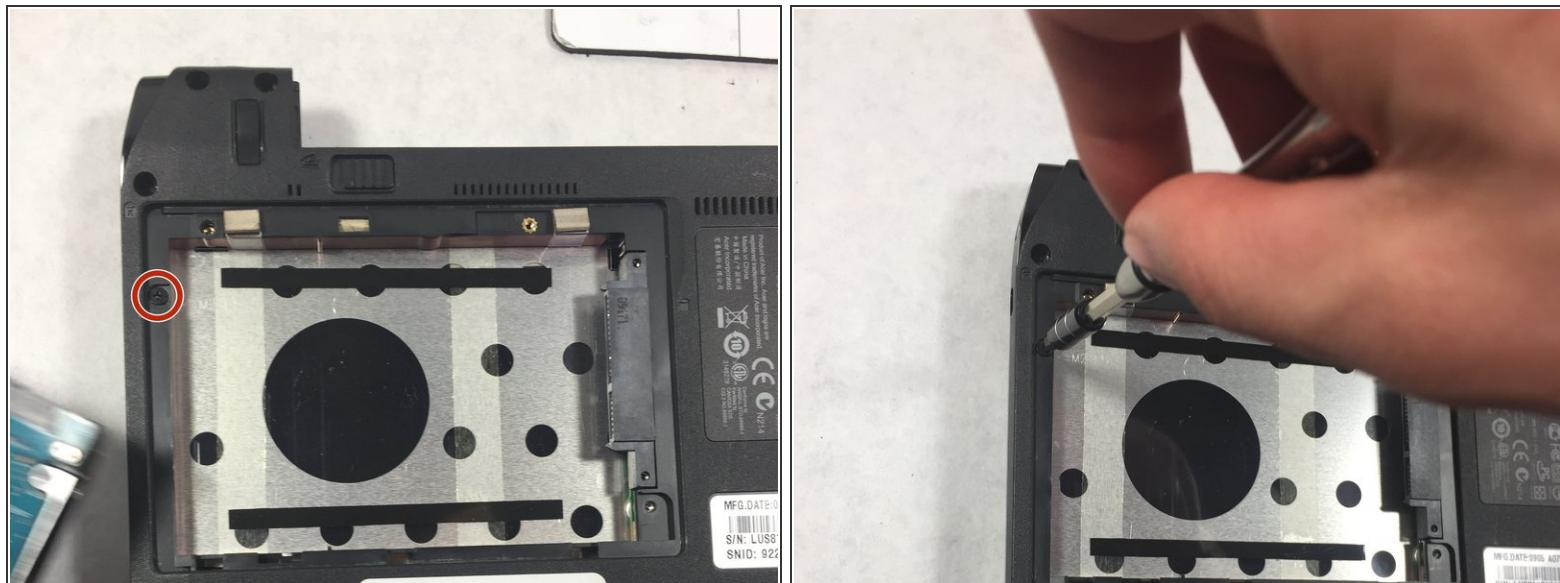

- Unscrew the Phillips #0 (M2-L2.5 mm) screws.


Step 9 — Keyboard

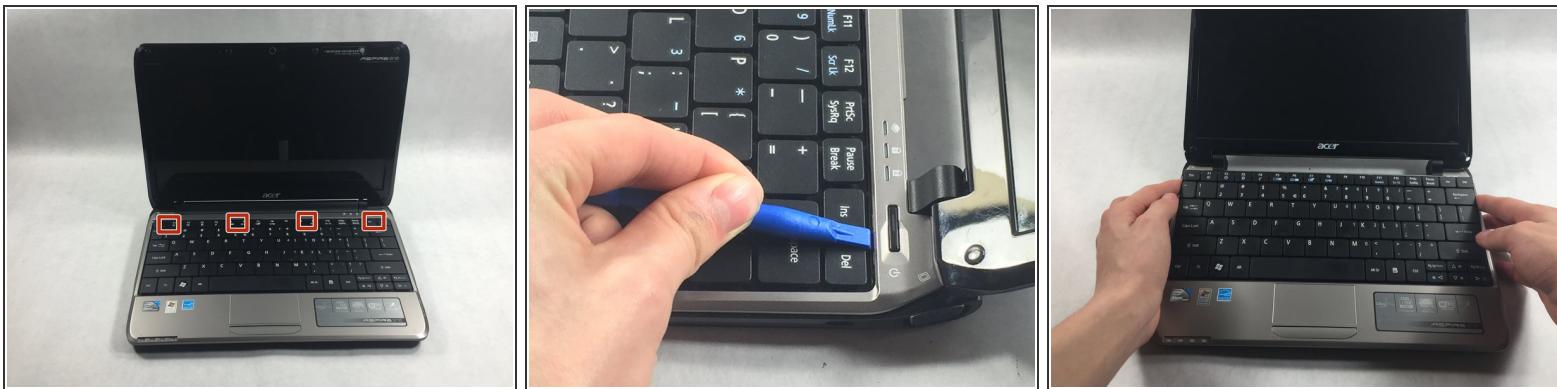

- Use the plastic opening tool to push in each of the four clips and carefully lift the keyboard.


 Don't lift the keyboard completely so that you don't damage the ribbon cable underneath.

Step 10

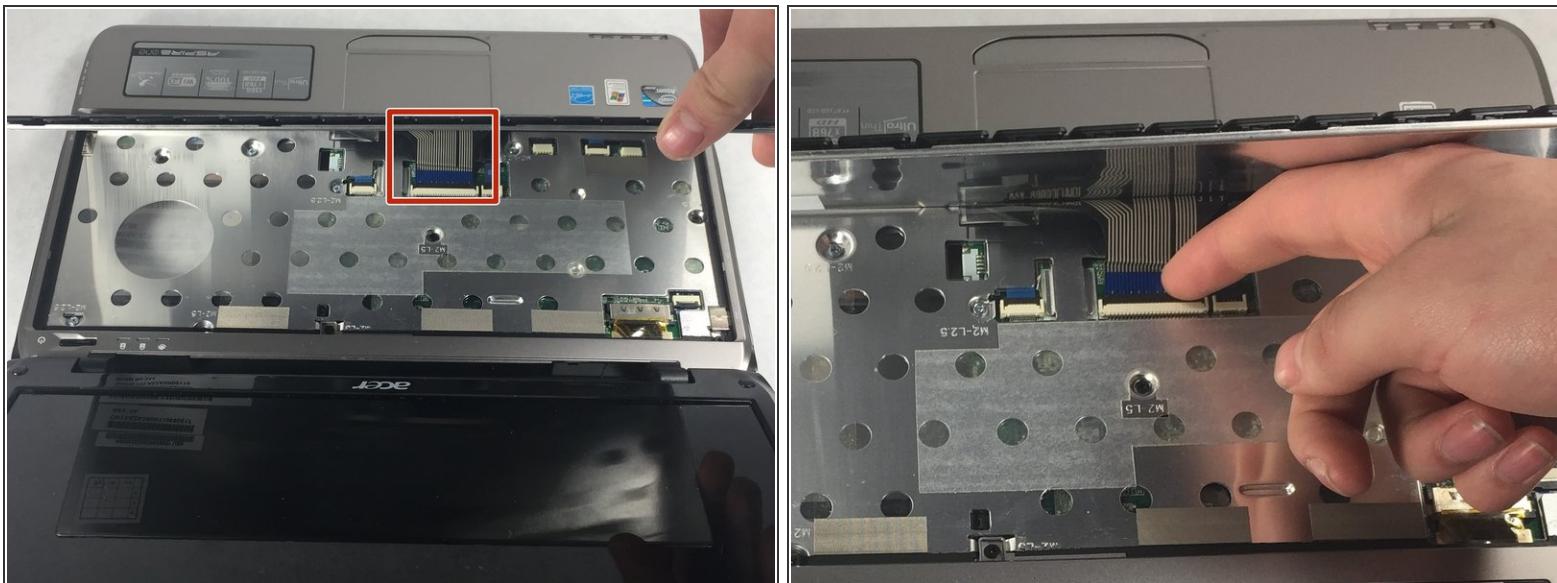

- When you remove the keyboard, be careful not to damage the ribbon cable that attaches it to the motherboard.
- Unplug the ribbon cable by gently lifting the black tab up. Then remove the cable.

Step 11 — Display

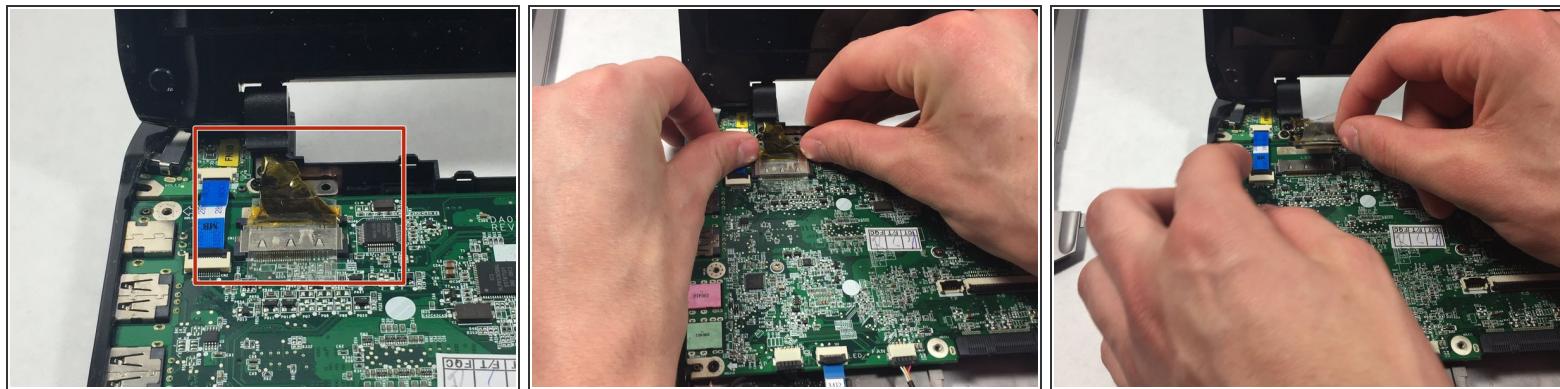

- Unplug the SCD cable

Step 12



- Use the spudger to remove all rubber pads covering the screws for the upper casing.
- Then unscrew all the Phillips #0 (M2-L5 mm) screws under rubber pads.

Step 13




- Separate the upper casing from the display.

Step 14



- Unscrew all the Phillips 0# (M2-L2.5 mm) on each side of the display.

Step 15

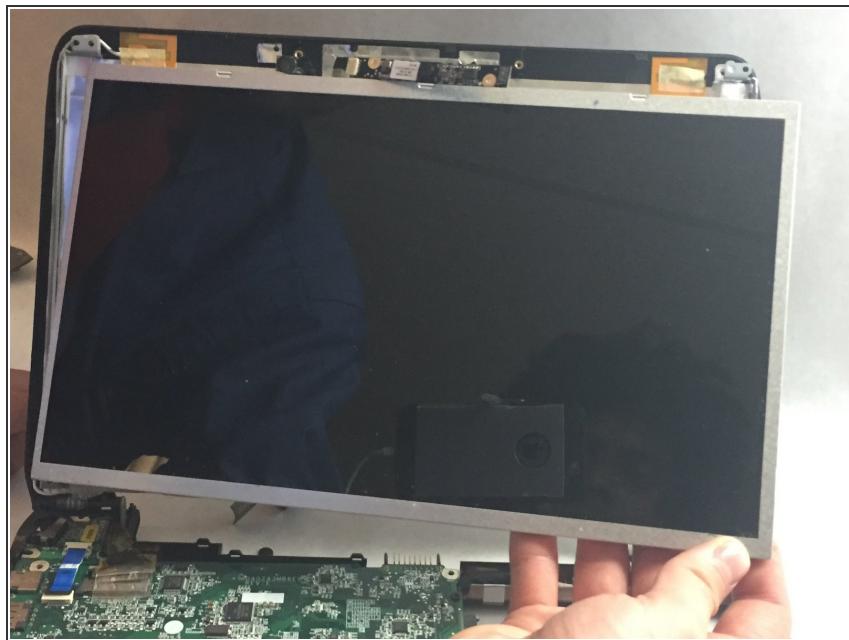

- Separate the screen from the metal frame that secures it to the upper casing and remove the screen.

⚠ Be careful, the display is very sensitive.

To reassemble your device, follow these instructions in reverse order.