




Acer Aspire One 751h-1948 Fan Replacement

Use this guide to replace the fan in the Acer Aspire One 751h-1948.

Written By: Chris Bolton

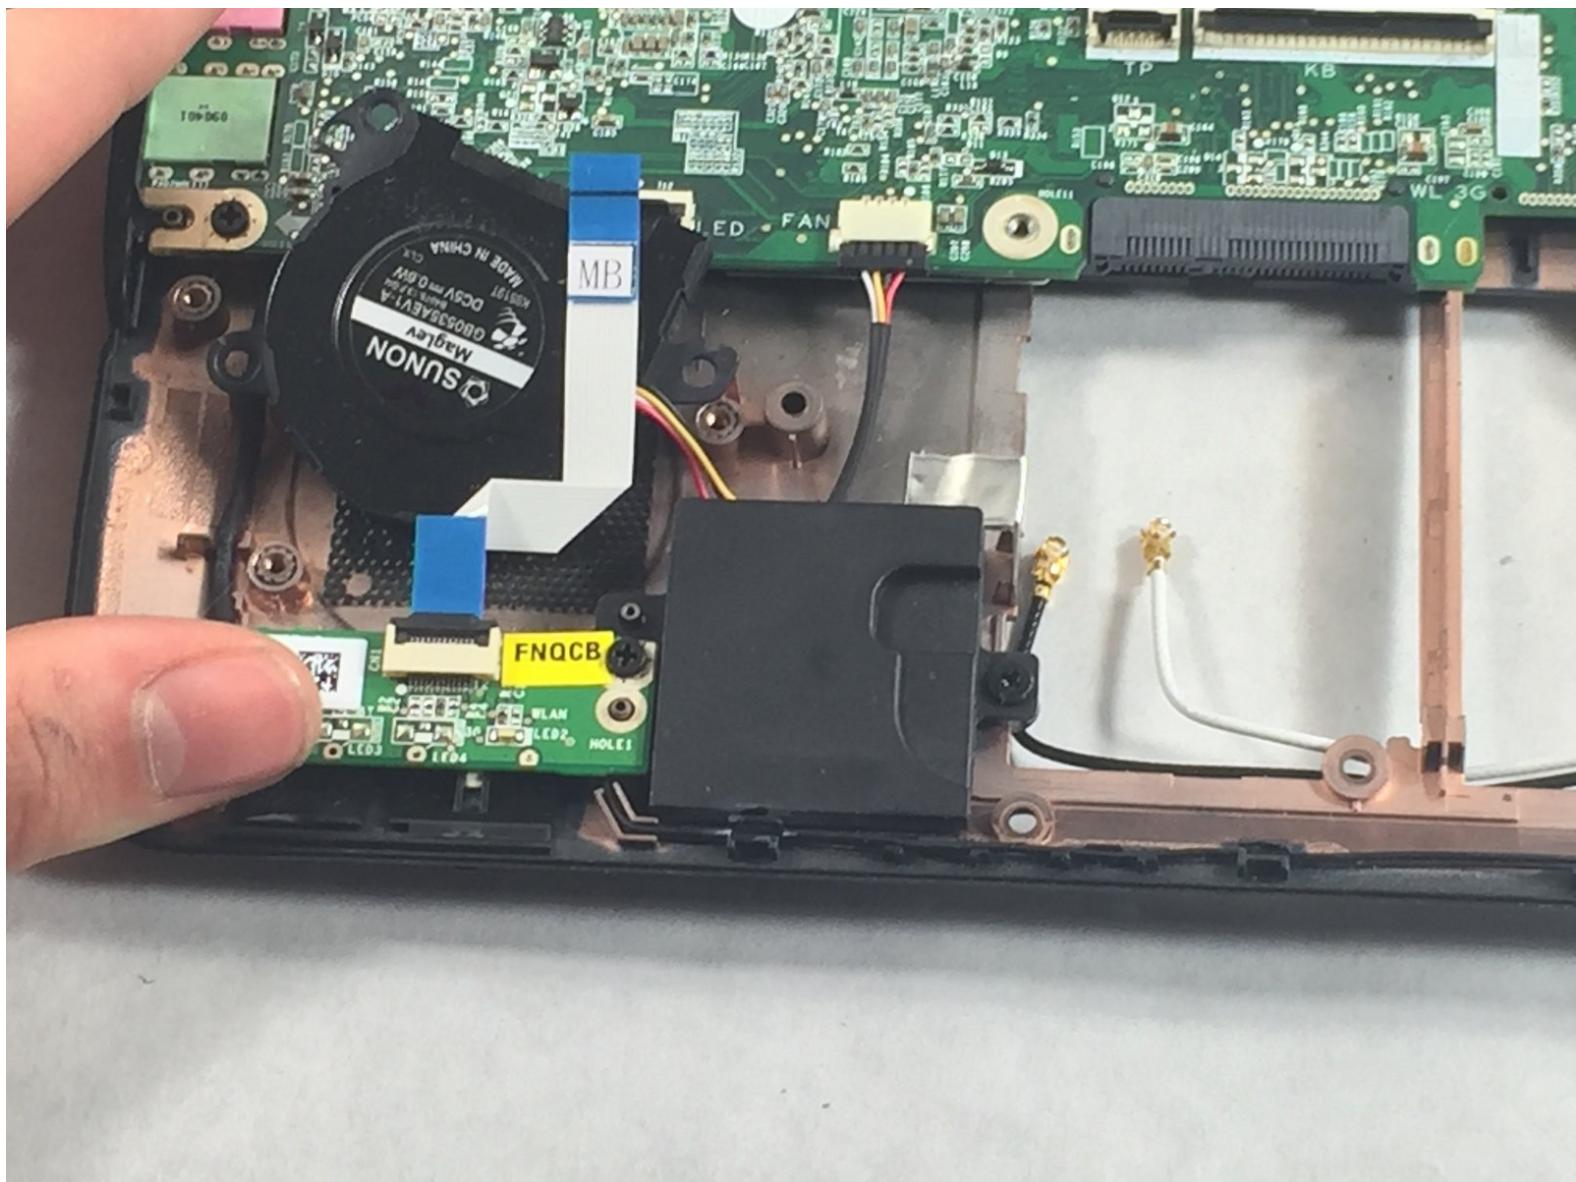

INTRODUCTION

Use this guide to replace the fan in the Acer Aspire One 751h-1948

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery




- Close the laptop and flip it over to view the back of the laptop.

Step 2



- Unlock the right side of the battery by sliding the battery lock to the right. Then slide the left lock to the left and remove the battery.

Step 3 — Network Card

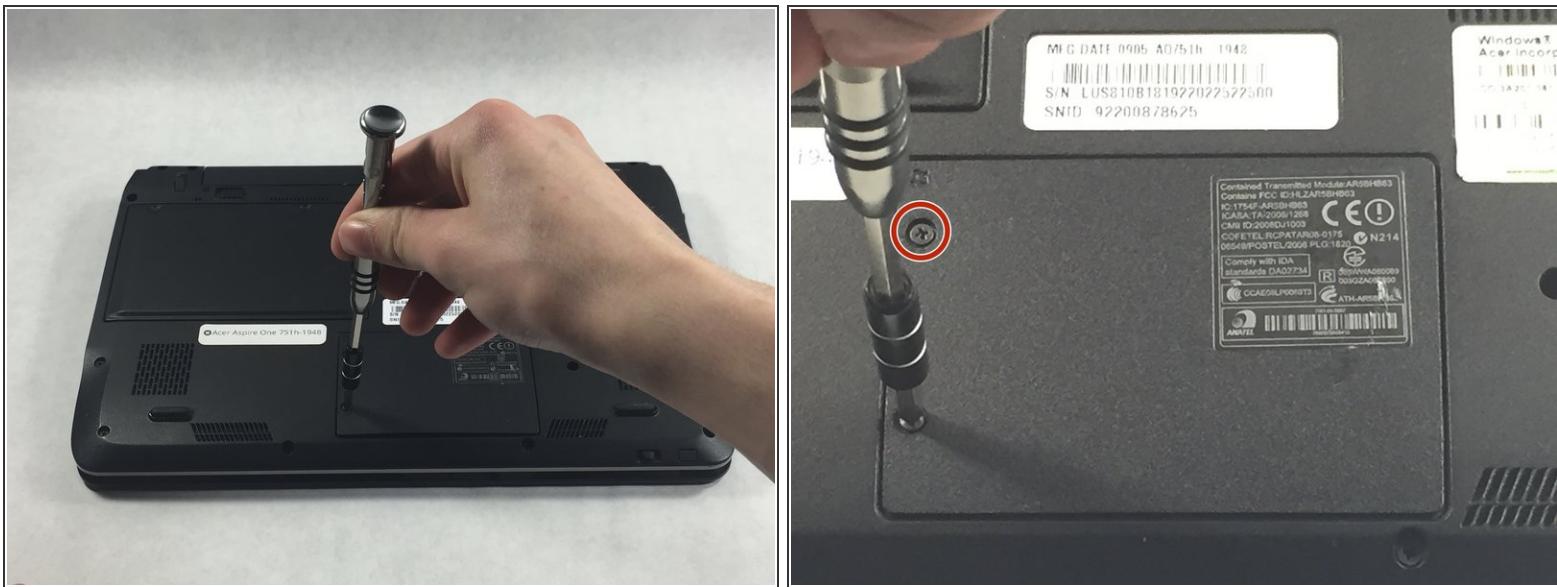

- Unscrew the two Phillips #0 (M2-L2.5 mm) holding down the network card panel.
- These screws don't come all the way out.

Step 4



- Unplug the two connecting cables by lifting them up. They should unclip easily.

Step 5



- Remove the screw Phillips #0 (M2-L3 mm) holding down the network card. Pull out the card.


Step 6 — Hard Drive



- Unscrew the Phillips 0# (M2 L2.5 mm) screw and remove the cover panel.


i These screws will not come out all the way.

Step 7

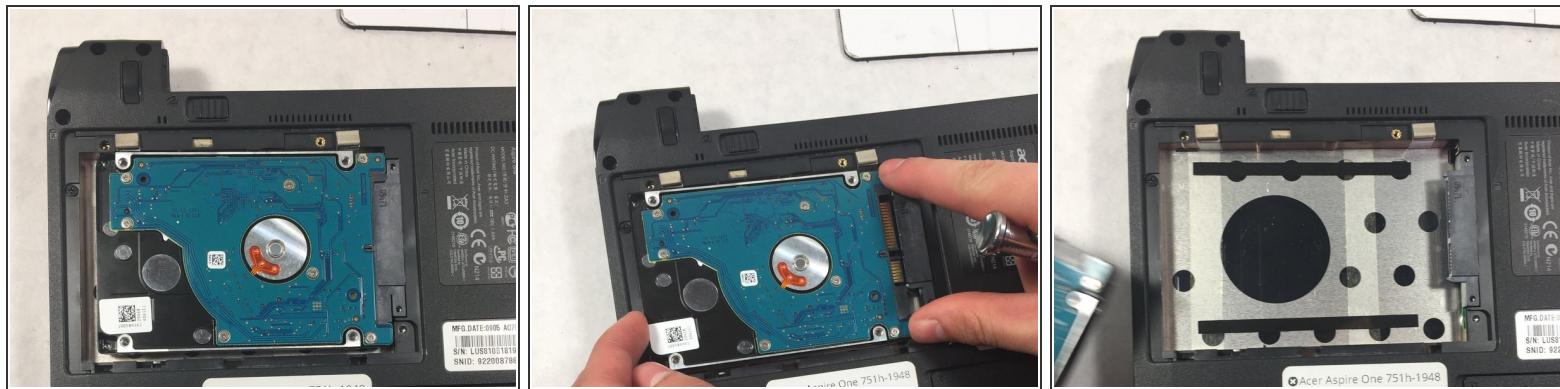


- Remove the hard drive by sliding it to the left and pull it out.

Step 8

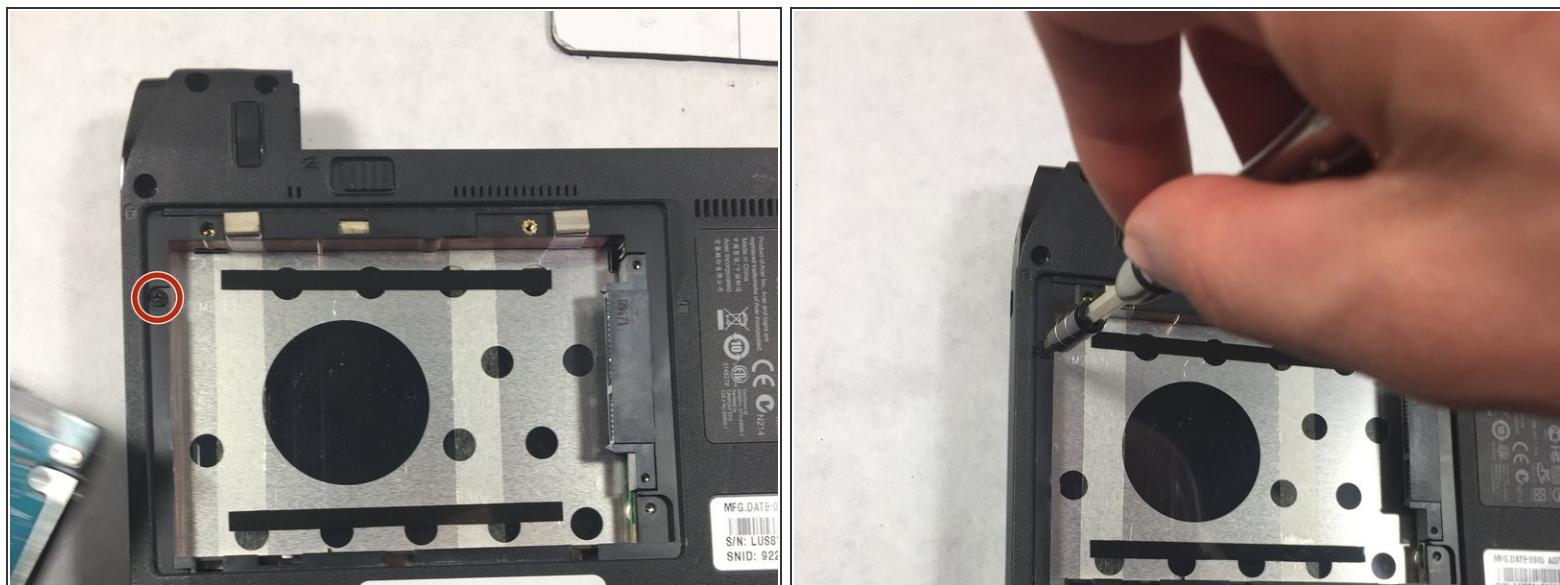

- Unscrew the Phillips #0 (M2-L2.5 mm) screws.


Step 9 — Keyboard

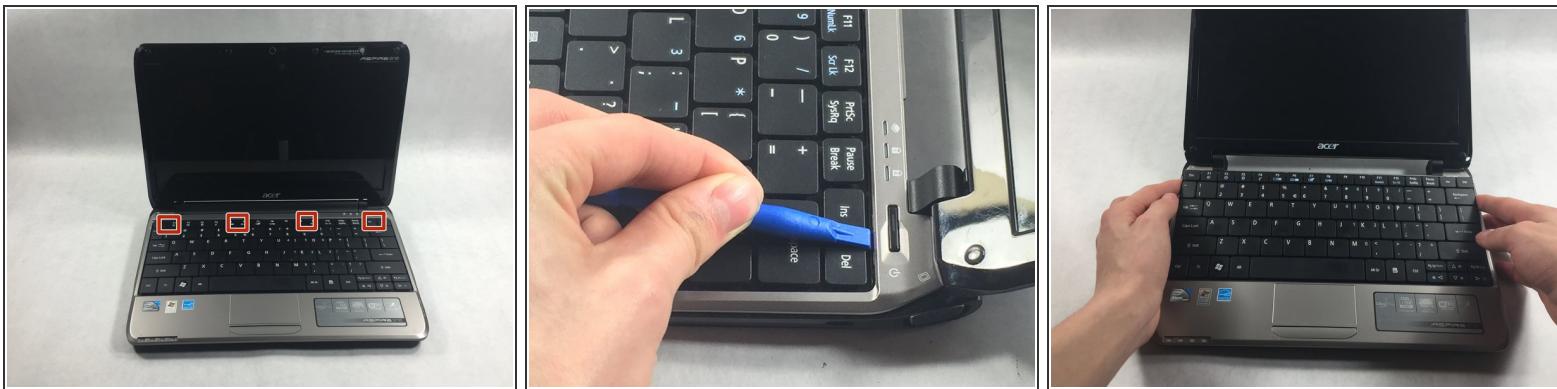

- Use the plastic opening tool to push in each of the four clips and carefully lift the keyboard.

 Don't lift the keyboard completely so that you don't damage the ribbon cable underneath.

Step 10

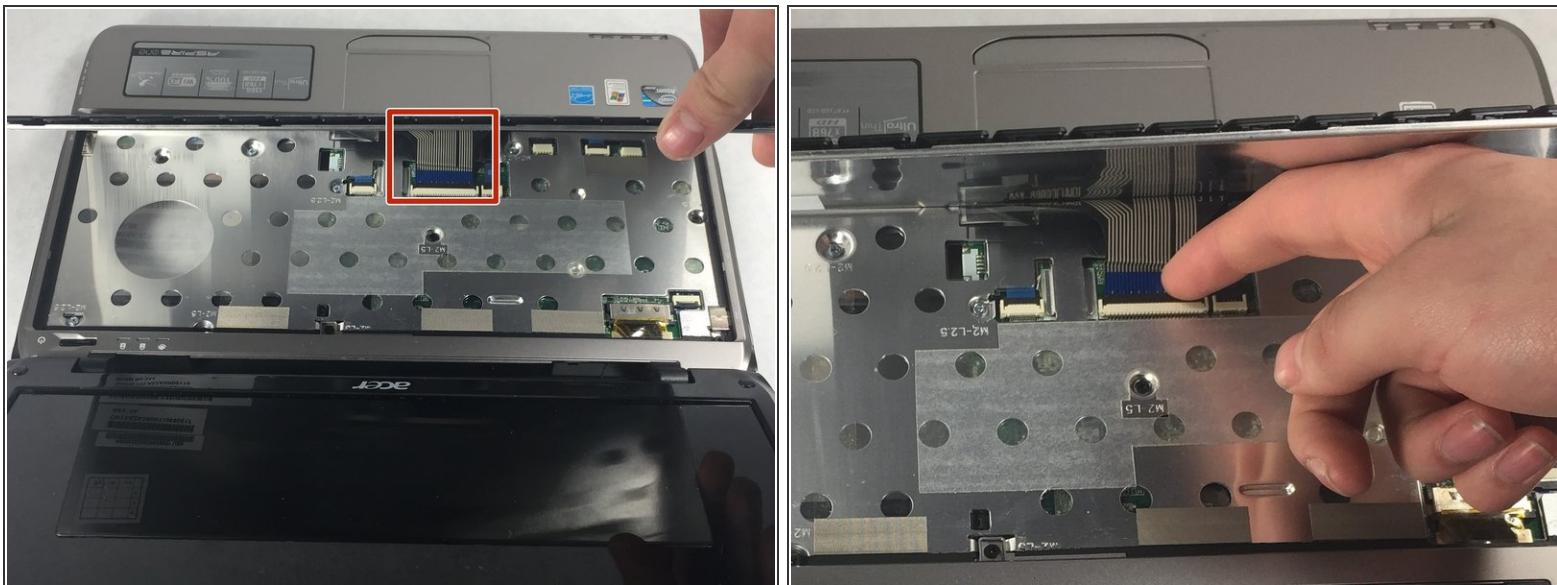


- When you remove the keyboard, be careful not to damage the ribbon cable that attaches it to the motherboard.
- Unplug the ribbon cable by gently lifting the black tab up. Then remove the cable.

Step 11 — Front Panel




- Use the screwdriver to remove all the Phillips #0 (M2-L2.5 mm) screws shown here.

Step 12

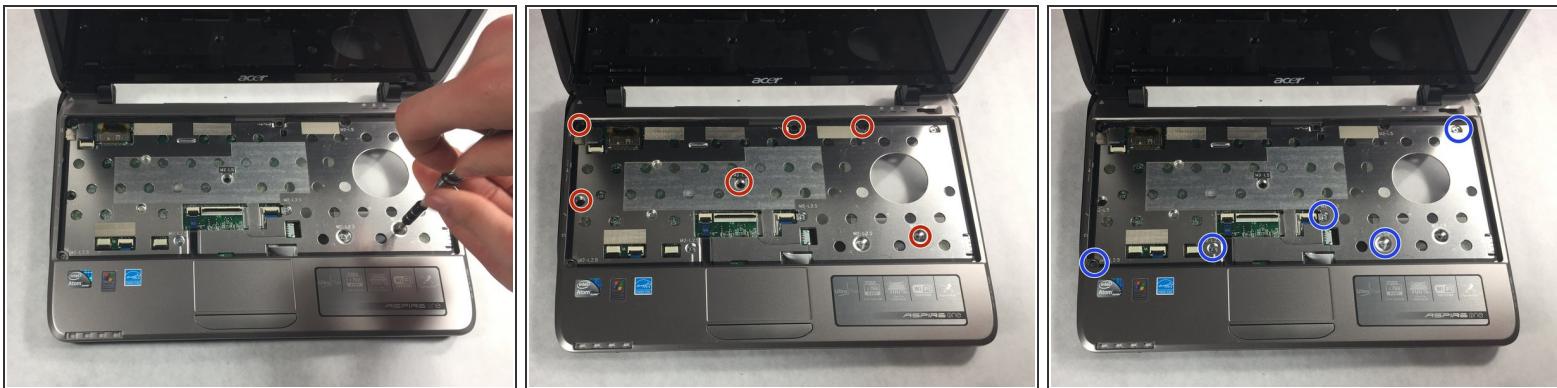

- Flip the laptop over and remove all the Phillips #0 (M2-L5 mm) screws under the keyboard.
- Remove all the Phillips #0 (M2-L2.5 mm) screws

Step 13

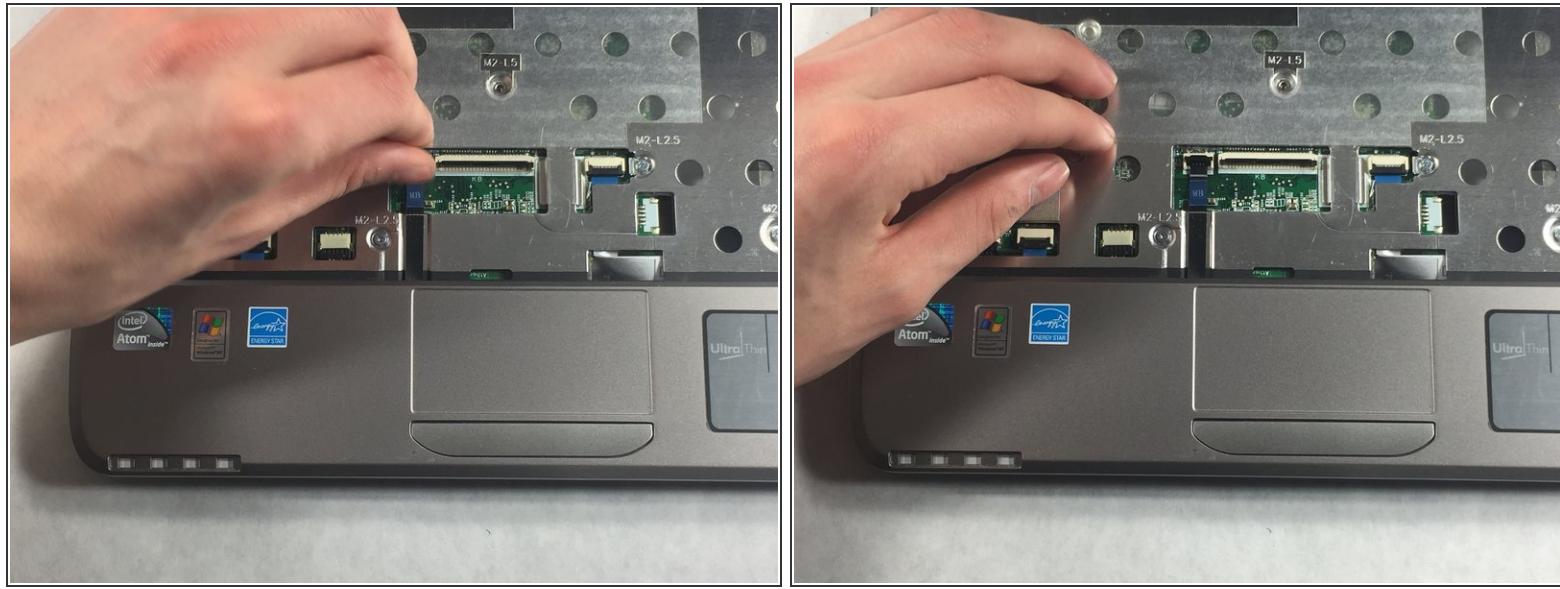


- Lift the small black clip and remove the ribbon cable before proceeding.

Step 14




- Separate the front panel from the back panel, by sliding your thumb nail between them.

Step 15 — Fan

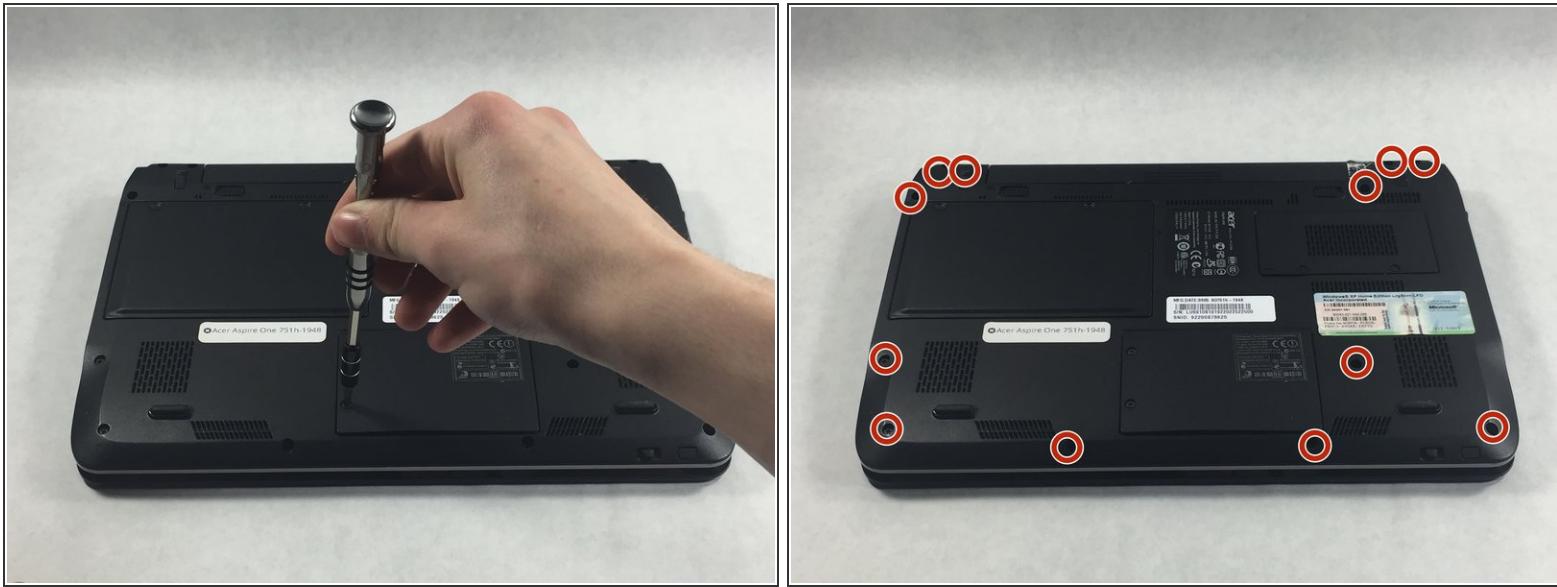


- Use the screwdriver to remove Phillips #0 (M2-L5 mm) screws

Step 16

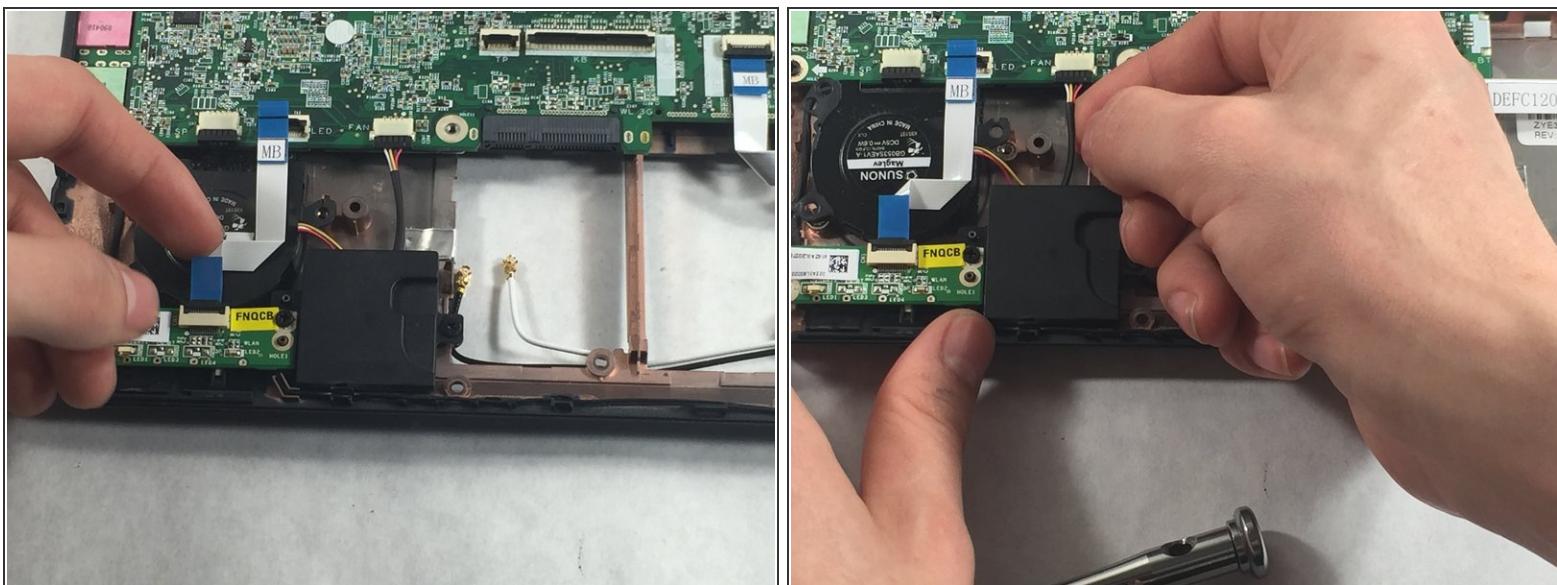

- Remove the ribbon cable that sits on top of the fan by lifting the small black clip and pulling the blue tab.
- Use the same technique to remove the ribbon cable from the motherboard.

Step 17

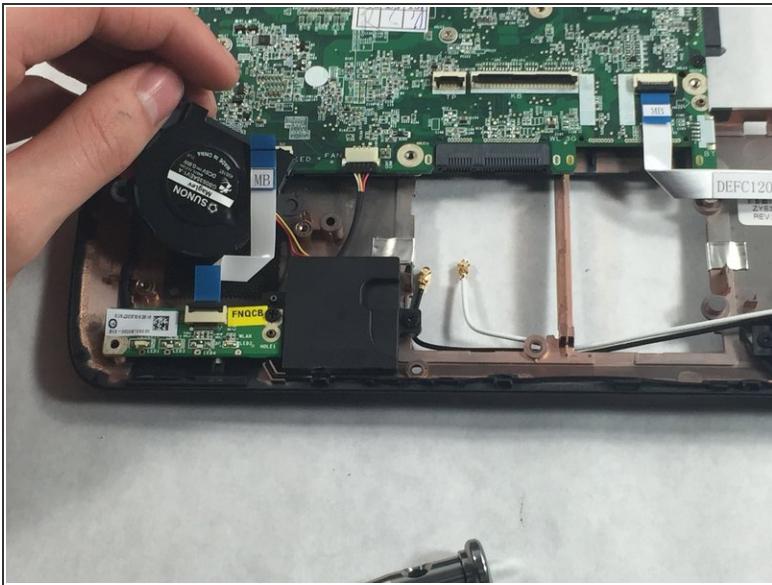

- Unscrew the Phillips #0 (M2-L2.5 mm) screw from the fan, and remove the fan.

To reassemble your device, follow these instructions in reverse order.