


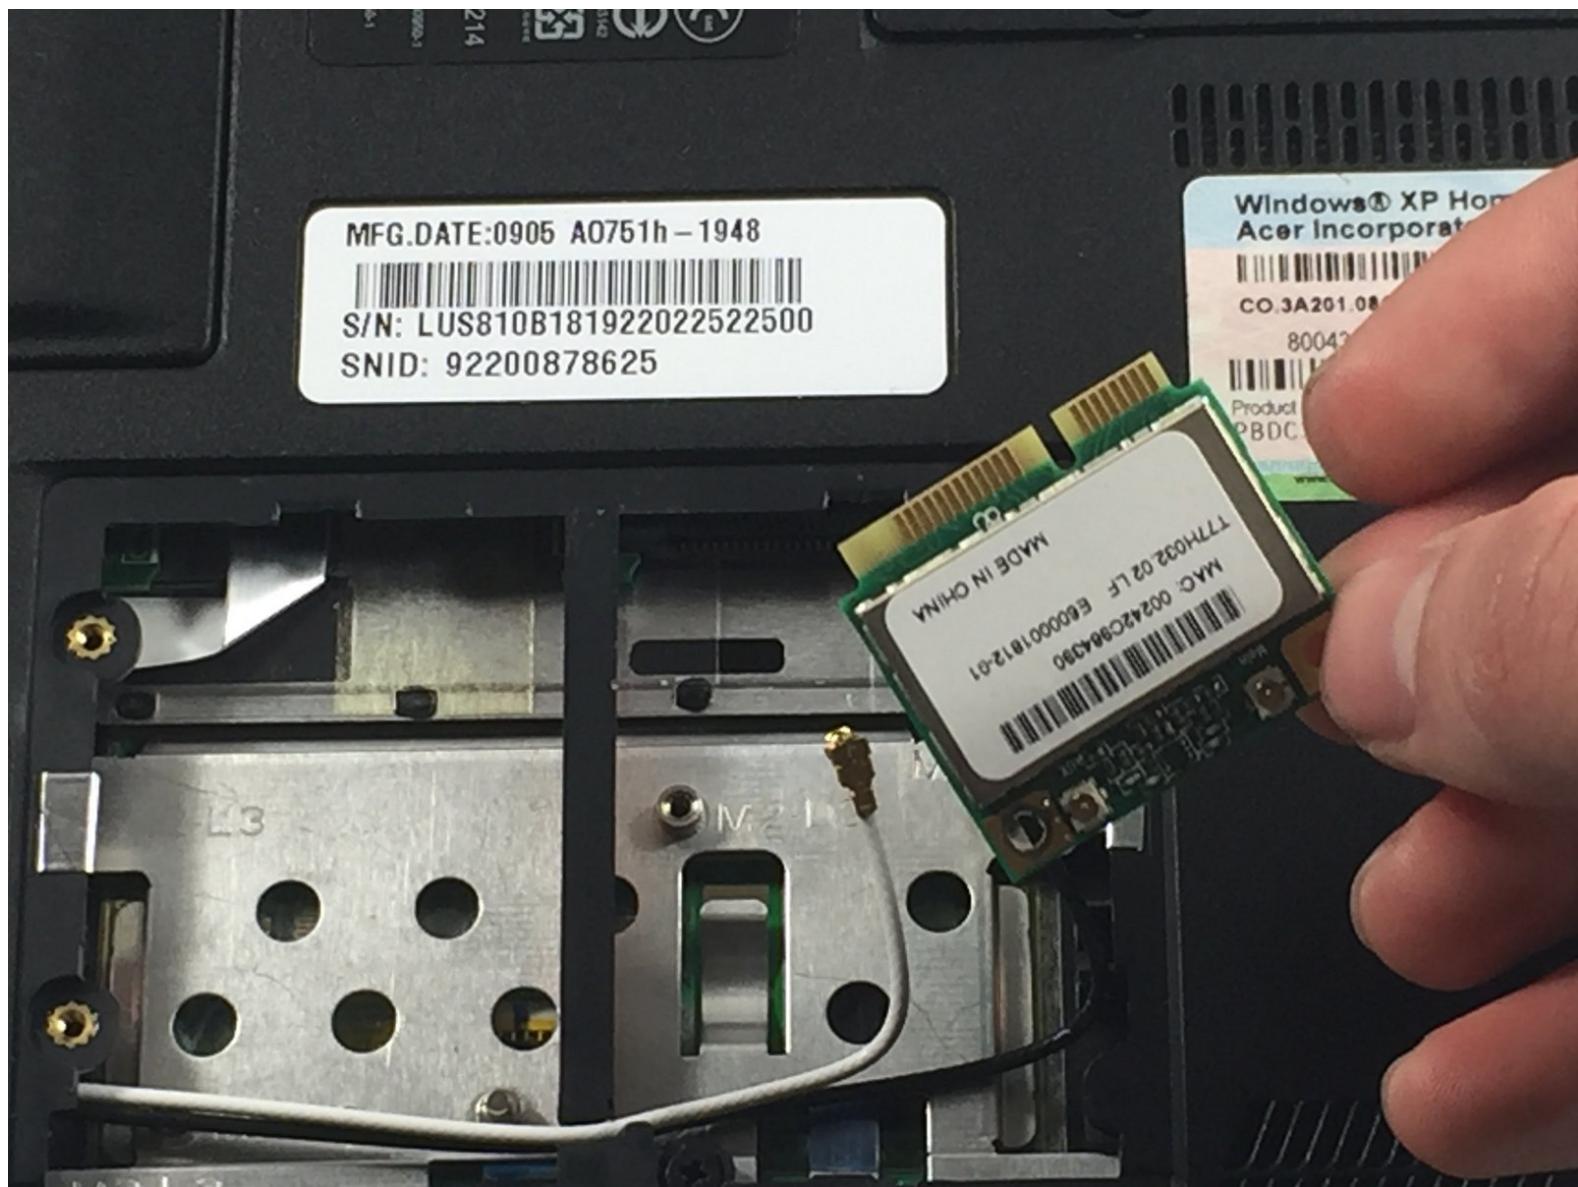

# Acer Aspire One 751h-1948 Network Card Replacement

This guide will help you replace the network card of the Acer Aspire One 751h-1948.

Written By: Francisco Monteiro Junior



## INTRODUCTION

This guide will help you replace the network card of the Acer Aspire One 751h-1948.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Battery




- Close the laptop and flip it over to view the back of the laptop.

## Step 2




- Unlock the right side of the battery by sliding the battery lock to the right. Then slide the left lock to the left and remove the battery.

## Step 3 — Network Card

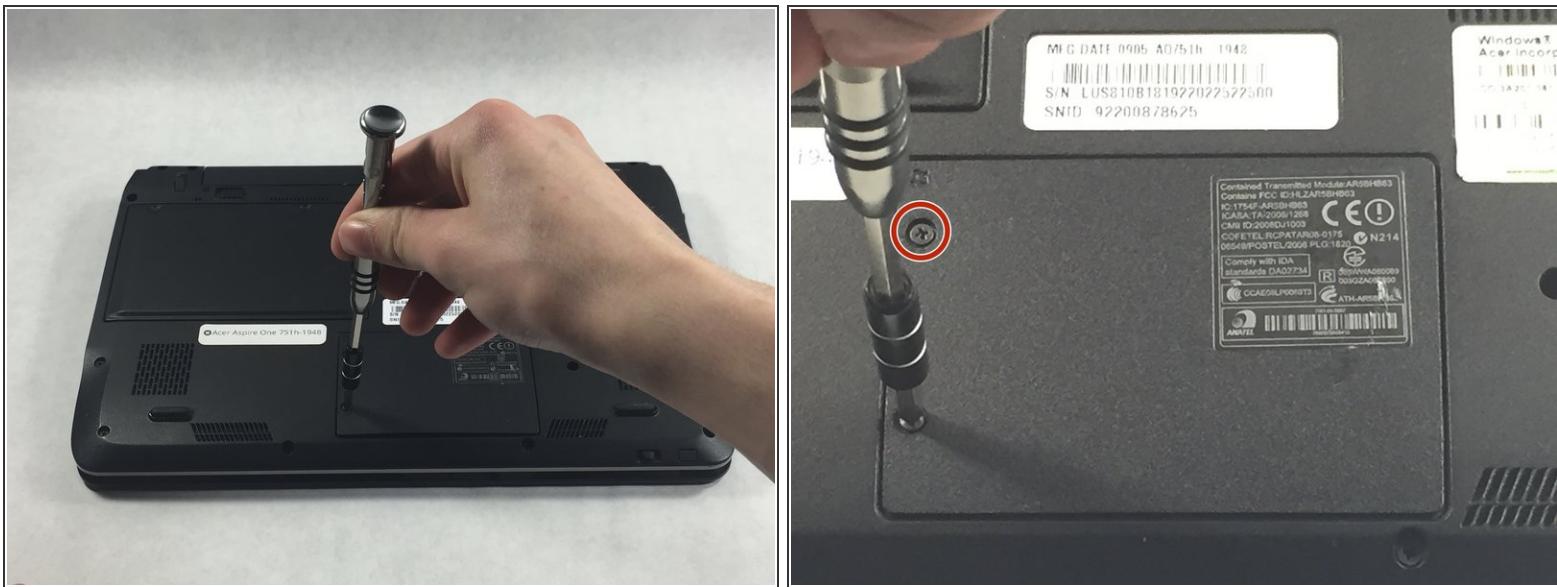

- Unscrew the two Phillips #0 (M2-L2.5 mm) holding down the network card panel.
- These screws don't come all the way out.

## Step 4

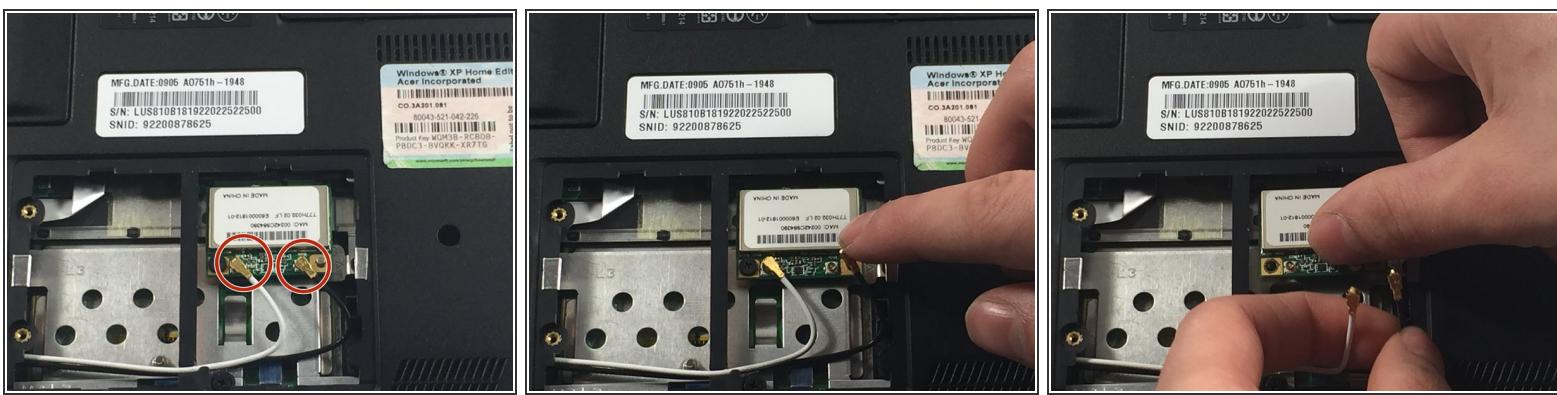

- Unplug the two connecting cables by lifting them up. They should unclip easily.

## Step 5



- Remove the screw Phillips #0 (M2-L3 mm) holding down the network card. Pull out the card.

To reassemble your device, follow these instructions in reverse order.