


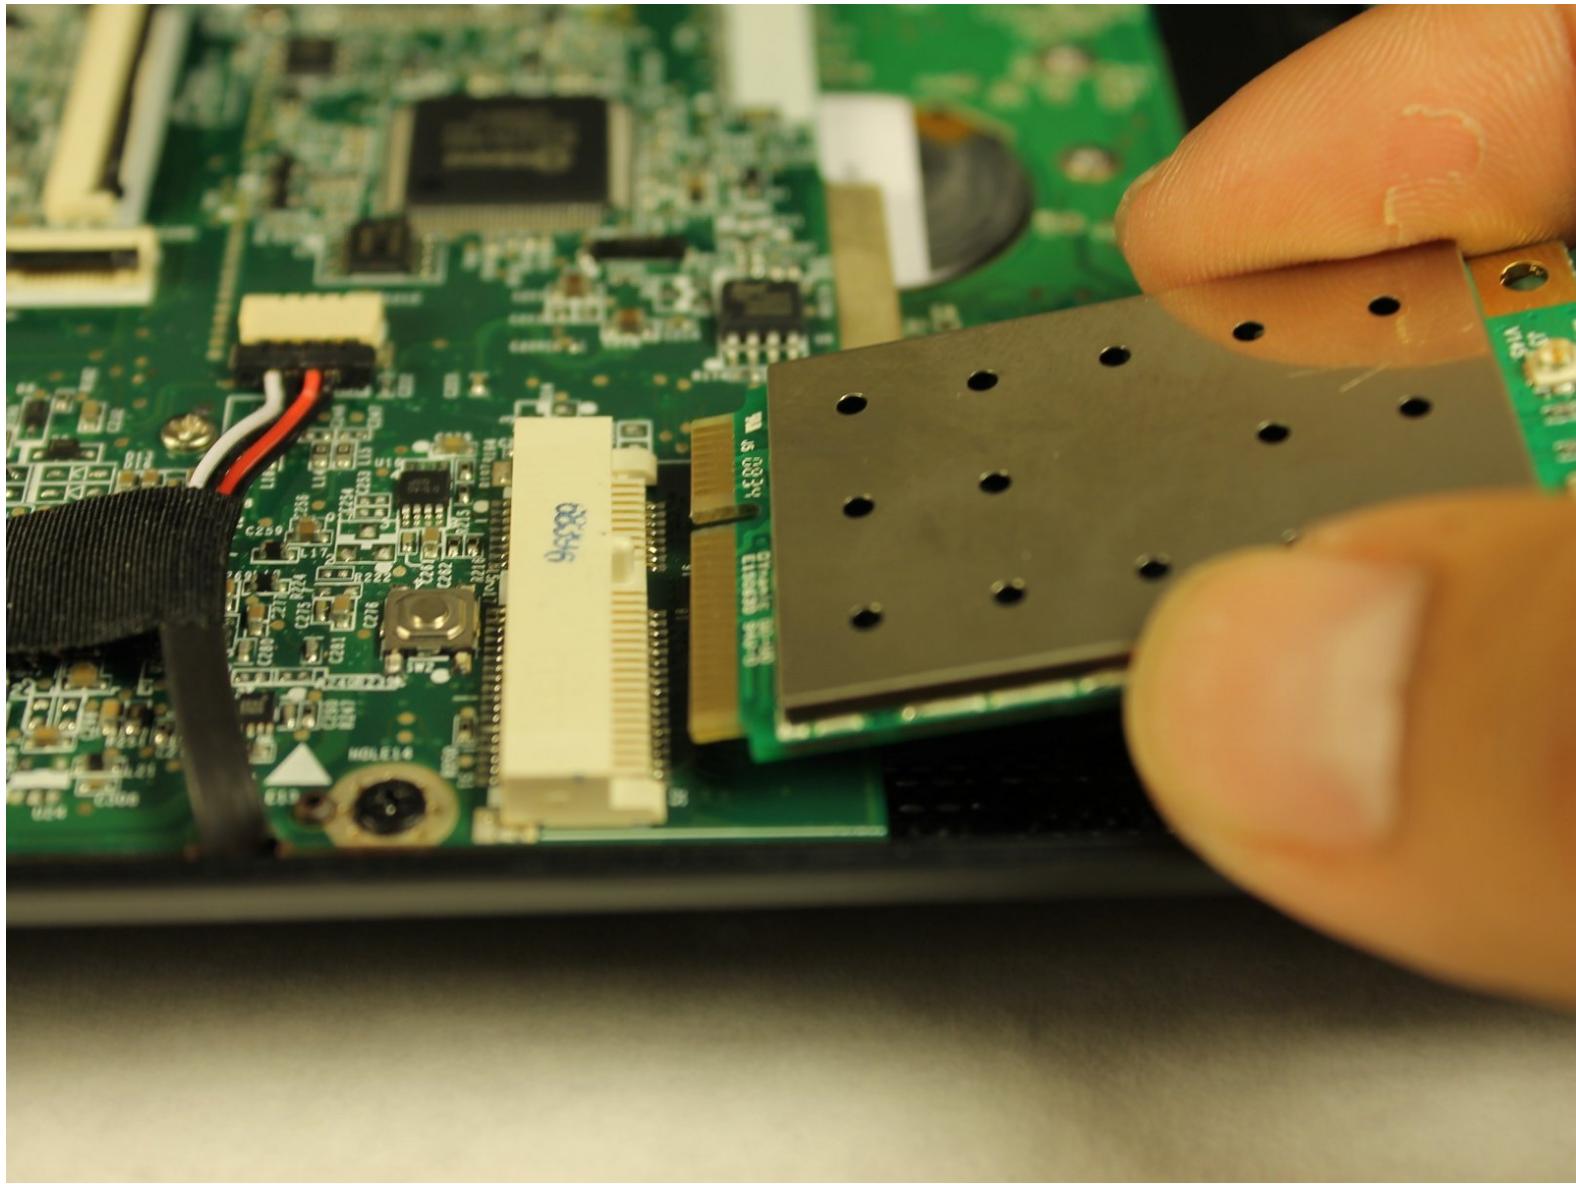

Acer Aspire One A150-1570 Internal Wireless Card Replacement

This guide will explain and demonstrate how to replace the Internal Wireless Card safely for you and your device.

Written By: Briana Naranjo



This document was generated on 2019-10-30 03:31:15 PM (MST).

INTRODUCTION

This guide is simple to follow. The Internal Wireless Card can easily be removed and installed within minutes.

TOOLS:

- Heavy-Duty Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Keyboard



- Flip device over so that the battery is farthest from you.
- Identify the switch on the upper left corner and push it left to be in "unlocked" position.

Step 2




- Identify the latch on the upper right hand corner. Drag and hold the latch to the right.
- Pull the battery out.

Step 3



- Now flip device back over to show the keyboard.
- Locate the three tabs at the top of the keyboard.


Step 4

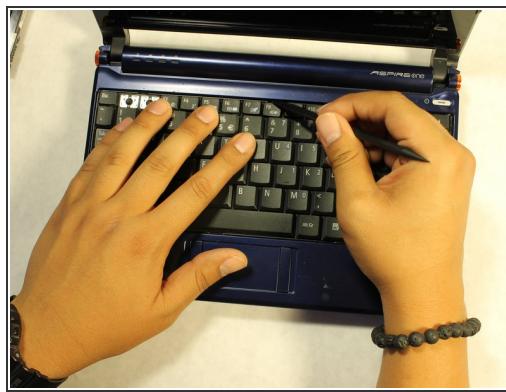

- Start on the top-right and use the spudger to push off the tab from the keyboard.
- Move to the middle tab while still holding the right side up so the tab doesn't fall back into place.
- Continue to hold up keyboard while disconnecting the last tab.


⚠ DO NOT lift keyboard yet. This will be addressed in the next step.

Step 5

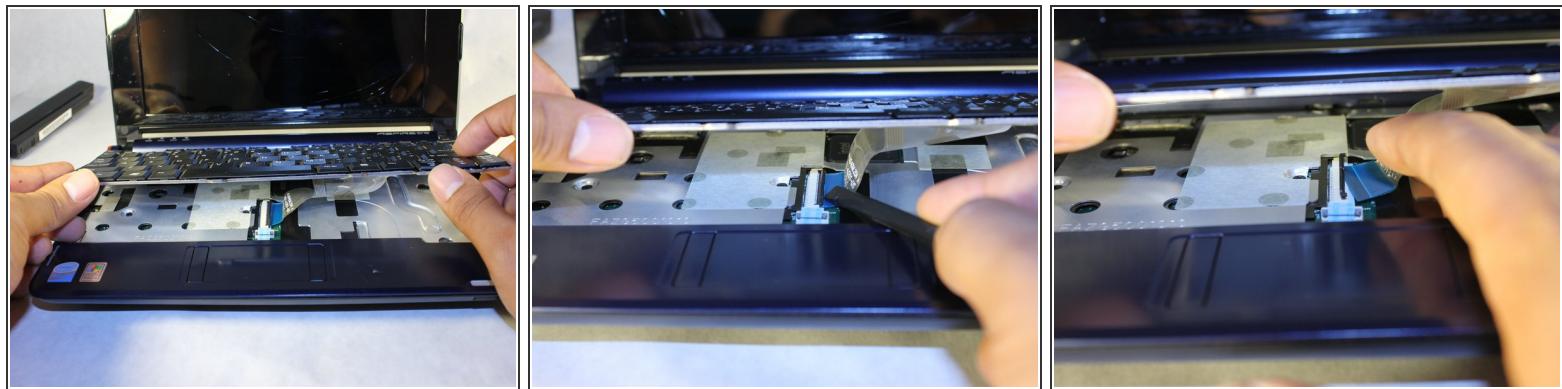


- Here you can see that the keyboard is still attached to the device.
- Use the Spudger to lift the ZIF (Zero Insertion Force) to release the keyboard ribbon.
- Once tab is lifted, the keyboard ribbon should come right out.

Step 6 — Internal Wireless Card

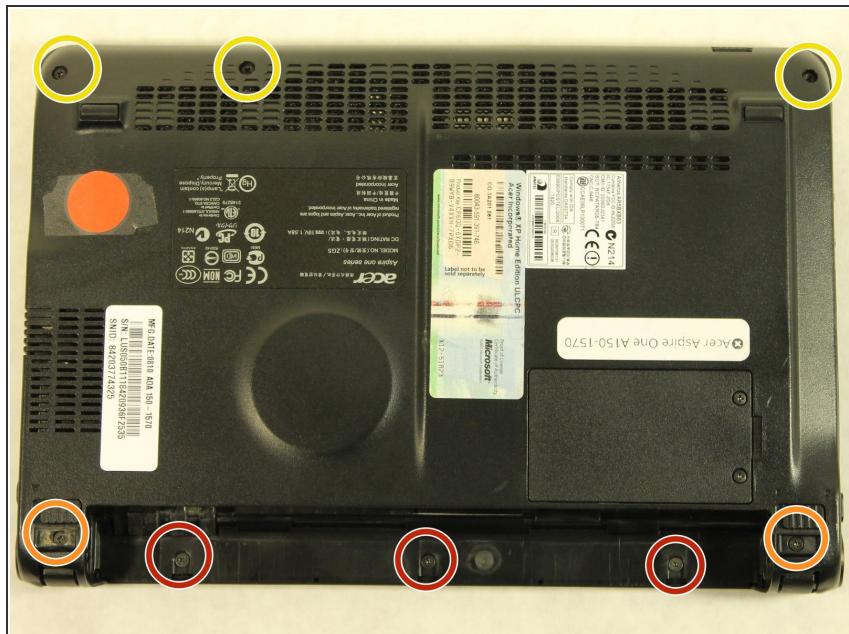


- Close and flip the device over so you can have a good view of all the screws.
- Locate and remove the three 3.9mm screws where the battery was removed from.
- Locate and and remove the two 5.8mm screws located underneath the bumpers.
- Locate and remove the three 5.8mm remaining screws at the top of the device.

Step 7

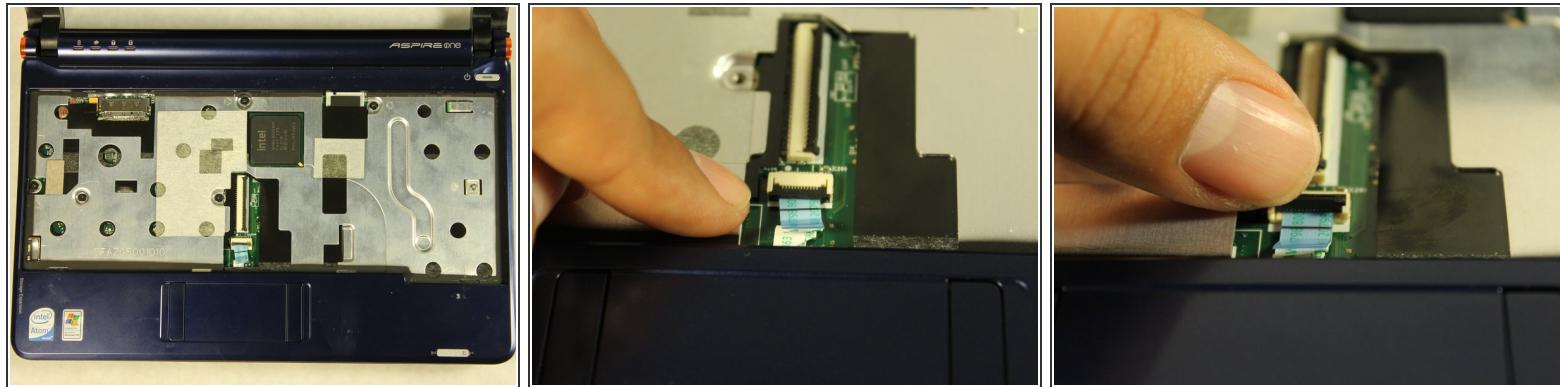


- Flip and reopen device to where you can view the internal panel.
- Locate the ZIF connecting the mouse panel to the motherboard.
- Flip up the black plastic hinge and carefully pull out the ZIF connector.

Step 8

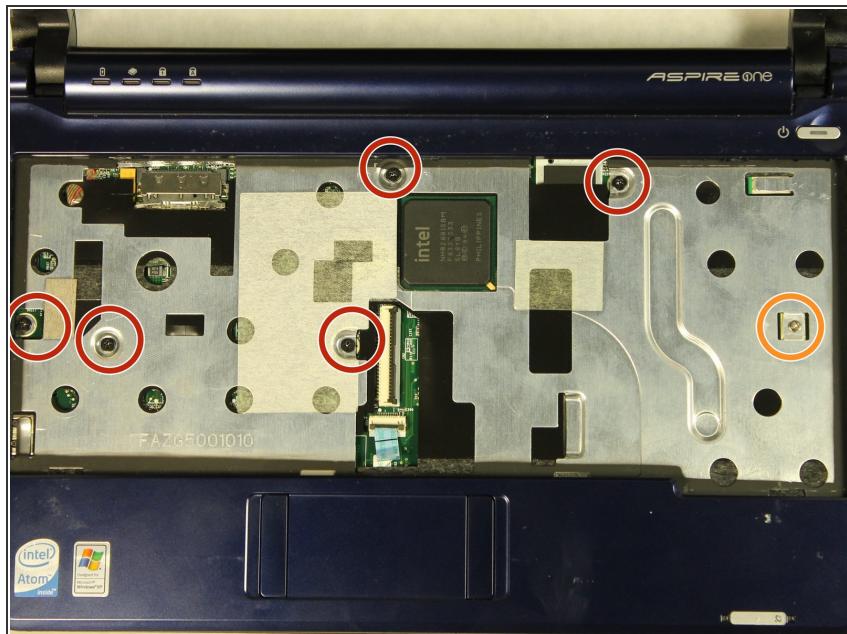

- Locate and remove all five 4.7mm black screws.
- Locate and remove the one 4.3mm silver screw.



Step 9

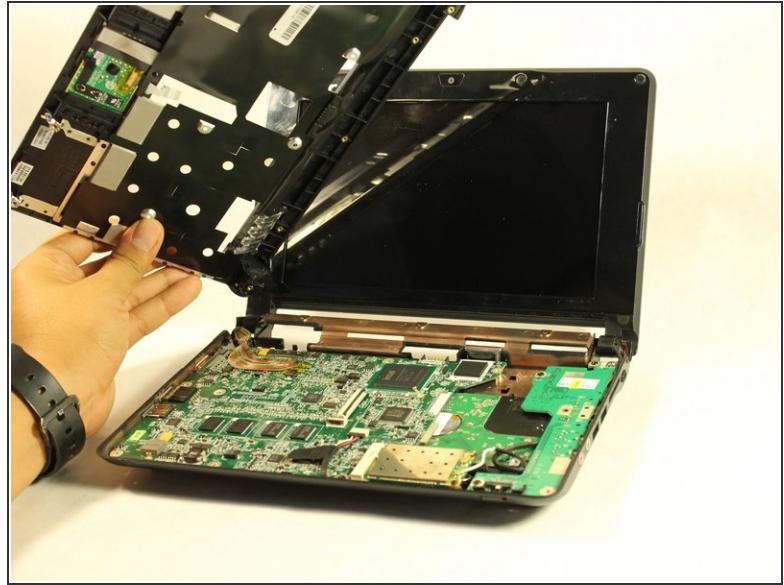

- Pick a corner and slowly lift up the panel while running your finger underneath to pop off the seals.



⚠ Make sure to move slowly. You do not want to crack the plastic from being to rough or moving to fast.

Step 10

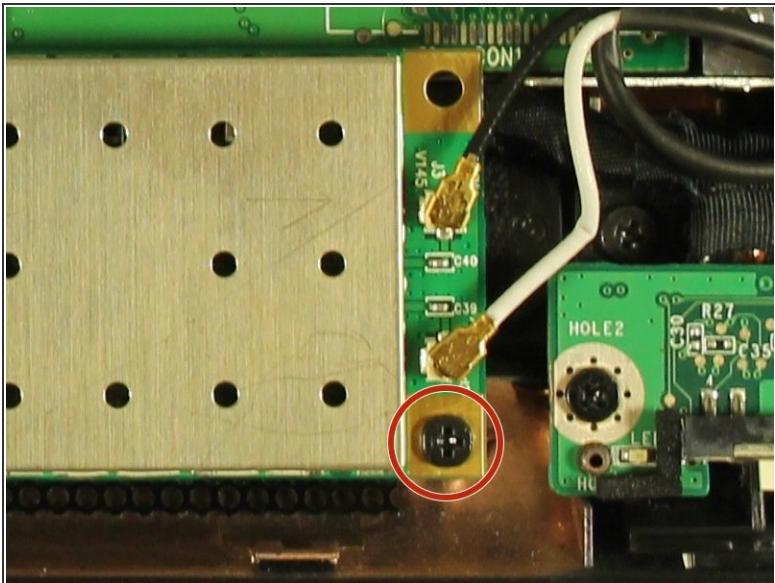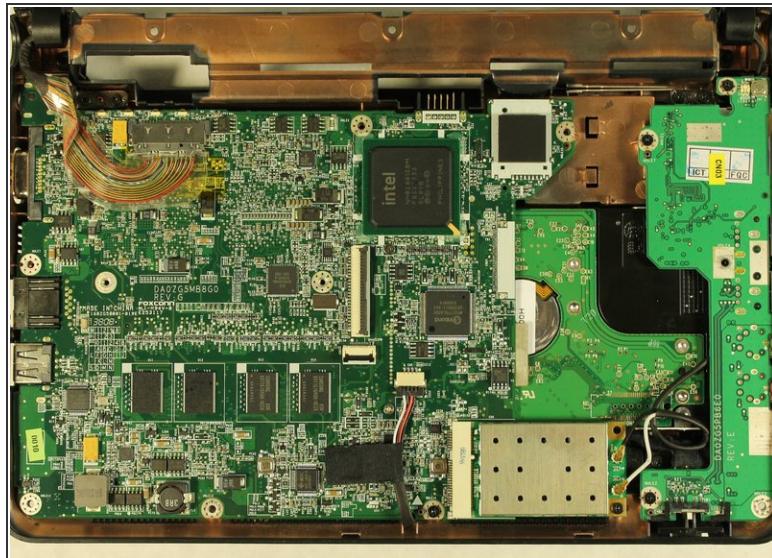

- Locate the internal wireless card.
- Remove the one 3.9mm screw holding it down.

Step 11

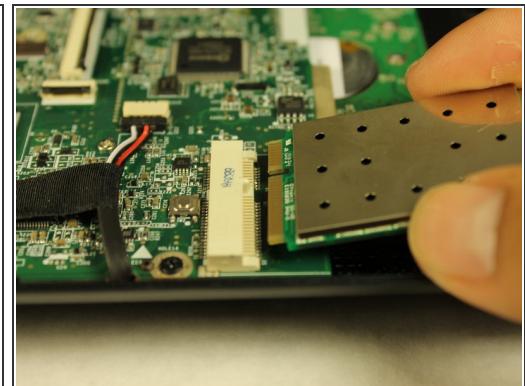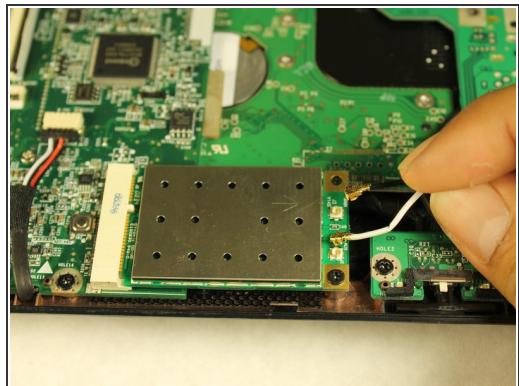

- Carefully disconnect the black and white cable from the internal wireless card.
- Pull the internal wireless card straight out.

To reassemble your device, follow these instructions in reverse order.