



Acer Aspire One AO756-2623 Back Cover Replacement

The back cover of the Acer Aspire One protects the electronics on the inside of the device. By removing it, one can get easy access to the inside of the laptop.

Written By: Colin Rodwell



INTRODUCTION

The removal of the back cover is necessary to be able to replace any other parts of the laptop. The removal is a two step process which involves removing the battery and one screw.



PARTS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Orient the ACER Aspire One to where the bottom of the laptop is facing upward as shown in the picture.

Step 2




- Locate the circular slot positioned at the bottom right of the battery.

Step 3



- Insert a spudger and slide the tab to the right.

 When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.

- Hold the tab in the right-hand position and firmly push or pull the battery upward to remove it from the laptop.

Step 4 — Back Cover



- Locate the single 6 mm Phillips screw in the lower middle of the back plate.
- Remove the screw using a Phillips #0 Screwdriver.

Step 5



- Slide the back plate downward to remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.