


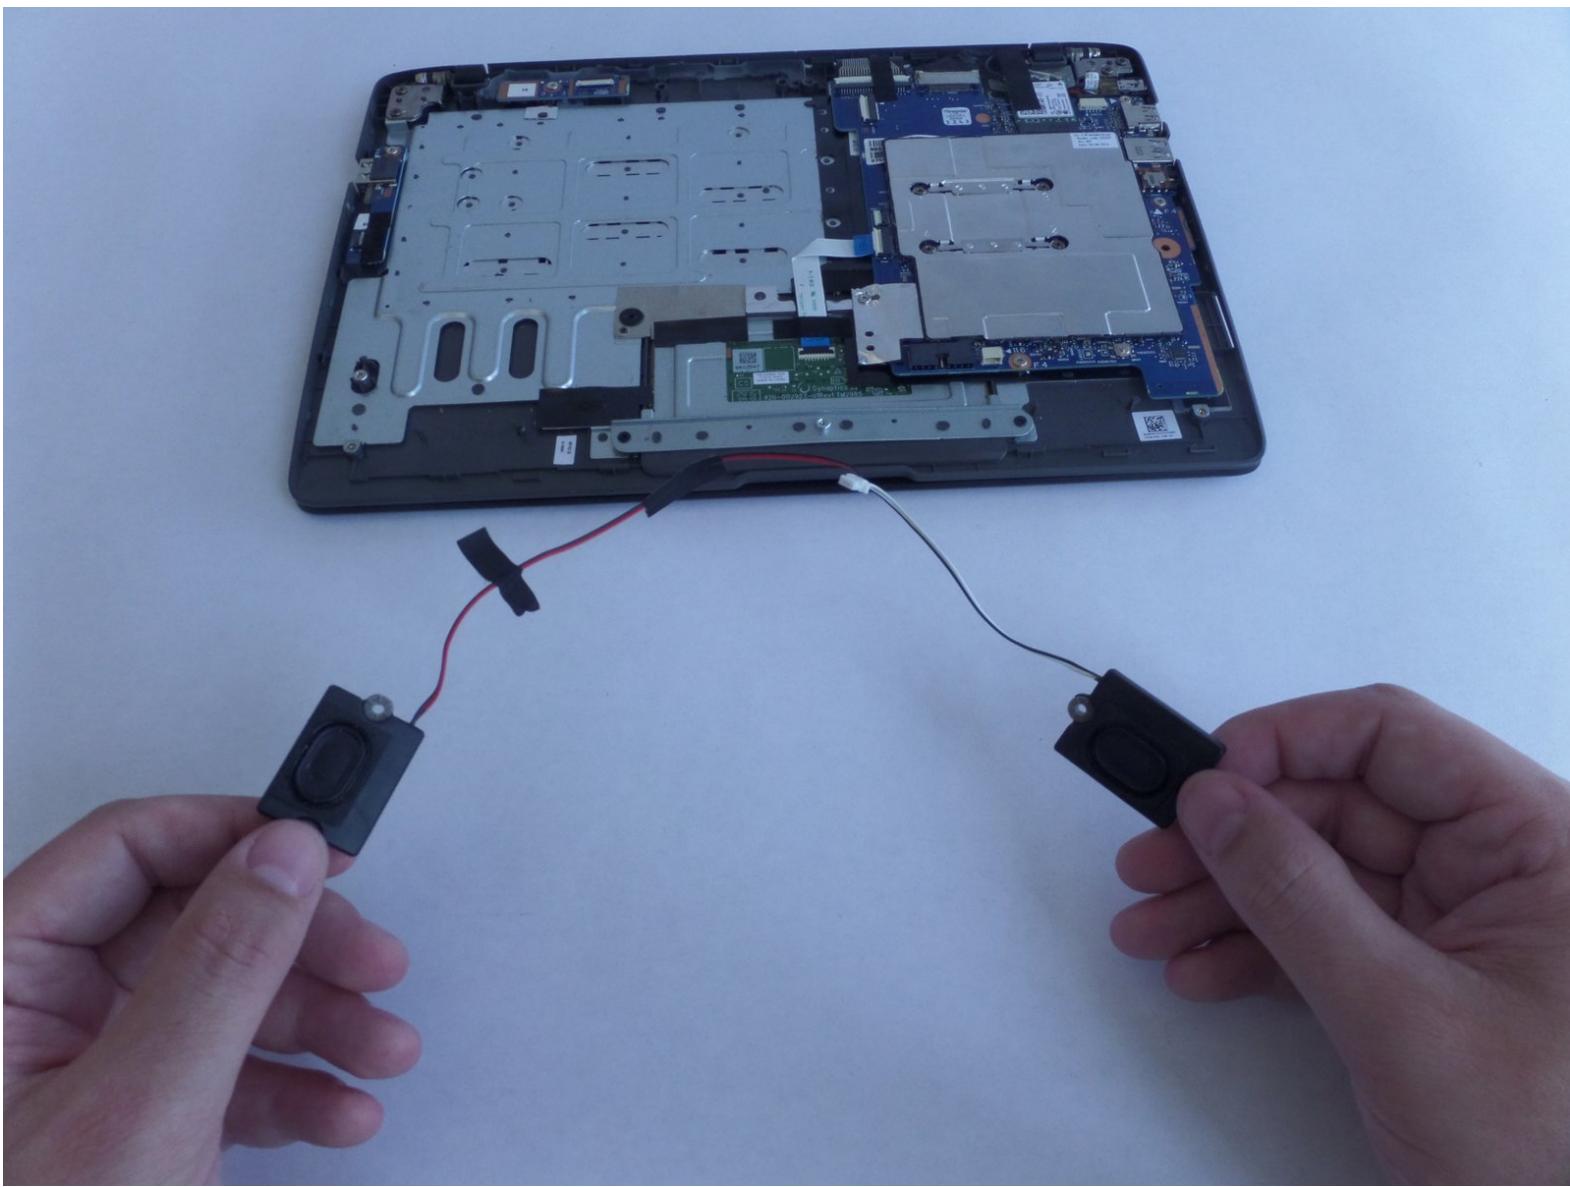

# Acer Aspire One Cloudbook 11 AO1-131-C7DW Speaker Replacement

This guide will help you replace the speaker of the Acer Aspire One Cloudbook 11 AO1-131-C7DW.

Written By: Xiaochen Lin



This document was generated on 2019-10-30 03:59:42 AM (MST).

## INTRODUCTION

Does the sound out of your speakers sound distorted or poor? Follow this guide to replace your speakers.

### TOOLS:

- [iFixit screwdriver with a PH0 bit](#) (1)
- [nylon pry tool](#) (1)
- [Tweezers](#) (1)

## Step 1 — Back Panel



- Power the laptop off.
- Flip the laptop over and position it so the opening faces you.
- Remove the rubber foot located near the opening side of the device using tweezers.

## Step 2



- Unscrew the five 5-mm screws using the PH0 screwdriver.

## Step 3



- Identify the HDMI port located in the side of the laptop opposite to the power button.
- Insert the plastic opening tool into the divet of the back panel located above the HDMI port.
- Pry along the laptop frame until the back panel comes loose.


**⚠** Do not pull the back panel too hard as the battery is still connected to the back panel and the motherboard. This can damage your device.

## Step 4





- Rotate the device so the opening faces you again.
- Hold the back panel away from the laptop and remove the 4-mm screw using the PH0 screwdriver.  
*(i)* This screw is fastening the battery to the laptop.
- Lift the back panel gently.

## Step 5

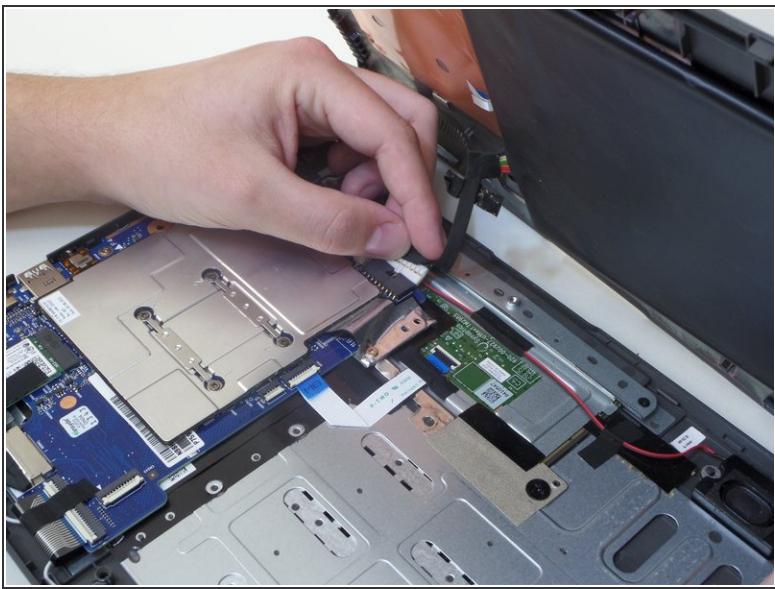


- Unplug the cable that connects the battery to the motherboard.
- Detach the back panel, which still includes the battery.

## Step 6 — Speaker

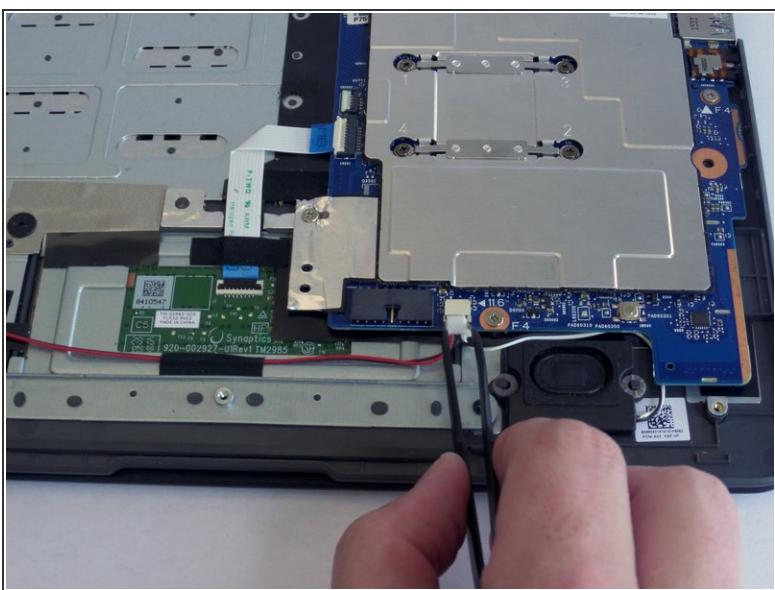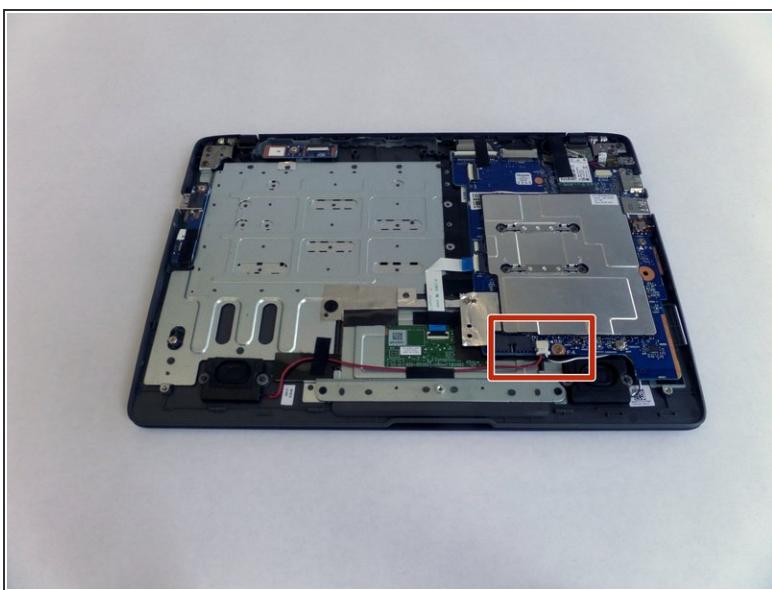


- Position the computer so the opening of the laptop faces you.
- Unplug the white plastic connector that has red, white, and black wires using tweezers.

## Step 7

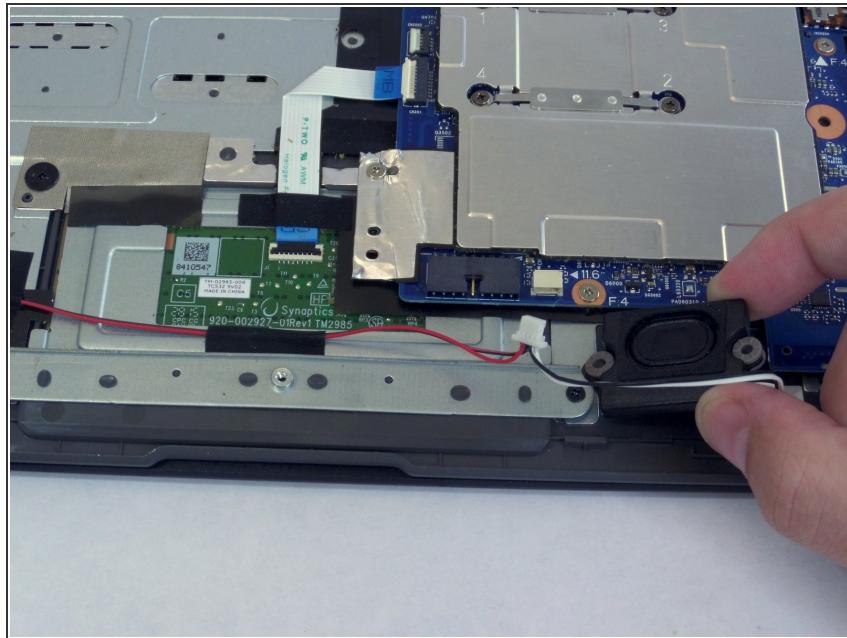


- Unhook the speaker by sliding it to one side first and then by lifting it up.
- *(i)* The gray rubber ring may come off during this process. Insert it back onto the speaker if this happens.
- Repeat this step for the other speaker.

## Step 8

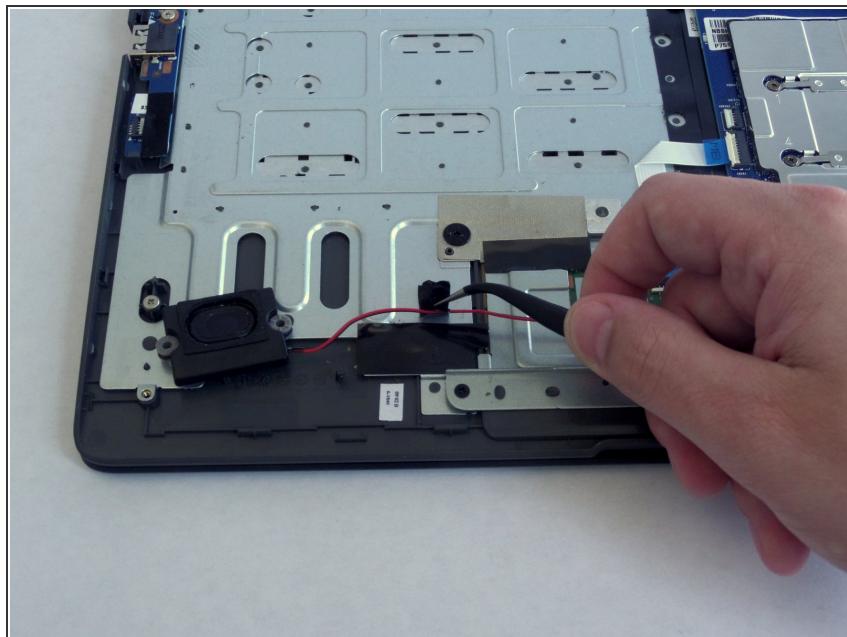

- Remove the tape strips holding the wires to the metallic plate using tweezers.
-  Save the tape strips for the replacement of the new speakers.

## Step 9

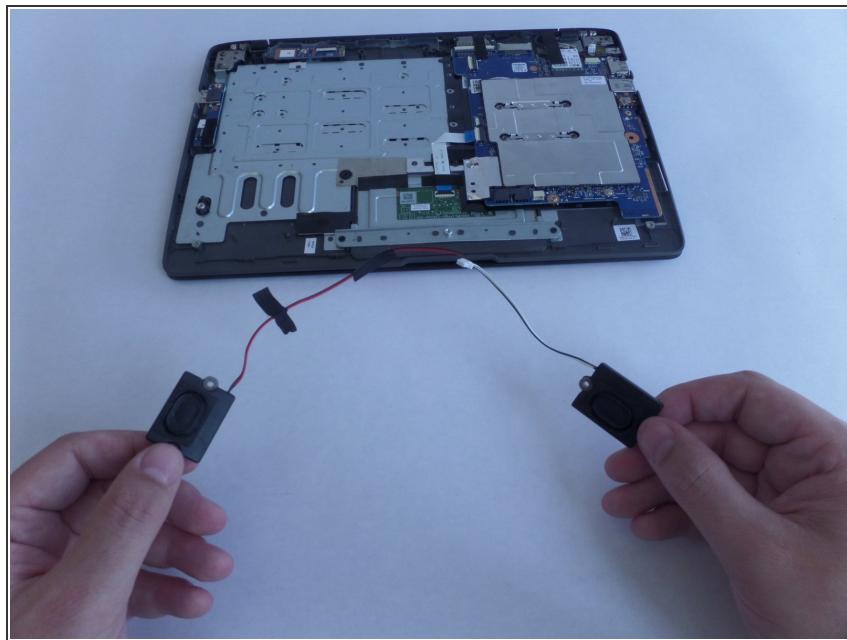

- Remove the speakers.

To reassemble your device, follow these instructions in reverse order.