




Acer Aspire One Cloudbook 11 AO1-131-C7DW

Thermal Paste Replacement

This guide will help you find where the thermal paste is. As for how to replace, please follow another guide on ifixit.

Written By: Luz Villegas

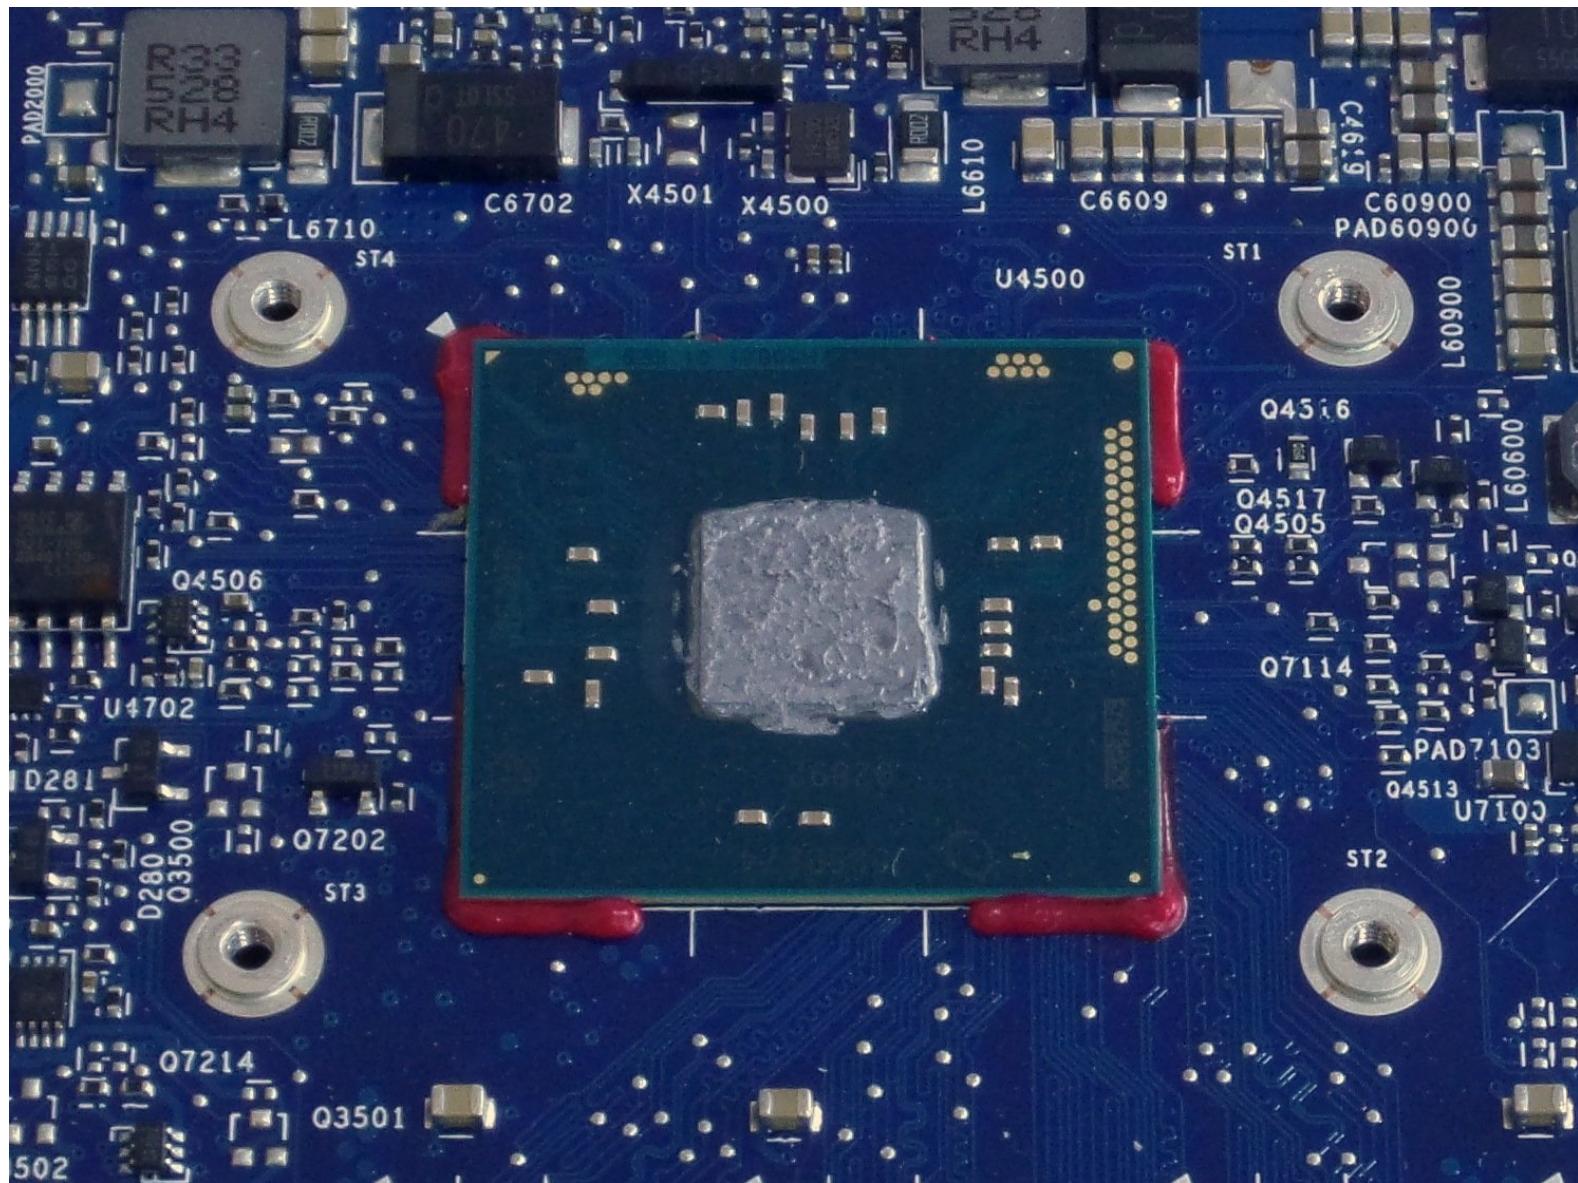

This document was generated on 2019-11-05 10:41:34 PM (MST).

INTRODUCTION

Low quality or old thermal compound can lead the CPU to overheat, which slows down performance and also shortens the life of the device. Follow this guide for detailed instructions on how to access and replace the thermal compound.

TOOLS:

- [IFIXIT screwdriver with a PH0 bit](#) (1)
- [nylon pry tool](#) (1)
- [Tweezers](#) (1)

Step 1 — Back Panel



- Power the laptop off.
- Flip the laptop over and position it so the opening faces you.
- Remove the rubber foot located near the opening side of the device using tweezers.

Step 2



- Unscrew the five 5-mm screws using the PH0 screwdriver.

Step 3



- Identify the HDMI port located in the side of the laptop opposite to the power button.
- Insert the plastic opening tool into the divet of the back panel located above the HDMI port.
- Pry along the laptop frame until the back panel comes loose.


⚠ Do not pull the back panel too hard as the battery is still connected to the back panel and the motherboard. This can damage your device.

Step 4




- Rotate the device so the opening faces you again.
- Hold the back panel away from the laptop and remove the 4-mm screw using the PH0 screwdriver.
(i) This screw is fastening the battery to the laptop.
- Lift the back panel gently.

Step 5

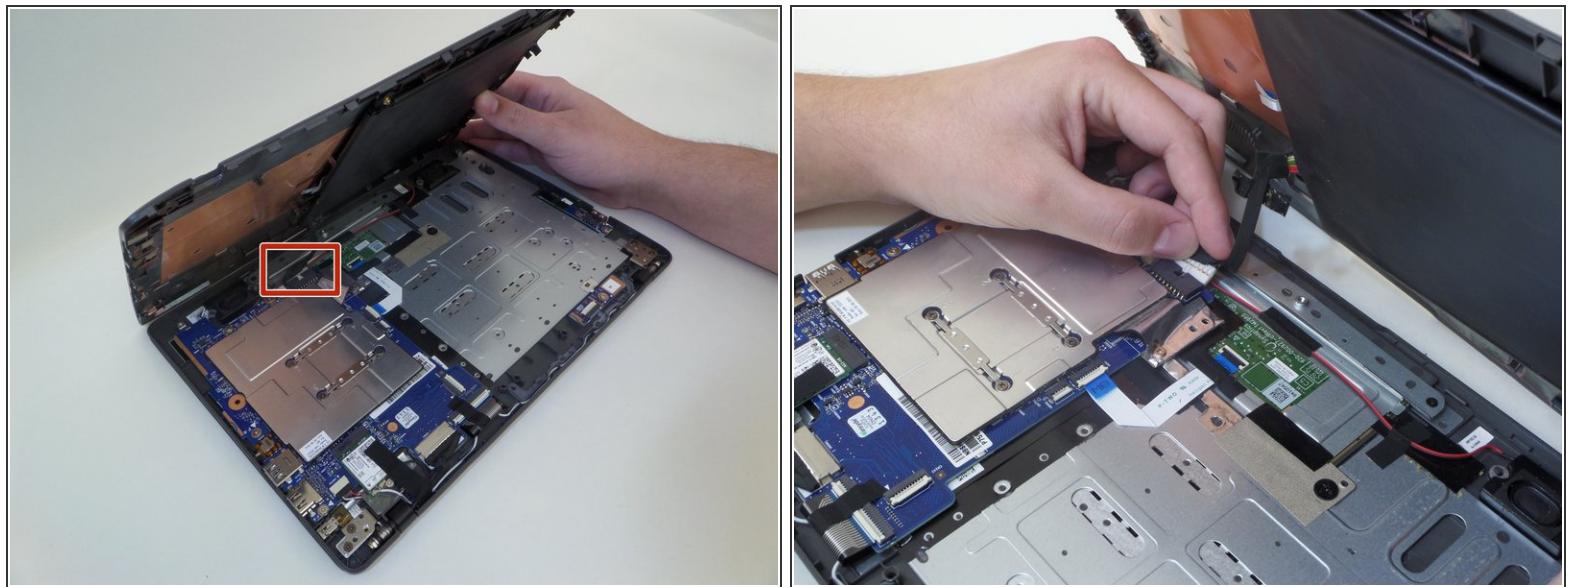


- Unplug the cable that connects the battery to the motherboard.
- Detach the back panel, which still includes the battery.

Step 6 — Thermal Paste

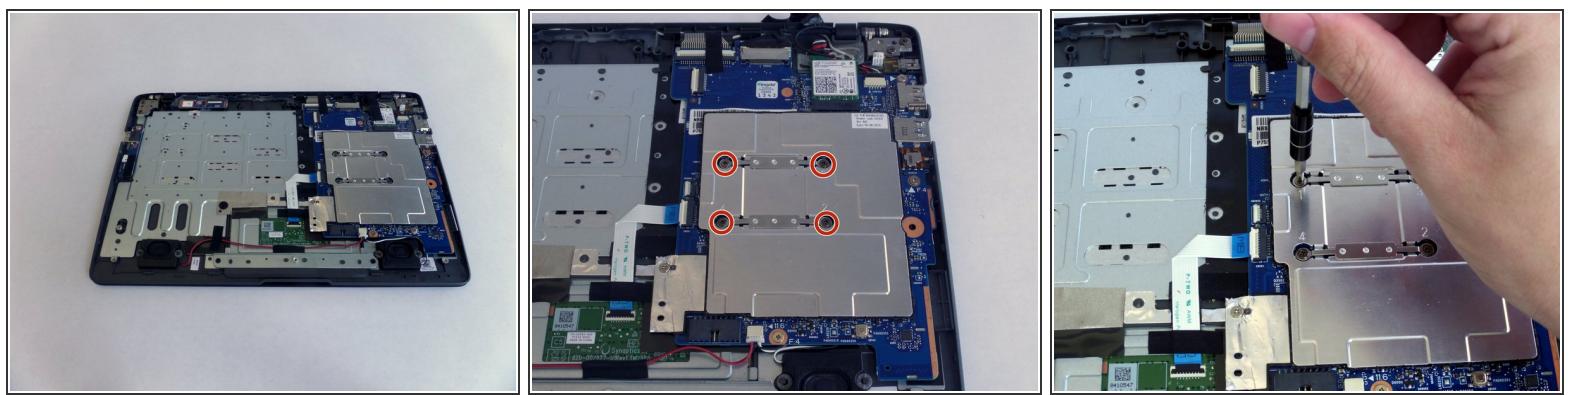

- Position the computer so the opening side faces you.
- Remove the four 2.5-mm screws using a PH0 screwdriver.
- *(i)* Follow the numerical order labeled on the metallic plate.


Step 7

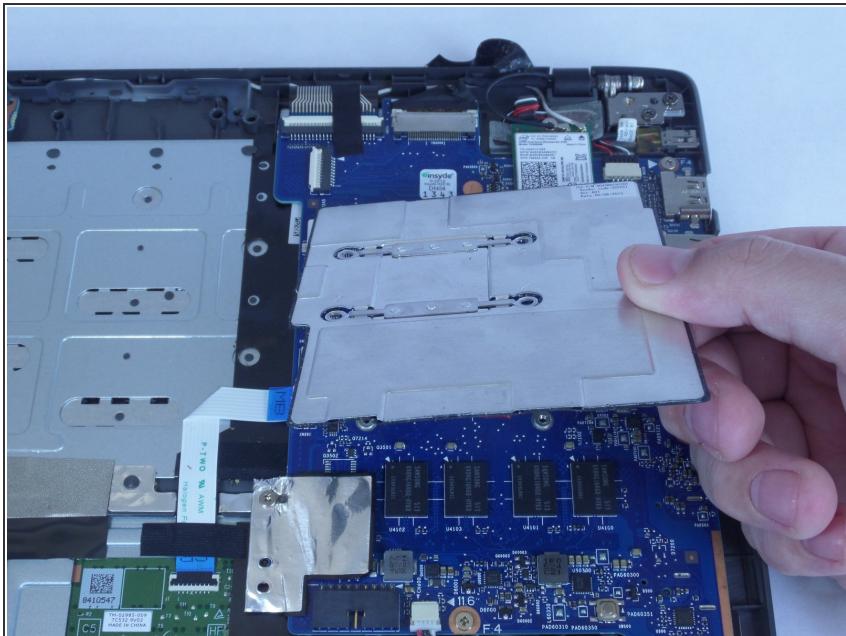

- Remove the metallic plate.

(i) This metallic plate is referred to as a heat sink. The job of the heat sink is to help move heat away from the CPU.

Step 8

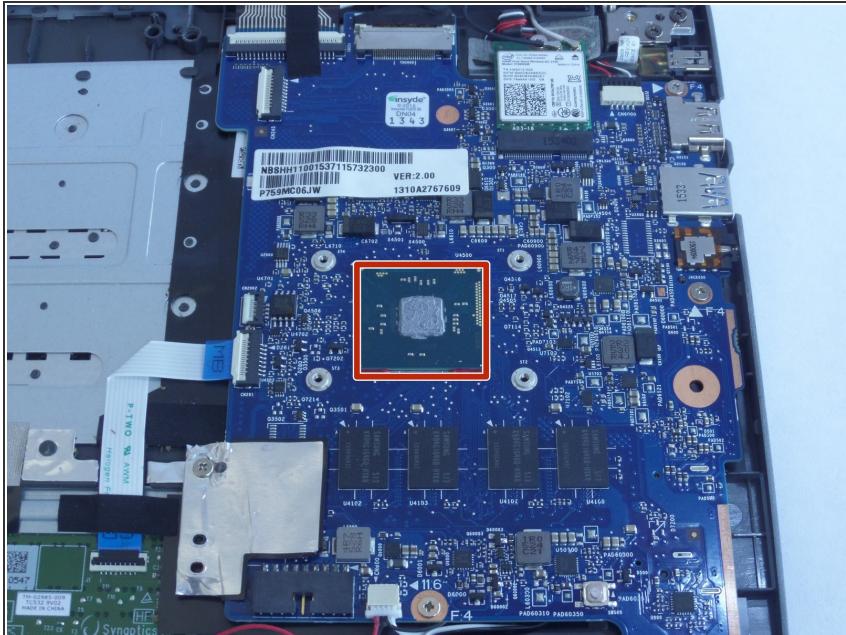

- Follow the guide below for the replacement of the thermal paste.

[How to Apply Thermal Paste](#)

To reassemble your device, follow these instructions in reverse order.