



# Acer Aspire One Cloudbook AO1-132-C3T3

## Battery Replacement

This guide will show you how to replace a faulty battery.

Written By: Brian Villa



## INTRODUCTION

This guide will explain how to safely remove the laptop's battery in order to replace it. Be careful not to rupture or otherwise harm the battery, as the chemicals inside can be dangerous.

### **TOOLS:**

- [Phillips Head Screwdriver: Size PH1 \(1\)](#)

### **PARTS:**


- [Acer 3ICP4/68/111, AP16A4K 11.25V 3770mAh \(1\)](#)

## Step 1 — Battery




- Remove eleven 4 mm Phillips #1 screws.
- Pull the backplate off using your fingers.

## Step 2

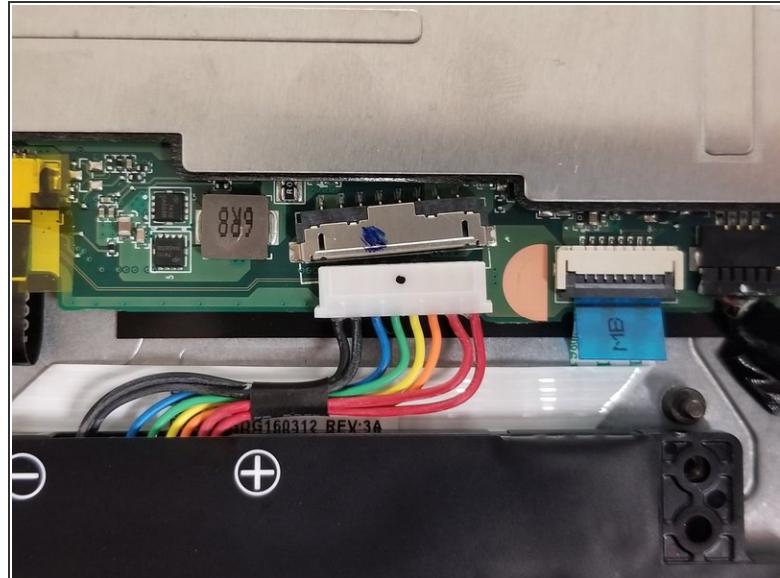

- Pull the rainbow cord out of the motherboard using the tabs on the sides.

## Step 3

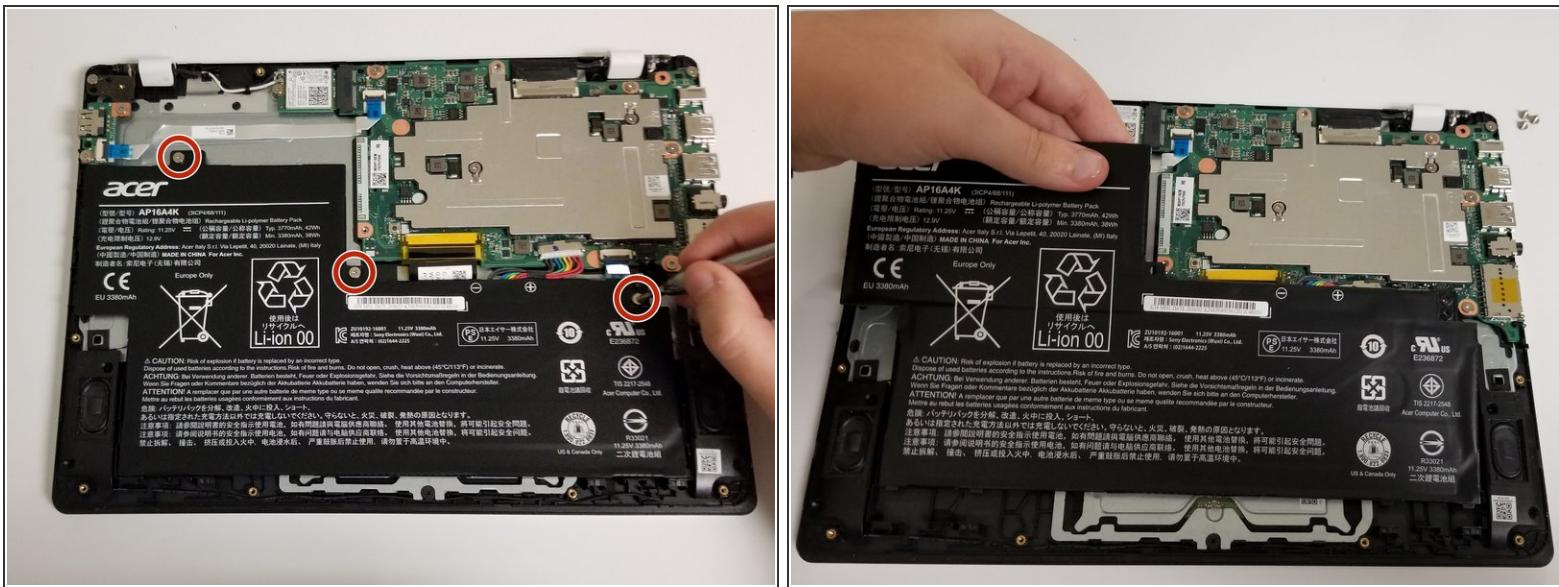

- Remove three 4 mm Phillips #1 screws holding down the battery.
- Lift the top edge of the battery and pull back towards the hinges to remove the battery.

To reassemble your device, follow these instructions in reverse order.