



# Acer Aspire One D270-1865 Battery Replacement

Replace the dead battery in your notebook so you can start using your computer again.

Written By: Kaley Stoker



## INTRODUCTION

The Aspire is a notebook laptop. The hard-drive of the Aspire varies by model type but was usually 250-500 GB. The memory in the device was factory set at 1 G. Similar to many other laptops at the time, the operating system was provided by Microsoft: Windows 7 Starter 32-bit.

## Step 1 — Battery



- Put on an anti-static wrist band, attaching the end onto a large piece of metal.
- Make sure the laptop is unplugged from its charging cord.
- Flip the laptop over to view the underside.
- Slide the right battery lock/unlock button to unlock, sliding the tab outward to unlock.
- At the same time, slide the left tab outwards while placing thumb on the grip strips of the battery and pull the battery outwards until it slides out.

To reassemble your device, follow these instructions in reverse order.