


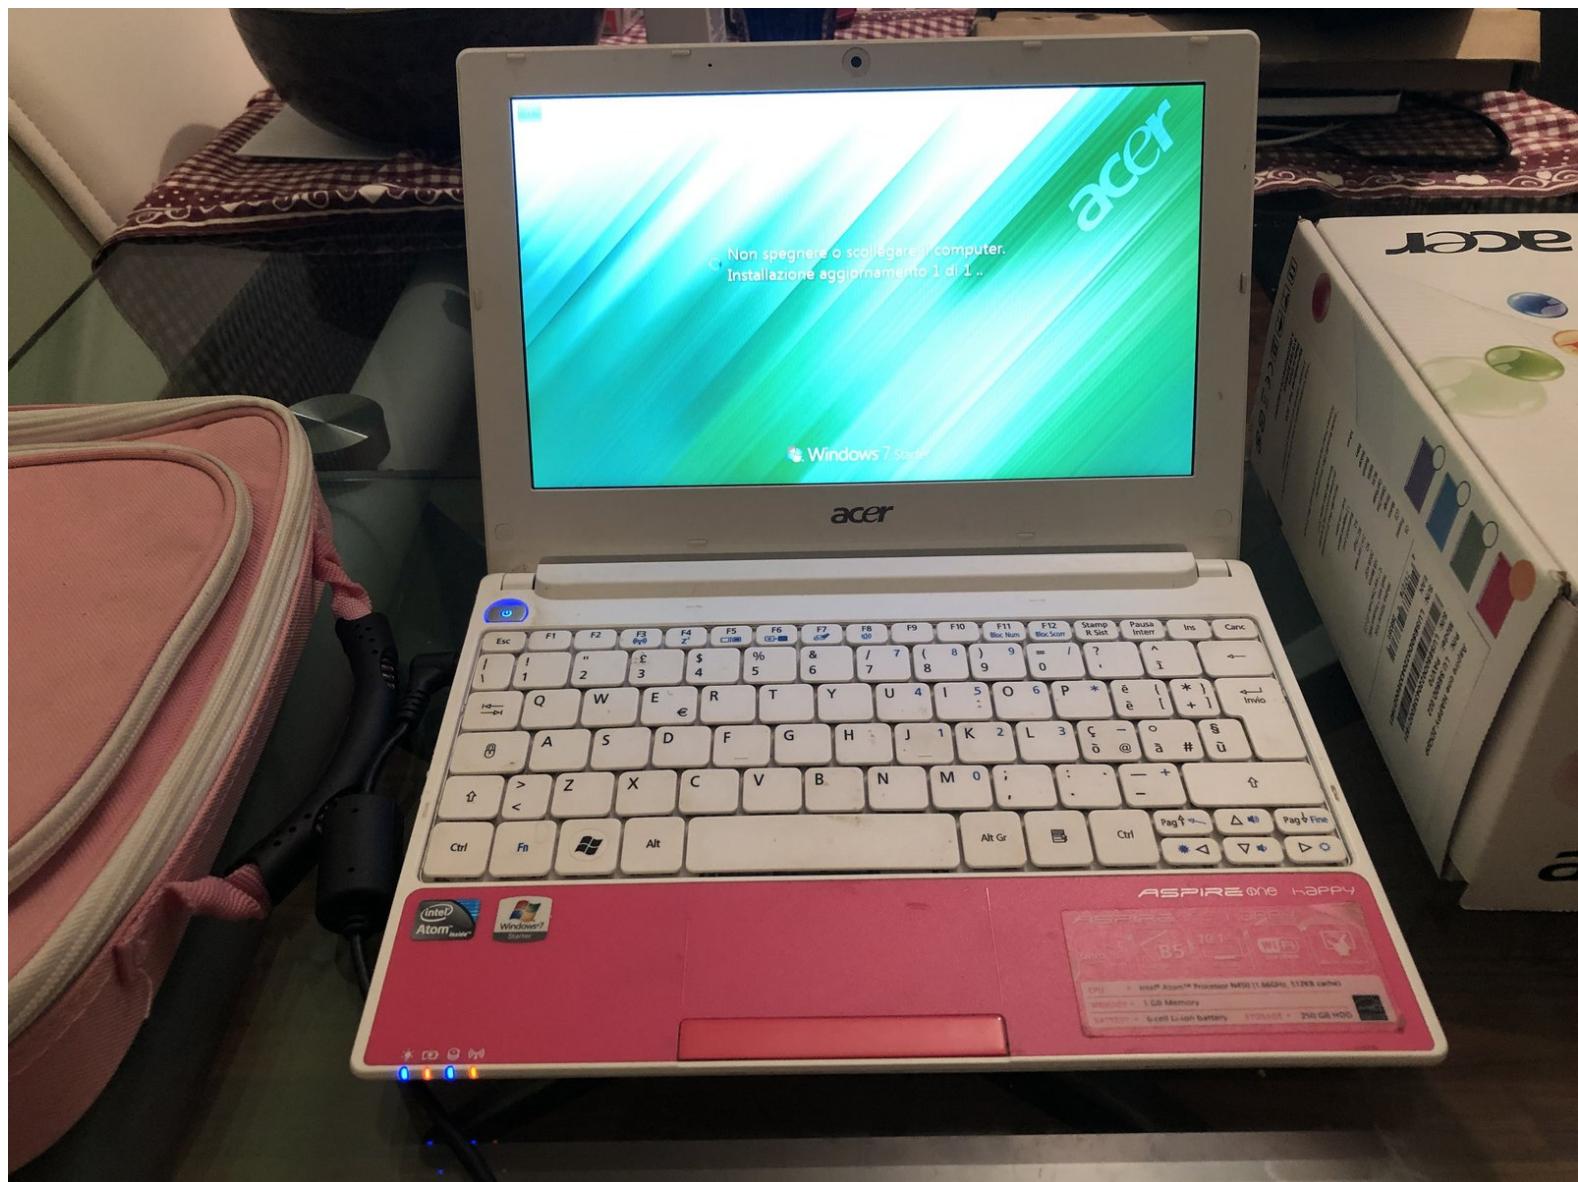


# Acer Aspire One Happy Display Replacement

Replace a broken or malfunctioning display

Written By: Smilzo



## Step 1 — Display

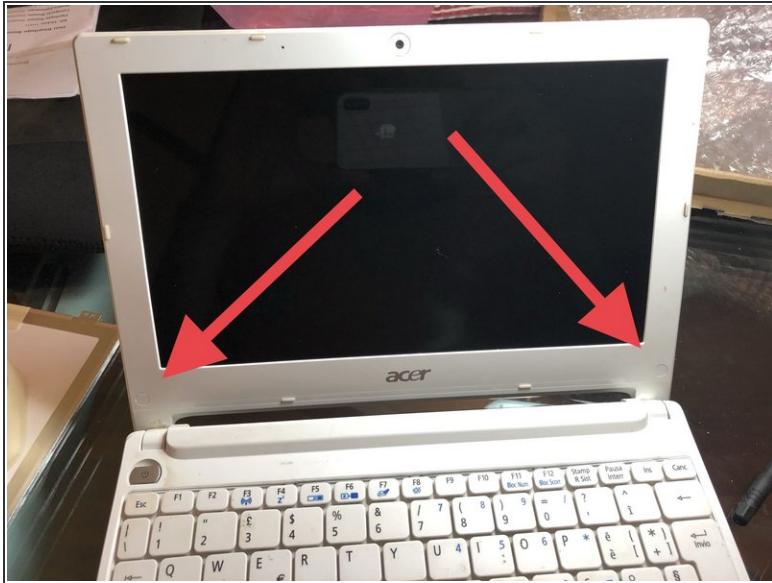

- Remove the adhesive that covers 2 screws.
- Remove the screws that connect the front frame from the back shell

## Step 2




- Remove the battery

## Step 3



- With a thin tool like a Jimmy or an opening pick, unhook the front bezel from the back shell along the perimeter. It is joined by pressure hooks that release upon touch.
- Remove the bezel

## Step 4

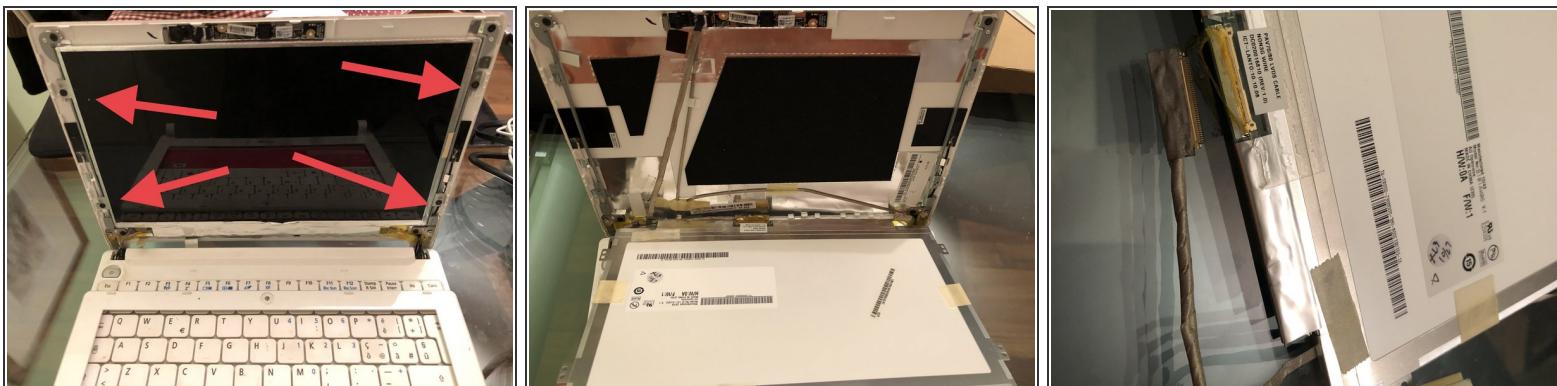

- Remove the 4 screws that secure the LCD panel from the rear casing
- Place the LCD on the keyboard, minding any of the cables that may still be connected
- Disconnect all of the cables and remove the LCD

To re-assemble your device, follow these steps in reverse order.