



Acer Aspire One Happy Dissassembly

Dissassembly of the Acer Aspire One Happy.

Written By: Smilzo



INTRODUCTION

Use this Dissassembly guide to learn how to disassemble certain parts of your Acer laptop

Step 1 — Acer Aspire One Happy Dissassembly




- Remove the keyboard by using a lever-like motion with thin tools on the joints along the keyboard.
- Carefully lift and disconnect the flat cable from the motherboard

Step 2



- Disconnect the battery

Step 3

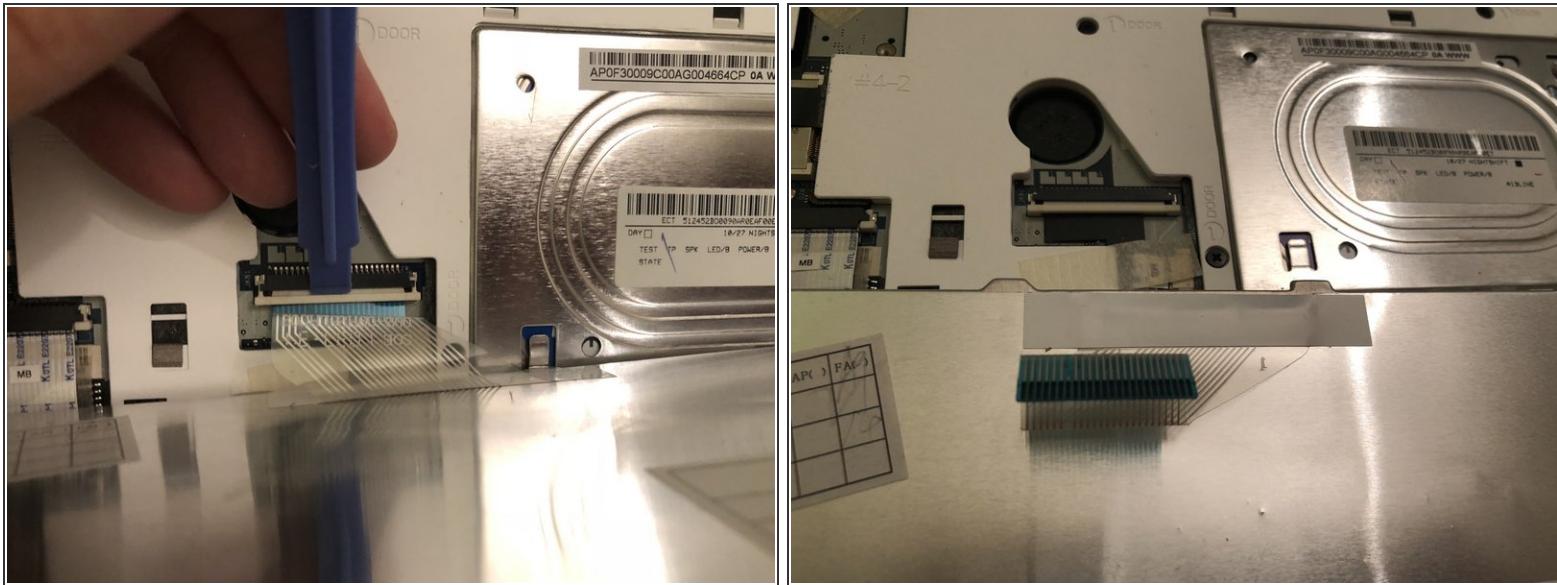

- Disconnect the keyboard connector and remove the keyboard


Step 4



- Remove the eight screws that secure the lower shell.
- Remove the lower shell

● *Spudgers and/or a Jimmy work nicely for this step.*

Step 5

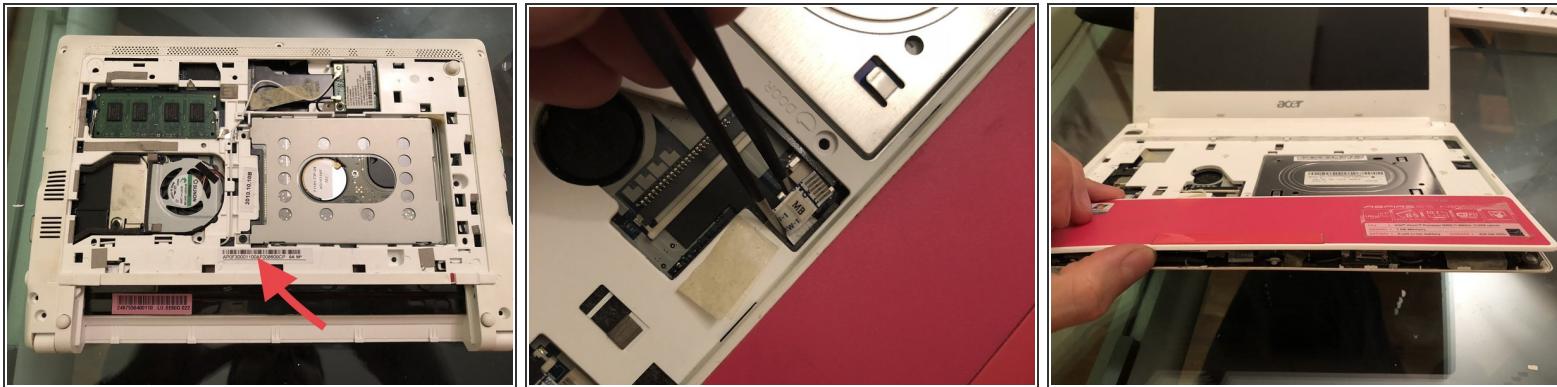


- Remove hard disk screw
- Disconnect the cable shown on image 2.
- With a thin tool, unhook the hooks that hold the upper shell together from the central shell. Separate them.

Step 6




- Separate the top case shell
- Remove the hard drive

Step 7

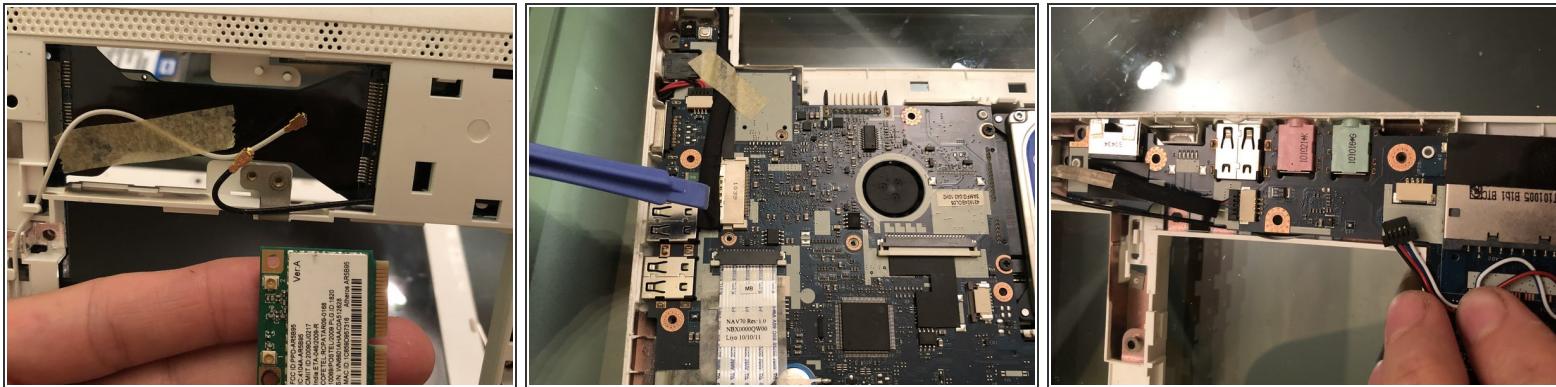


- Disconnect the WiFi card
- Disconnect the display cable

Step 8

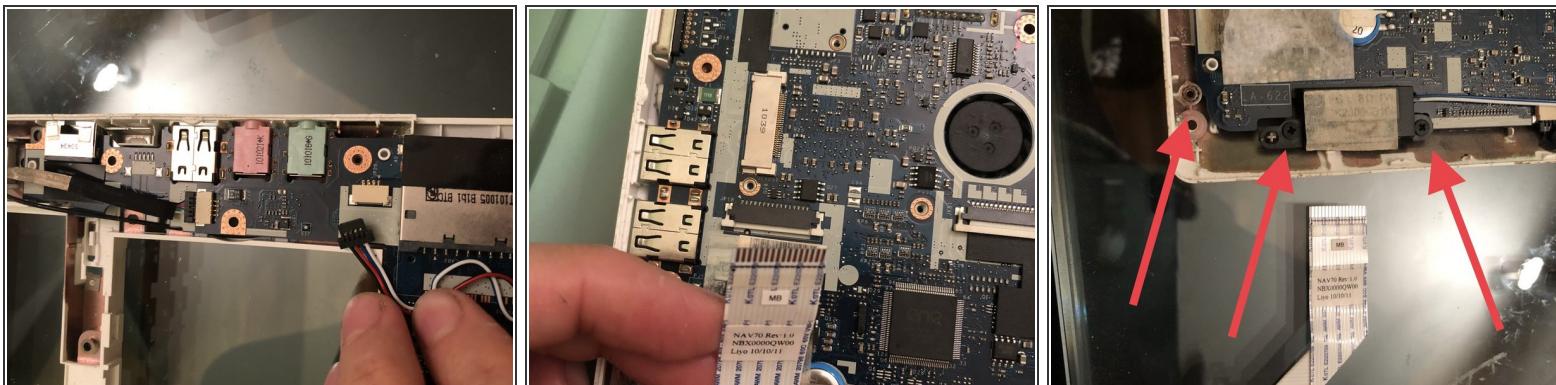


- Unclip the connectors
- Remove the 3 screws securing the card in place. Remove the card after it is free

Step 9

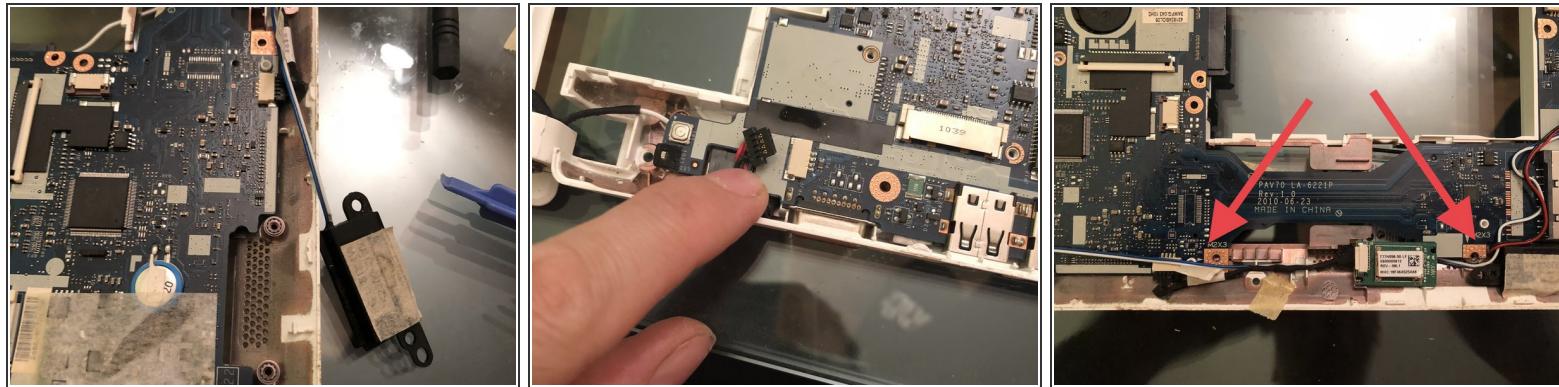


- Remove the speaker
- Release the connectors
- Remove the 2 screws that secure the motherboard to the laptop

Step 10

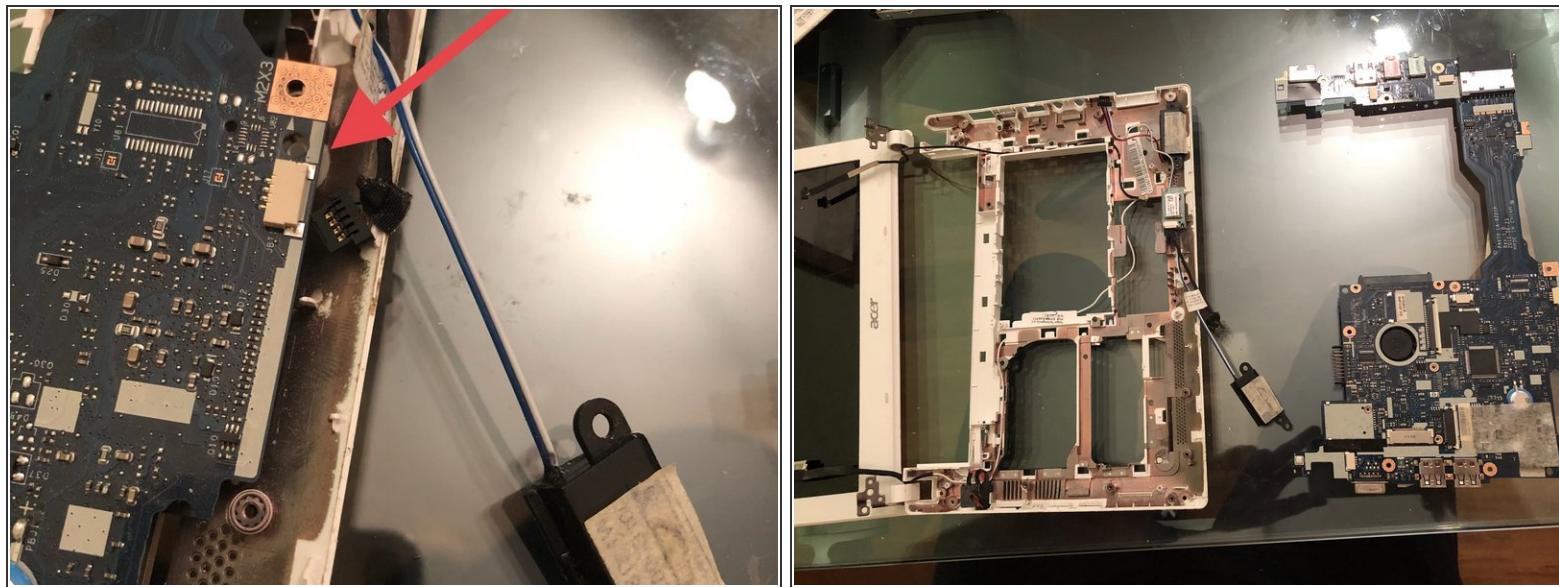

- Release the connectors
- Carefully remove the motherboard from the laptop

Step 11

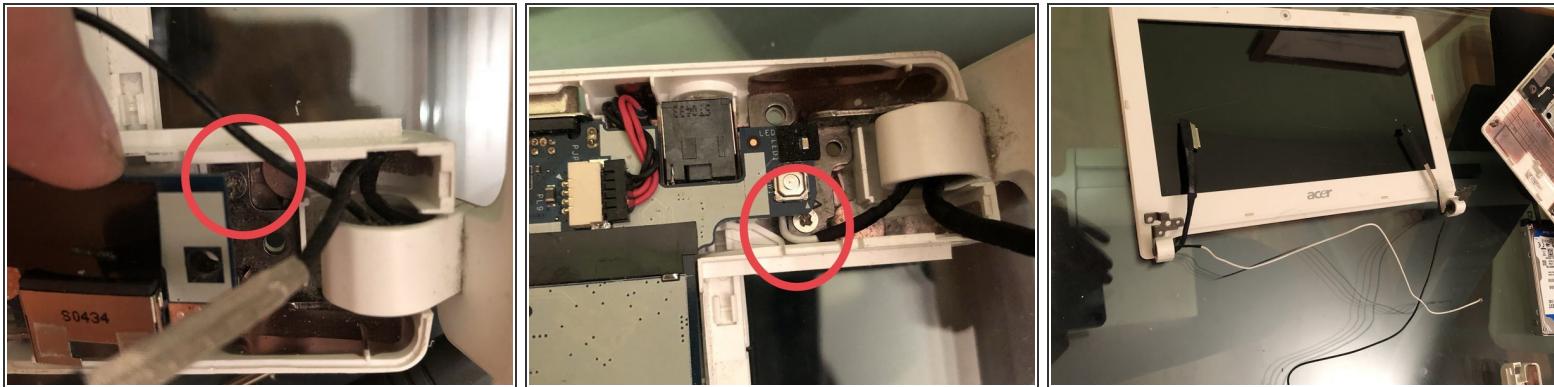


- Remove both of the left and right screws holding the display assembly to the laptop

Step 12



- Remove the adhesive that covers the 2 screws.
- With an opening pick or Jimmy, separate the bezel from the LCD assembly.
- Remove the bezel

Step 13

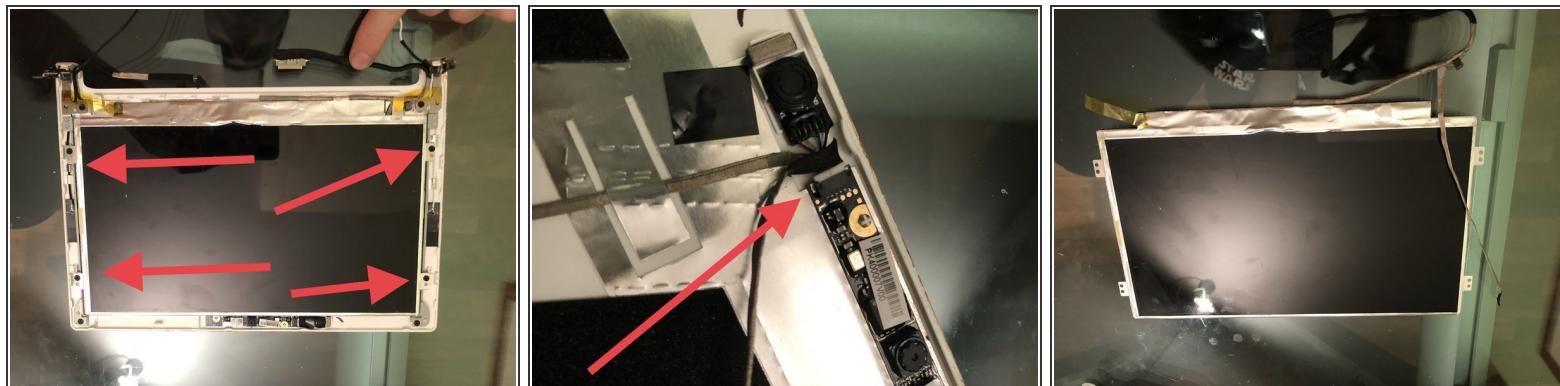

- Remove the 4 screws on the display
- Disconnect the display cable
- Remove the LCD

To reassemble your device, follow these steps in reverse order.