



# Acer Aspire R5-571T-59DC Battery Replacement

Replace the battery in your Acer Aspire R5-571T-59DC (Aspire R5) to bring power back to your laptop computer.

Written By: Kelly Johnston



This document was generated on 2019-09-22 07:30:36 PM (MST).

## INTRODUCTION

This guide shows the reader how to remove the back cover from their Acer Aspire R15 and replace the battery.


It may be necessary to replace this component if the laptop won't stay on while turned on, or is unable to hold a charge.

Before starting this guide, it is important to ensure the device is unplugged and powered off in order to avoid doing serious damage to the electronics.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

## Step 1 — Back Cover Panel

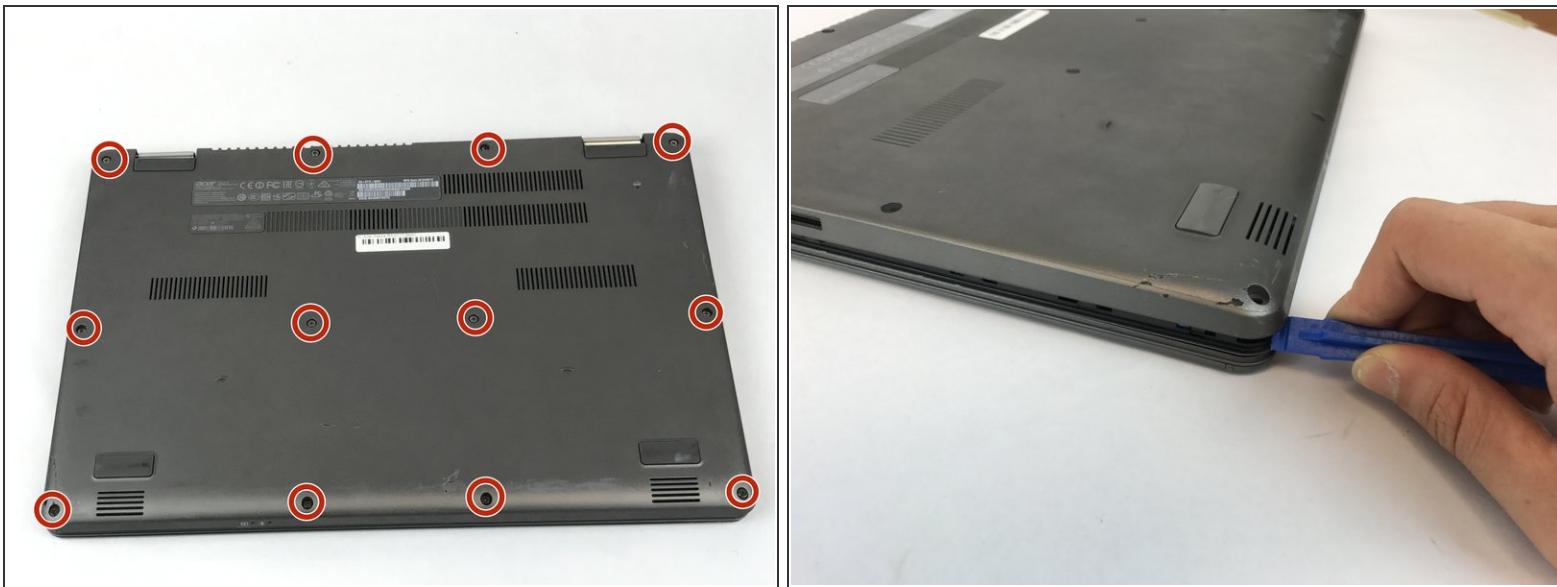

- Disconnect all power from the laptop and turn over so the bottom is facing you.
- Remove the twelve 07.mm Phillips #0 screws from the back cover.
- Work a plastic opening tool underneath and around the perimeter of the bottom cover.
- Once unclipped, remove the bottom cover.

## Step 2 — Battery



- Remove the two 0.7mm Phillips #00 screws from the battery and unplug the battery from the motherboard.
- Lift the battery out of the case.

To reassemble your device, follow these instructions in reverse order.