




Acer Aspire R7-572-6423 Battery Replacement

Battery replacement guide for the Acer Aspire R7-572-6423 laptop.

Written By: Gavin Hill

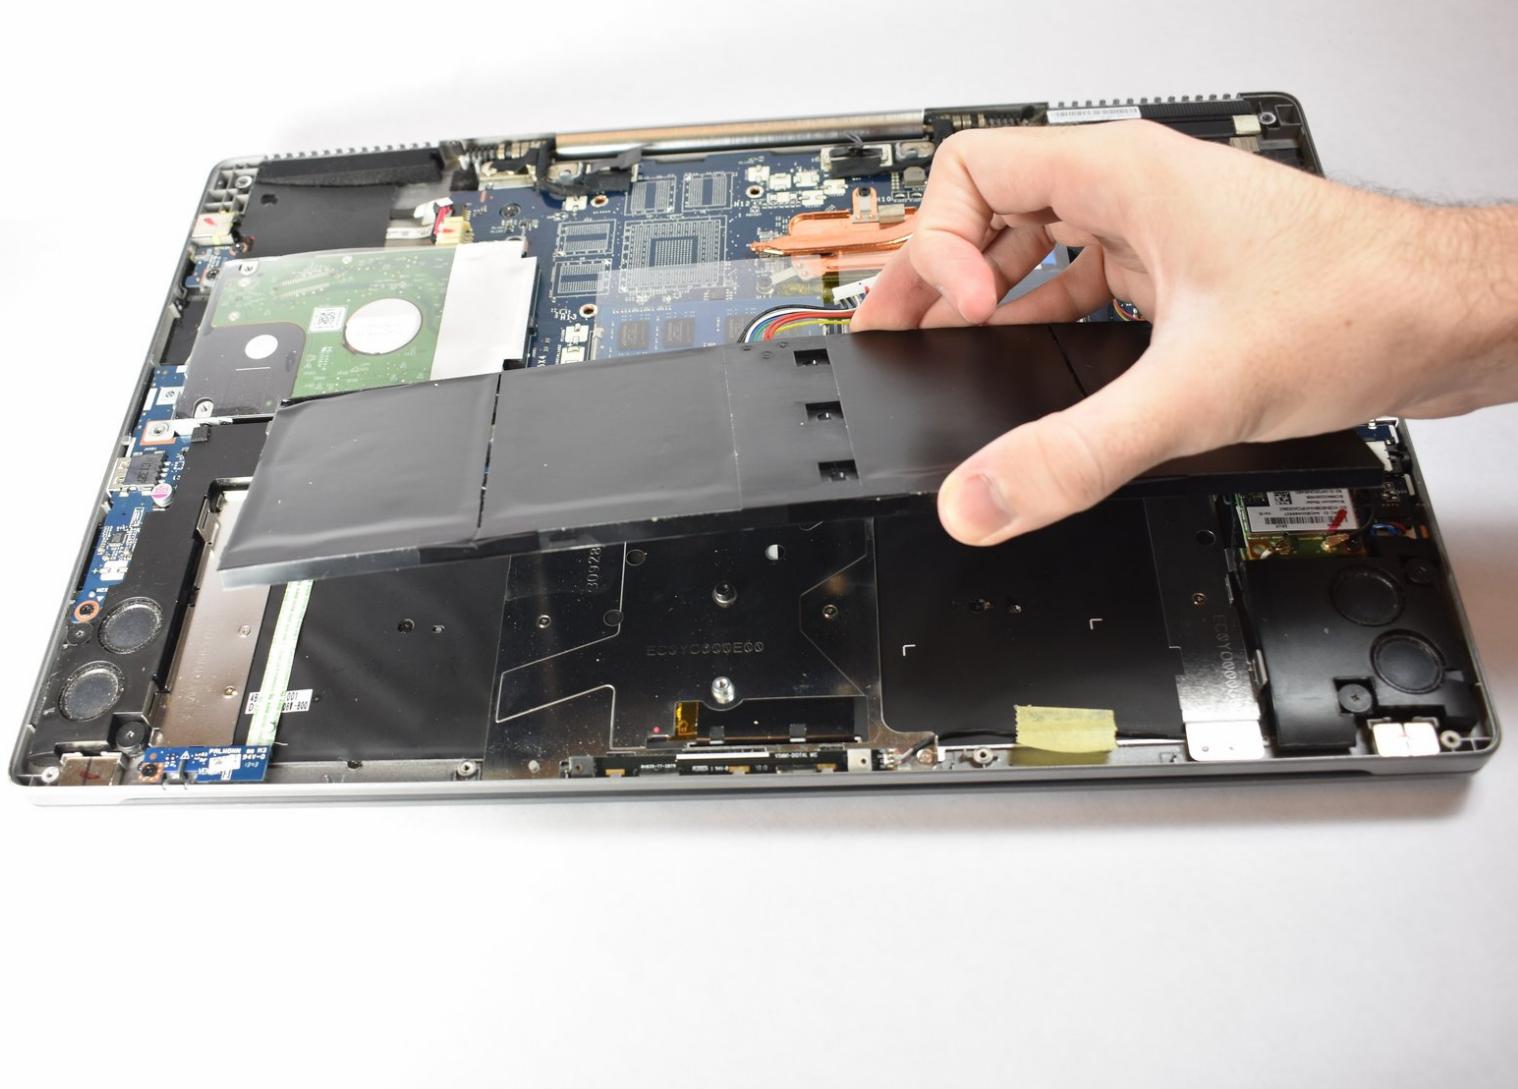

INTRODUCTION

The battery is internally located and requires disassembly in order to replace it.

TOOLS:

- Spudger (1)
- T9 Torx Screwdriver (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

PARTS:


- Acer AP13B3K and AP13B8K Replacement Laptop Battery (1)

Step 1 — Battery



⚠ Turn off the laptop and disconnect the power adapter before attempting this guide. Failure to do so can result in a shock hazard.

Step 2

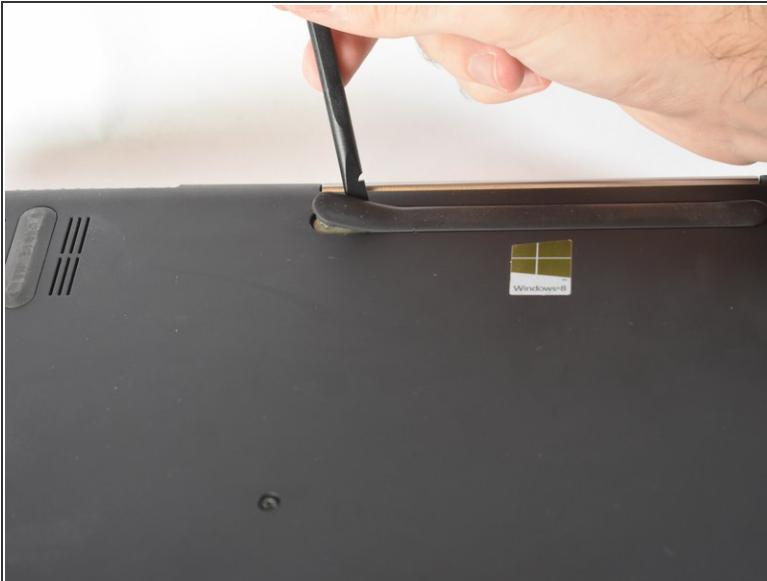

- Remove the top and middle rubber feet under the laptop to reveal hidden screws.

Step 3




- Remove the five 6 mm T9 screws.
- Remove the eight 10 mm T9 screws.

Step 4



- Remove the back cover.


Step 5

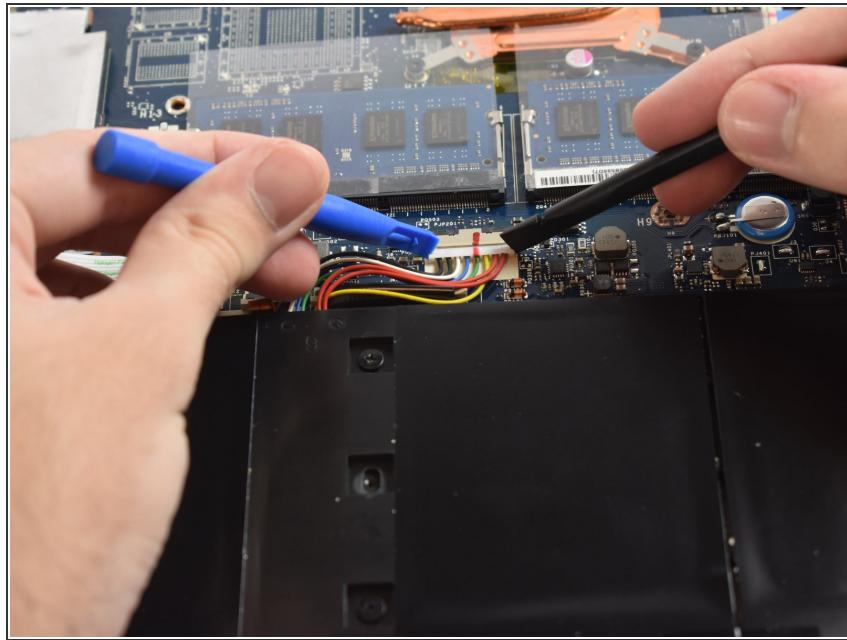

- Unplug the ribbon cable connecting the battery to the motherboard.



⚠ Be careful around the motherboard, as it is easily damaged.

Step 6

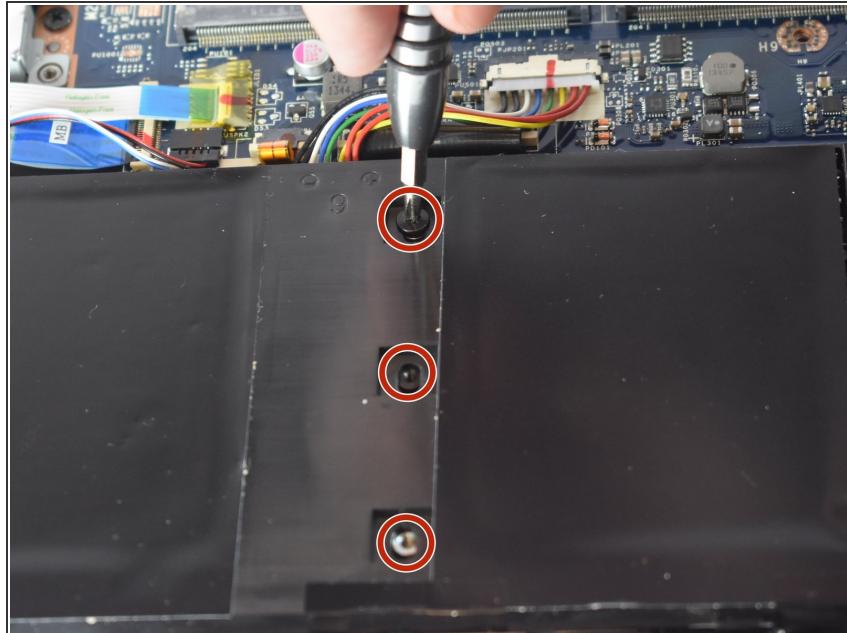

- Remove the three 4 mm Phillips #1 screws securing the battery.

Step 7

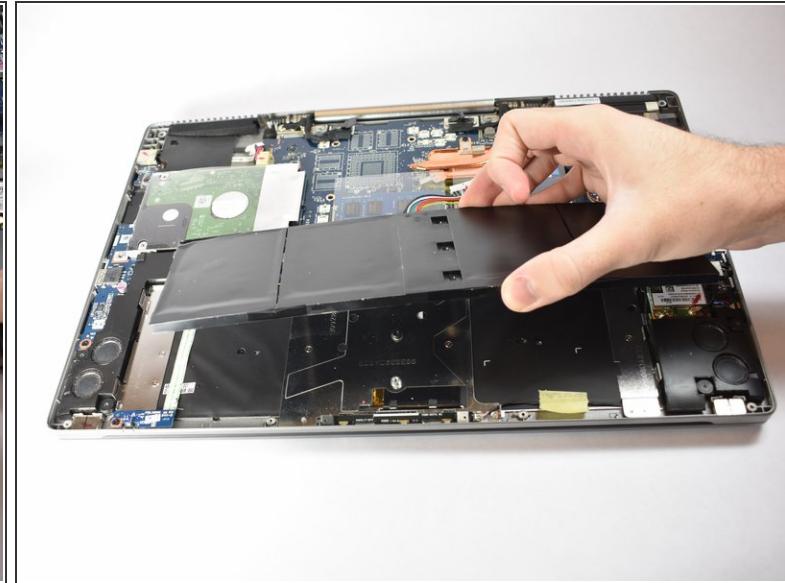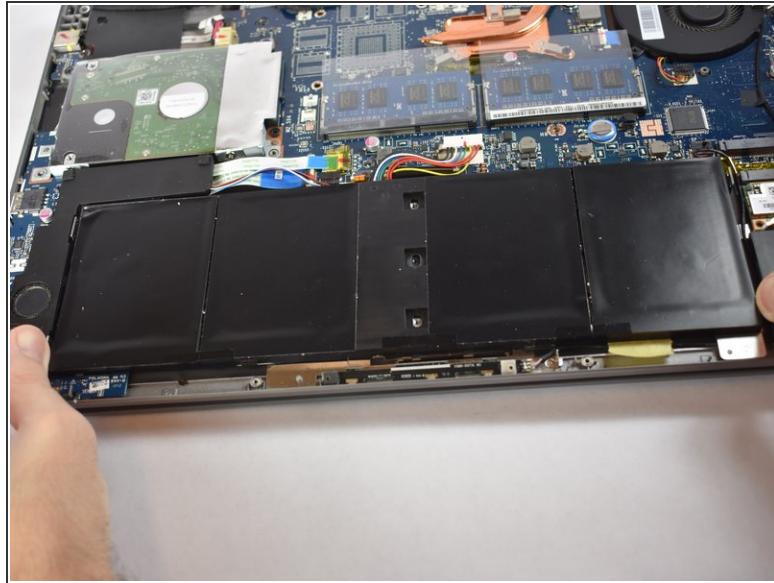

- Pull open the clips on either side of the battery to free it from the case.
- Remove the battery from the computer.

To reassemble your device, follow these instructions in reverse order.