




# Acer Aspire R7-572-6423 RAM Replacement

This guide is a step-by-step walk-through of removing and replacing the RAM.

Written By: Evan Casey

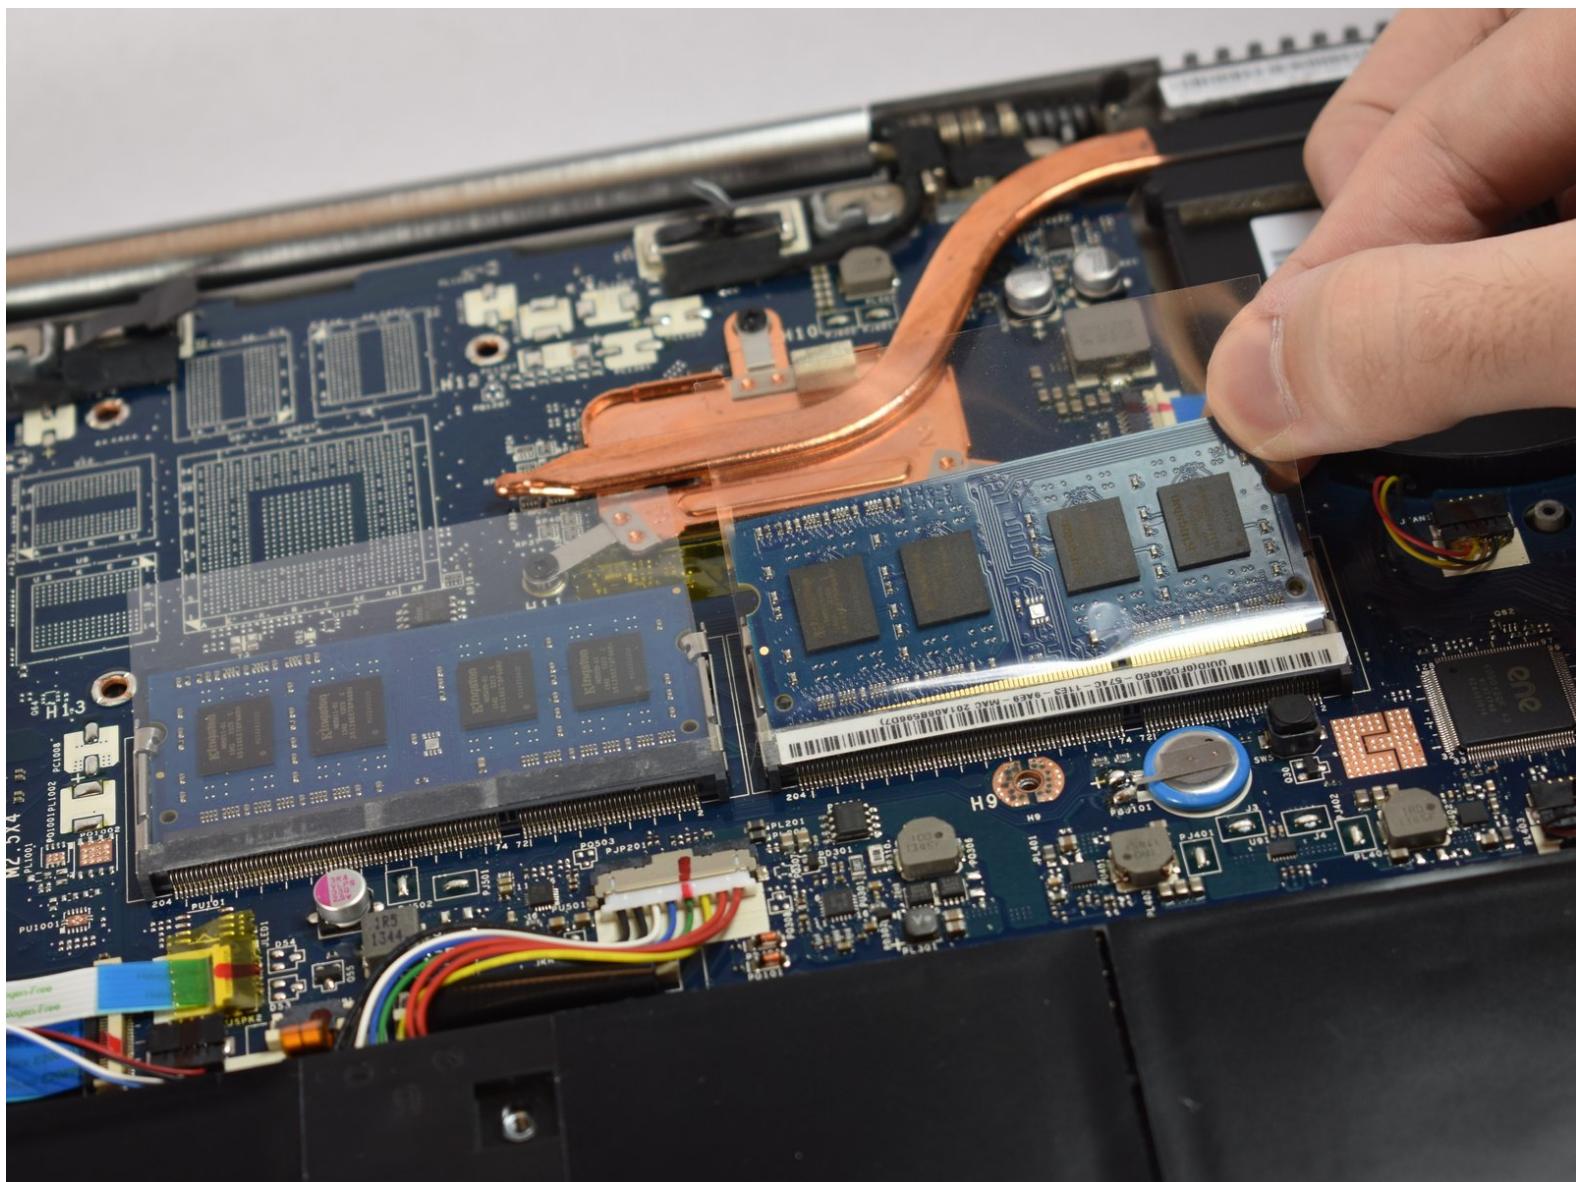

## INTRODUCTION

RAM, or random-access memory, is an important component to keep your computer running smoothly. Occasionally, RAM can wear out or become unseated, and need to be replaced.

### TOOLS:

- [Spudger](#) (1)
- [T9 Torx Screwdriver](#) (1)

## Step 1 — RAM



 Turn off the laptop and disconnect the power adapter before attempting this guide. Failure to do so can result in a shock hazard.

## Step 2





- Remove the top and middle grips that conceal 3 additional screws.
- Remove the (8) 10mm T9 screws.
- Remove the (5) 6mm T9 screws.

## Step 3



- Remove back panel.

## Step 4

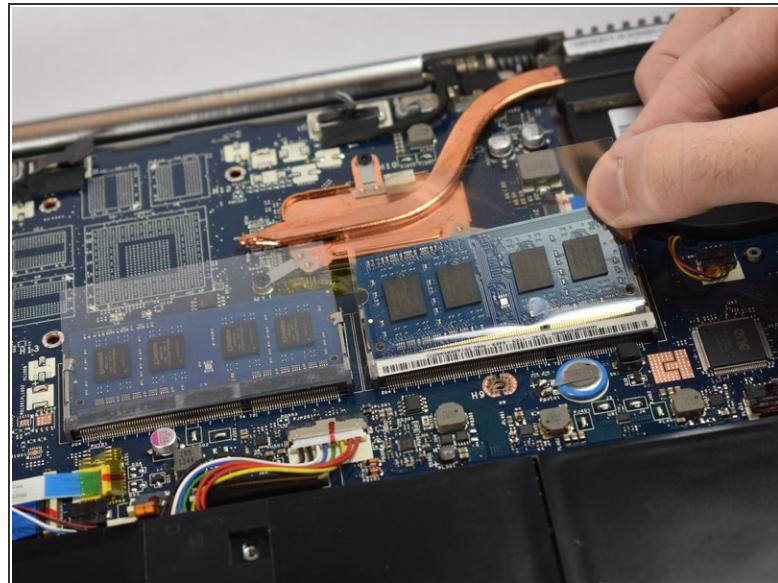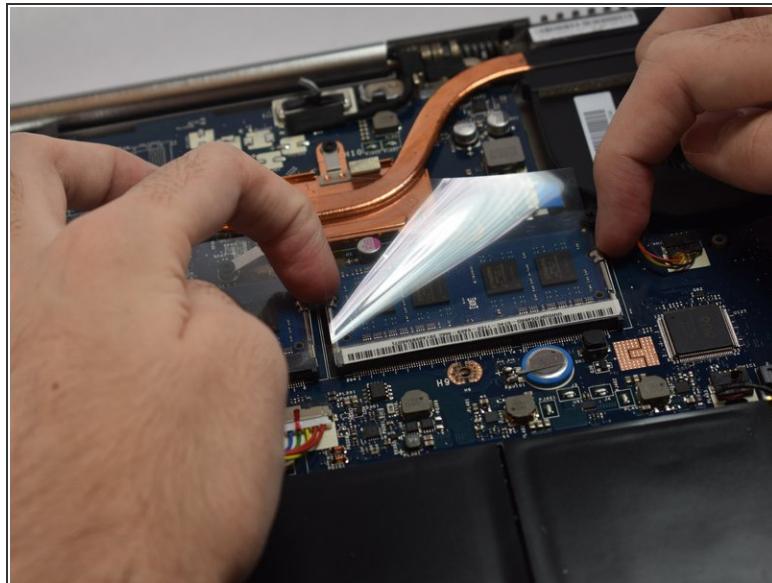

- Press in on the release levers on either side of the stick of RAM.
- Carefully lift and remove the RAM.

To reassemble your device, follow these instructions in reverse order.