



# Acer Aspire S7-392-6484 Battery Replacement

Replace the battery in the Acer Aspire to improve short or nonexistent battery life.

Written By: Nicholas Wise




## INTRODUCTION

To replace the battery in the Acer Aspire, some common tools will be needed. A T6 Torx screwdriver as well as a Phillips #01 screwdriver will be needed to remove screws on the back panel and to remove the battery itself. To determine if the battery is in need of replacement, please refer to the troubleshooting page for this device.

## TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery

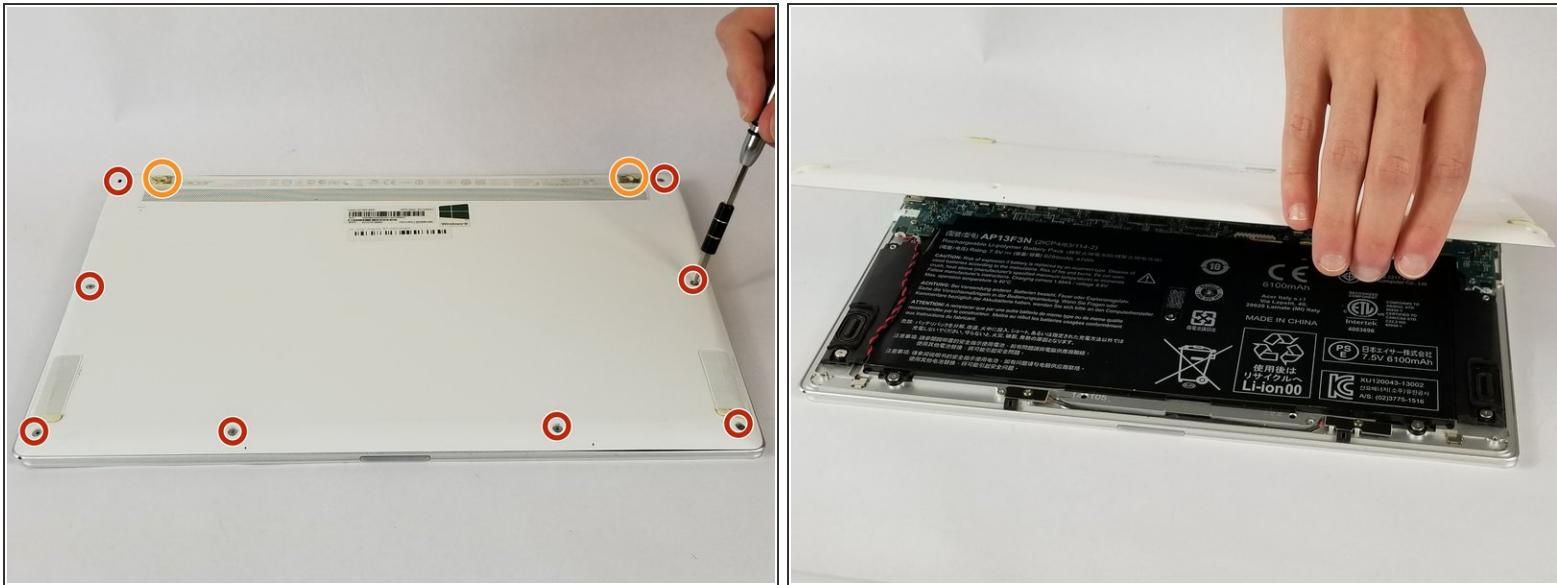

- Remove all marked 3mm screws from the back panel of the device using a T6 Torx screwdriver.
- Remove the orange marked screws using a T6 Torx screwdriver. Note that these screws are 4mm in length.
- After all marked screws have been removed, lift up back panel to expose internal parts.

## Step 2




- Unscrew the marked 1.5 mm screws with a Phillips #01 screwdriver.

## Step 3



**⚠** Disconnect the cable located at the top of the battery. Be careful to pull the cable horizontally, not vertically.

## Step 4

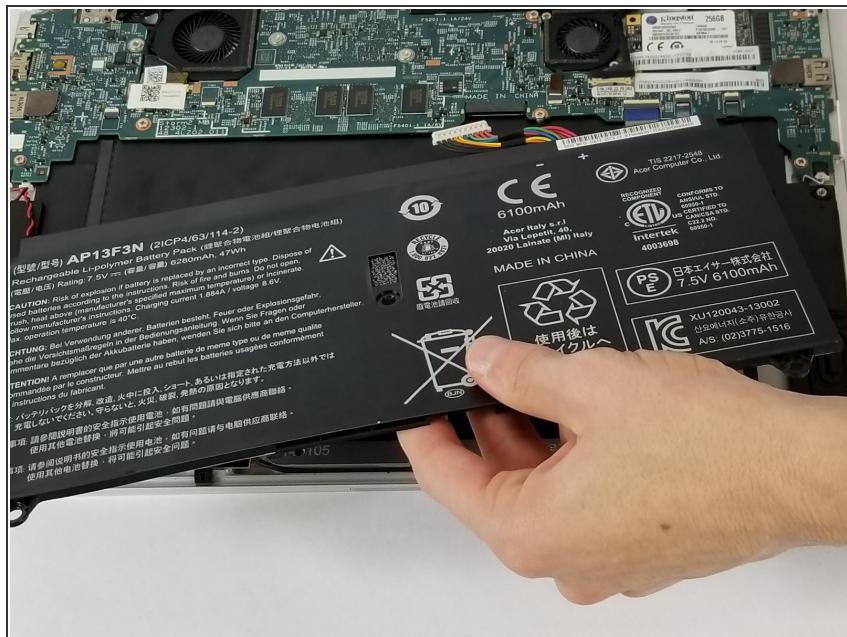

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.