



Acer Aspire TimelineX 1830T-68U118 Battery Replacement

Replace a slow or faulty battery.

Written By: Brenna Waterbury



INTRODUCTION

To replace a battery, follow this step by step guide. Your battery may be running unusually slow or stopped working completely. Replacing the battery will solve your issues in this area.

Step 1 — Battery



- Turn your laptop over, and find the laptop battery release button locks for your Acer laptop.

Step 2



- Hold the battery release button, and pull the battery out of the laptop.

To reassemble your device, follow these instructions in reverse order.