



Acer Aspire TimelineX 1830T-68U118 Hard Drive Replacement

Replace your laptop's hard drive to speed up its slow processing.

Written By: Brenna Waterbury



INTRODUCTION

The hard drive is the storage location for the laptop's memory and processing, the data compartment. This guide offers step by step instructions to replace the hard drive.

TOOLS:

- Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Hard Drive



 Remove the device's battery before beginning.

- Turn laptop so under side is facing up.
- Locate the hard drive door and unscrew the 5 screws using PH0 mm Phillips Head.

Step 2



- Pry open hard drive cover using the Spudger tool.

Step 3



- Remove screw attached to the hard drive using the PH0 mm Phillips Head.
- The hard drive can now be removed from the device.

To reassemble your device, follow these instructions in reverse order.