



# Acer Aspire TimelineX 4820T-6645 Wifi Module Replacement

This guide will teach you how to remove and replace the wifi module in your Acer Aspire TimelineX 4820T.

Written By: Dylan Bryda



This document was generated on 2020-02-14 10:33:01 PM (MST).

## INTRODUCTION

If your WiFi module is malfunctioning use this guide to remove and replace the device, to do this you will need a replacement WiFi module, tweezers and a PH 1 Philips head screwdriver. This is a simple process and should not require any in depth knowledge of computers to perform.

### TOOLS:

- Phillips Head Screwdriver: Size PH1 (1)
- Tweezers (1)

### PARTS:

- Acer InviLink WLAN Module (1)

## Step 1 — Battery




- Power down the laptop.
- Turn the laptop over so the bottom is facing up and the battery is facing towards you.

## Step 2




- The tab on the right is a locking tab. Slide this tab to the right to unlock it (the red should now be showing).
- Slide the left tab to the left and hold it there.

## Step 3

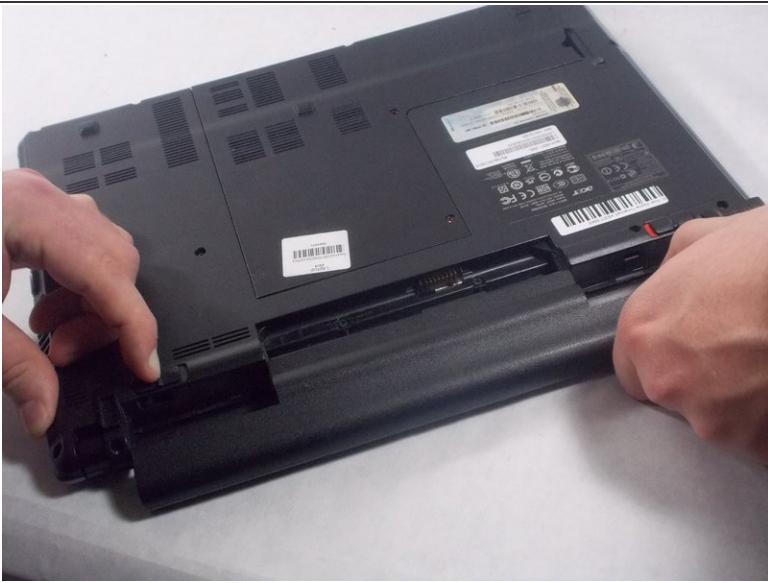

- While holding the left tab to the left the battery should easily pull out of the laptop.

## Step 4 — Wifi Module

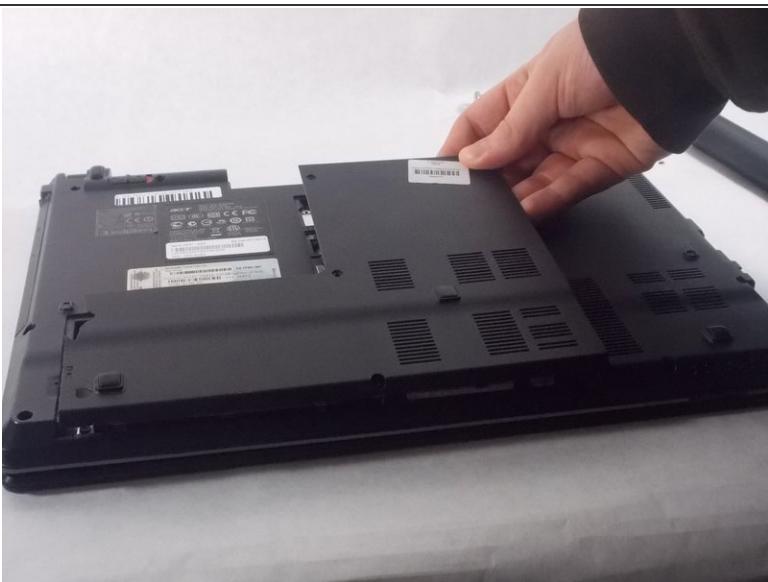

- Flip the laptop over and remove screws (PH#1, 8mm length) holding the back cover in place
- Remove back cover from your laptop

## Step 5



- Disconnect the two antenna cables from the WLAN board as shown below


*(i)* Black wire is terminal 1(left), white wire is terminal 2(right)

## Step 6



- Remove the screw(PH#1, 3mm length) holding the WLAN board to the laptop

## Step 7

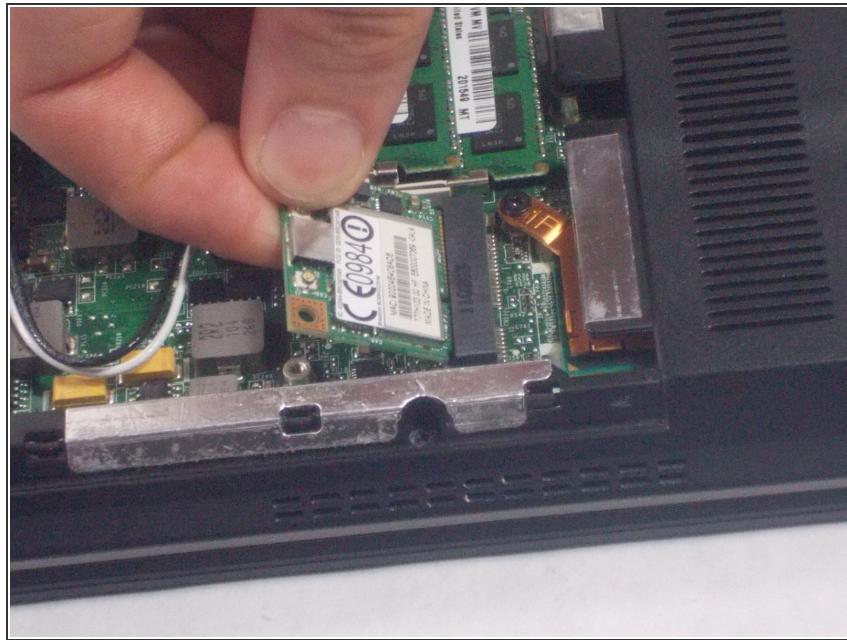

- Detach and remove the WLAN board from the WLAN socket

To reassemble your device, follow these instructions in reverse order.