



# Acer Aspire V3-472p-324J Battery Replacement

In this guide we will show you how to replace the battery in your Acer Aspire notebook.

Written By: Chris Arnone



## INTRODUCTION

In this guide you will learn how to disassemble your laptop, remove the battery and replace it.

### TOOLS:

- [JIS #1 \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Anti-Static Mat \(1\)](#)

## Step 1 — Battery




- First you will flip your laptop upside down so the battery side is facing up.

## Step 2



- Once upside down, you will find the battery here.

## Step 3

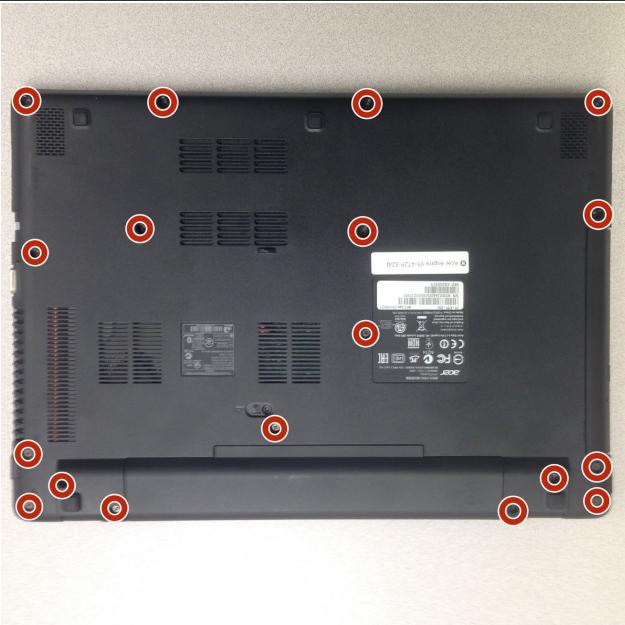

- In order to access the battery you will need to remove the 18 5mm screws. Using your Phillips J1 bit remove the screws.

## Step 4




- Stand your laptop up on its side to find the seams.

## Step 5




- Carefully insert your plastic opening tool into the seam and move up and down to separate the back panel from the front. Repeat this process all around the laptop until all sides have been separated.

## Step 6

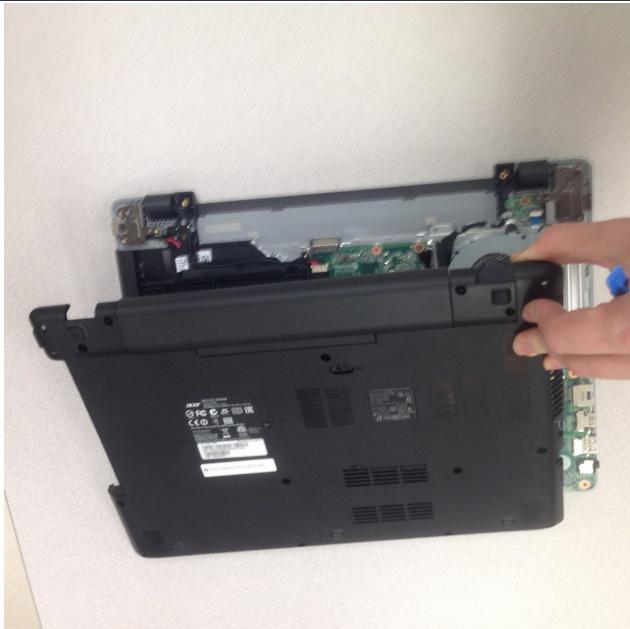

- Remove the bottom plastic panel from the top.

## Step 7

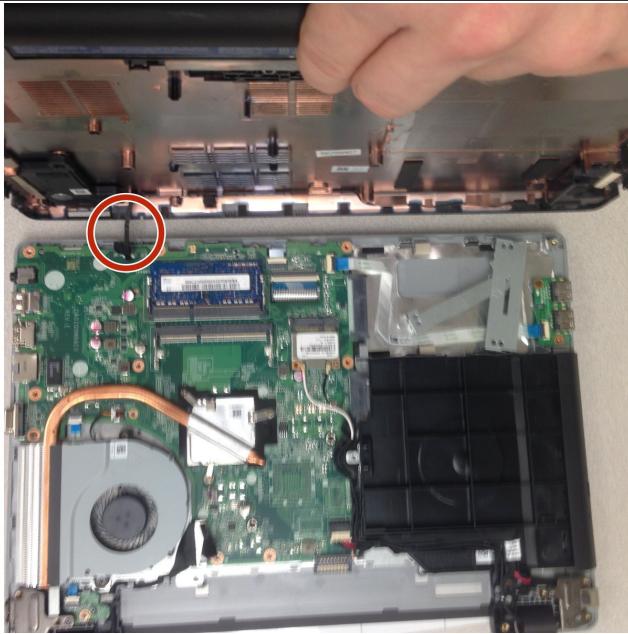


- Locate the laptop speaker connector.

## Step 8




- Gently remove the speaker connector.

## Step 9

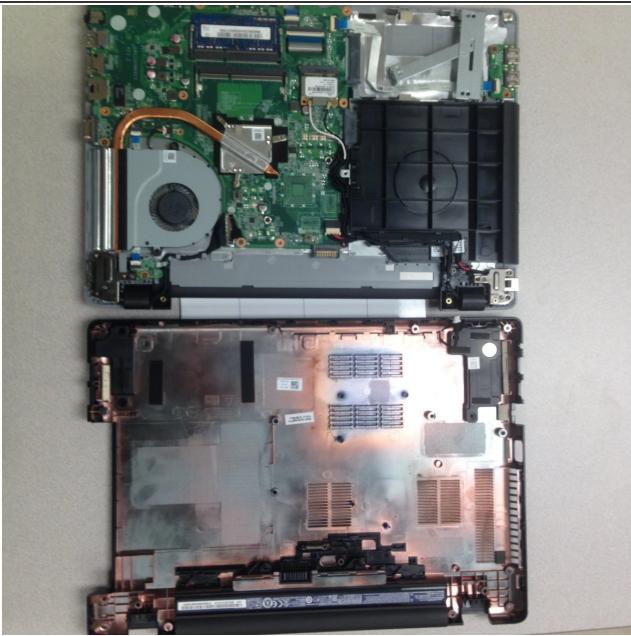


- Once you have disconnected the speakers you will now have two separate pieces.

## Step 10

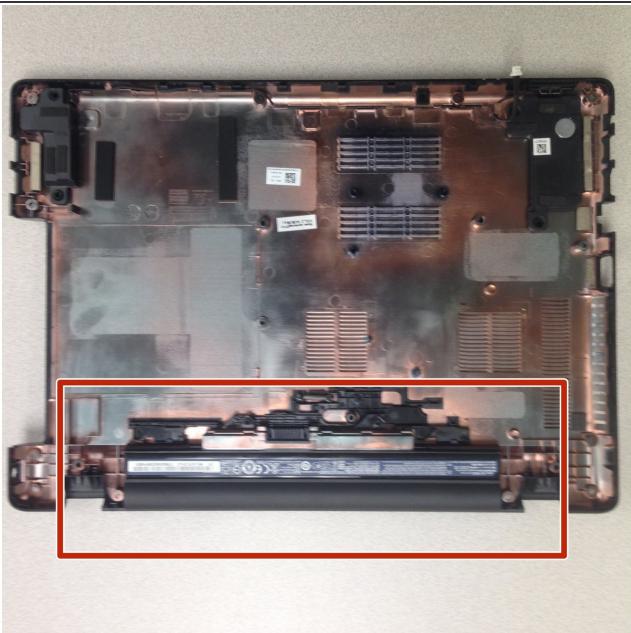


- The battery is located on the bottom panel.

## Step 11

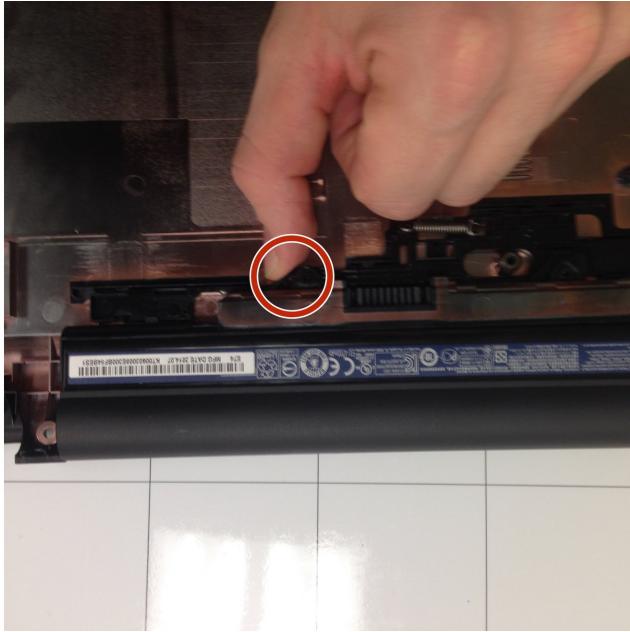

- Use the plastic lever here and slide it to the side.

## Step 12

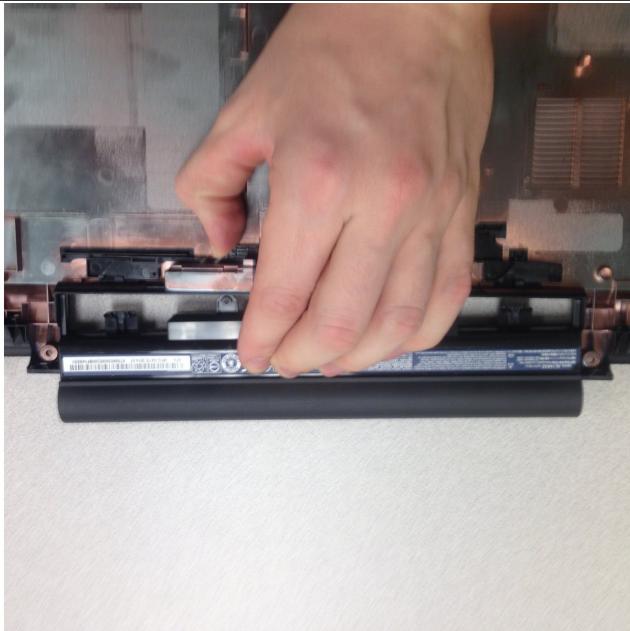

- While holding the plastic lever, gently separate the battery from the bottom panel of the laptop.

## Step 13



- Take the old battery and dispose per manufacturers website.

To reassemble your device, follow these instructions in reverse order.