



# Acer Aspire V3-551-8887 Optical Drive Replacement

The Optical Drive, also known as the Disc Reader, can often stop reading CDs properly and need to be replaced.

Written By: Ryan Holland



This document was generated on 2019-09-19 02:36:46 PM (MST).

## INTRODUCTION

Anyone can replace the optical drive in this Acer laptop.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Optical Drive



- Locate and remove the main screw holding the optical drive in place.

## Step 2



- Using the spudger, remove the optical drive from the side of the computer.

## Step 3



- The Optical Drive Cavity is now empty

To reassemble your device, follow these instructions in reverse order.