


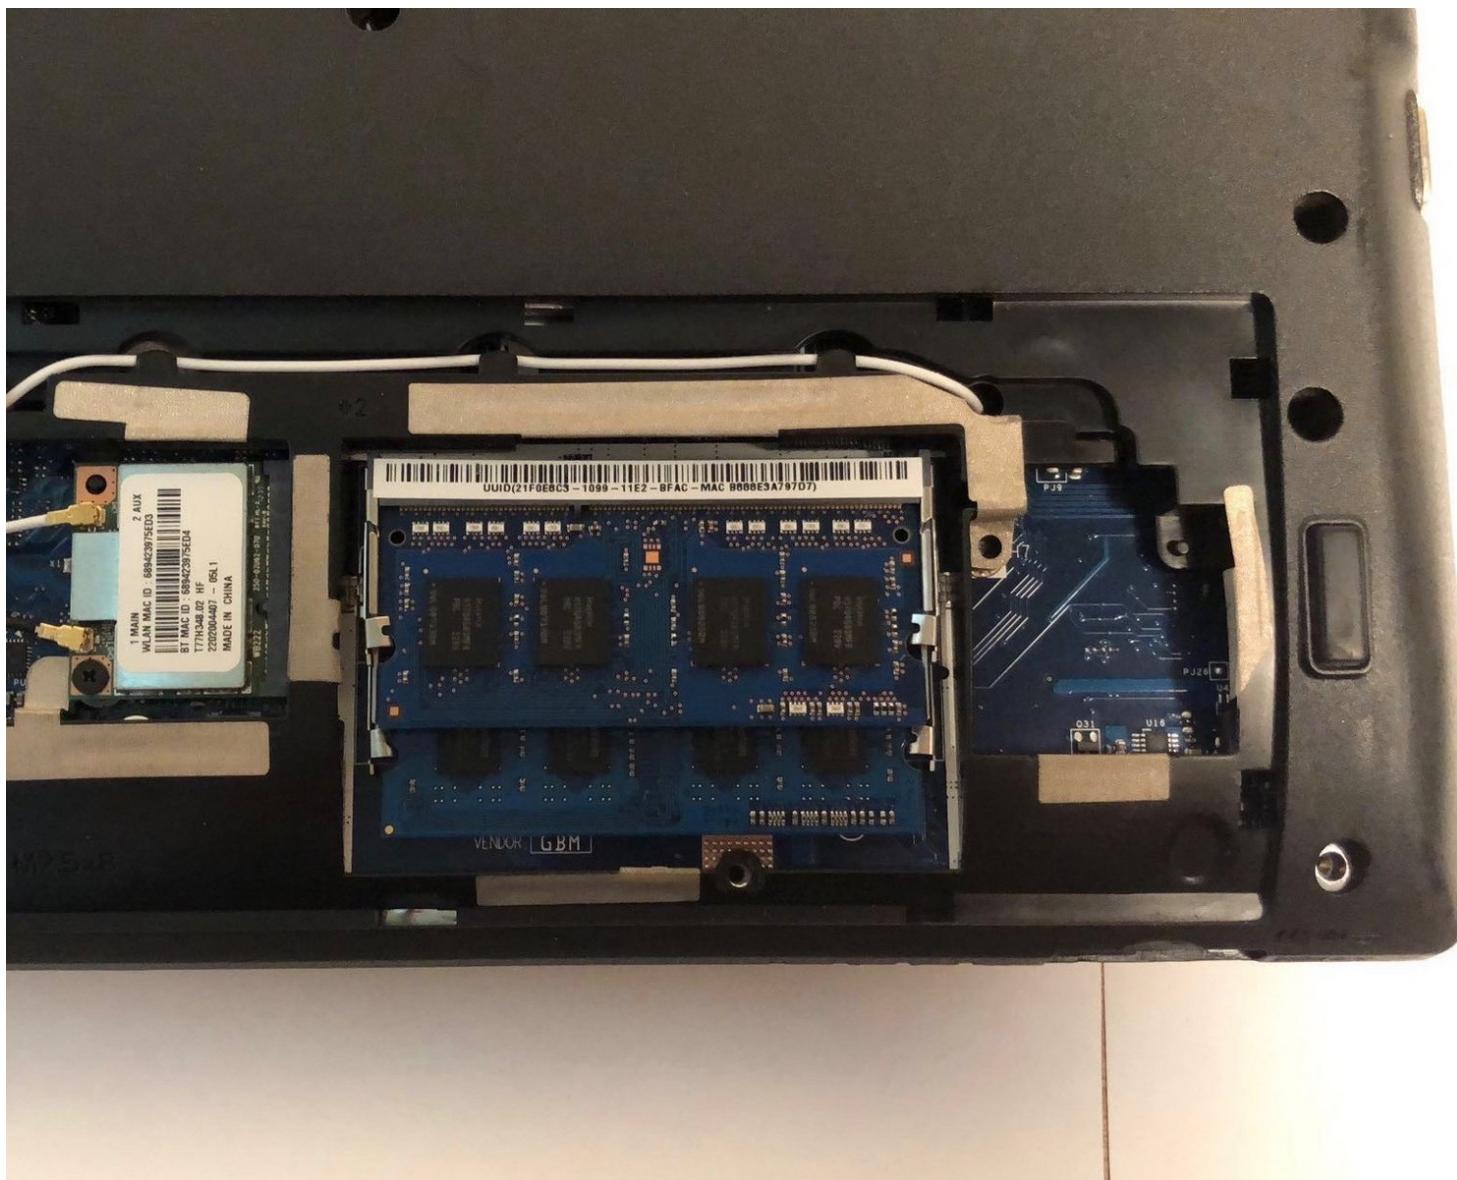

Acer Aspire V3-571G RAM Replacement

This guide will demonstrate how to replace the RAM in the Acer Aspire V3-571G laptop.


Written By: Erica Gomes



 **TOOLS:**


- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Memory Chip (RAM)

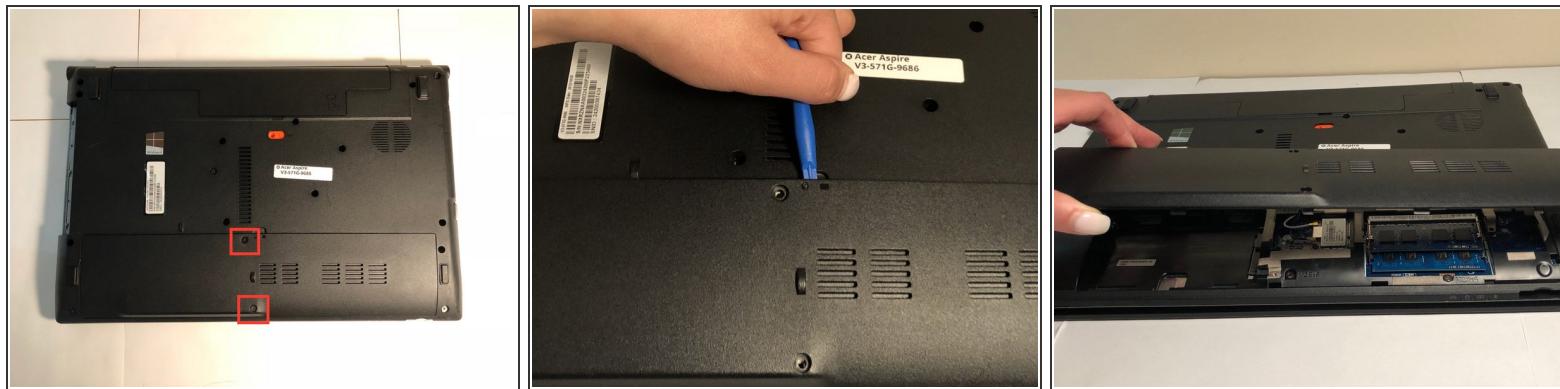


- Flipping your laptop over, the RAM is located on the lower half of the laptop
- Remove the two screws shown on diagram using a Phillips #00 screwdriver
- Use the opening tool to help lift and remove the lower case

Step 2

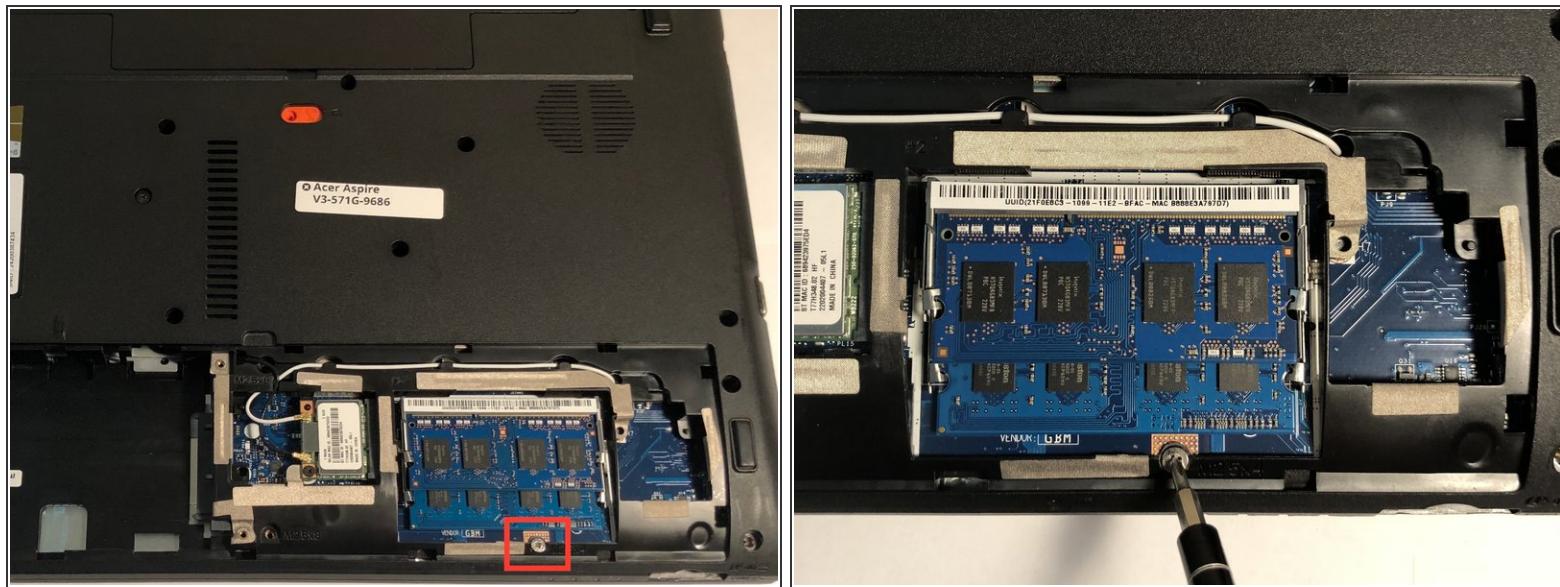

- Remove the screw that is securing the RAM chip in place

Step 3

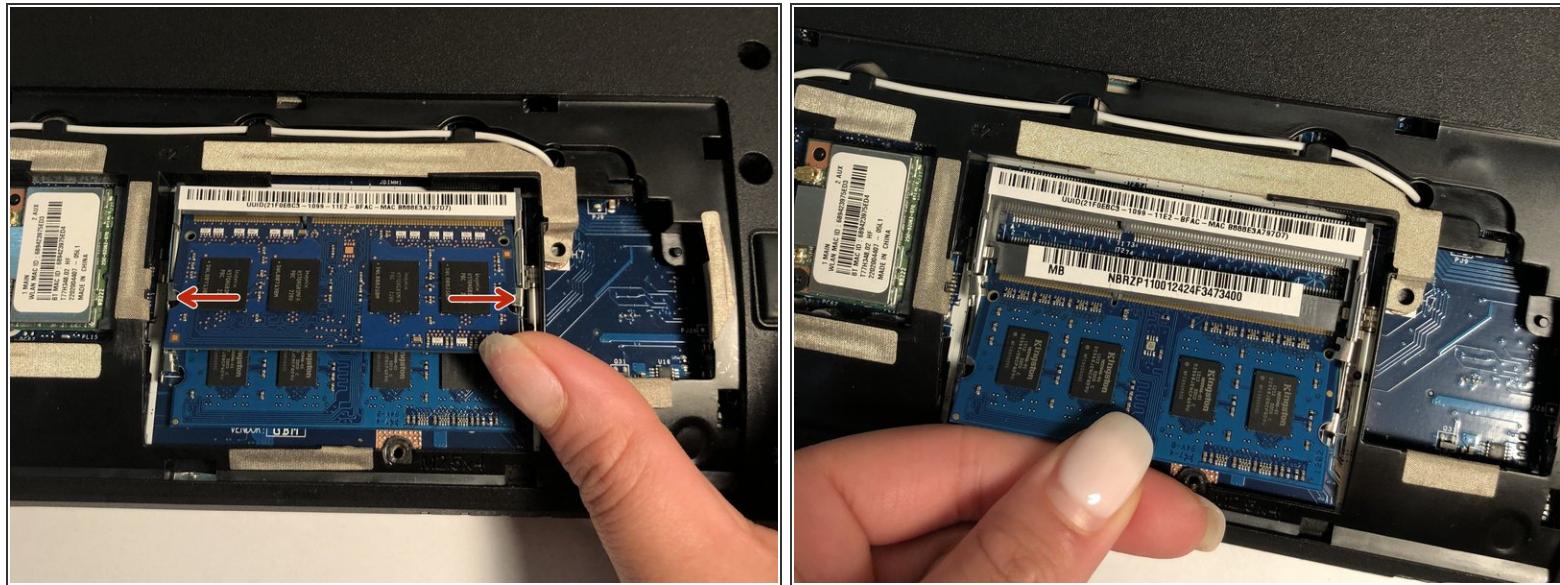

- After removing the screw, push the tabs on the sides of the cards out. This will allow the RAM card to pop up so you can carefully pull it out. Repeat this for the second RAM card under it.

To reassemble your device, follow these instructions in reverse order.