




Acer Aspire V3-571G Wifi Card Replacement

This guide will demonstrate how to replace the wifi card in the Acer Aspire V3-571G laptop.

Written By: Erica Gomes

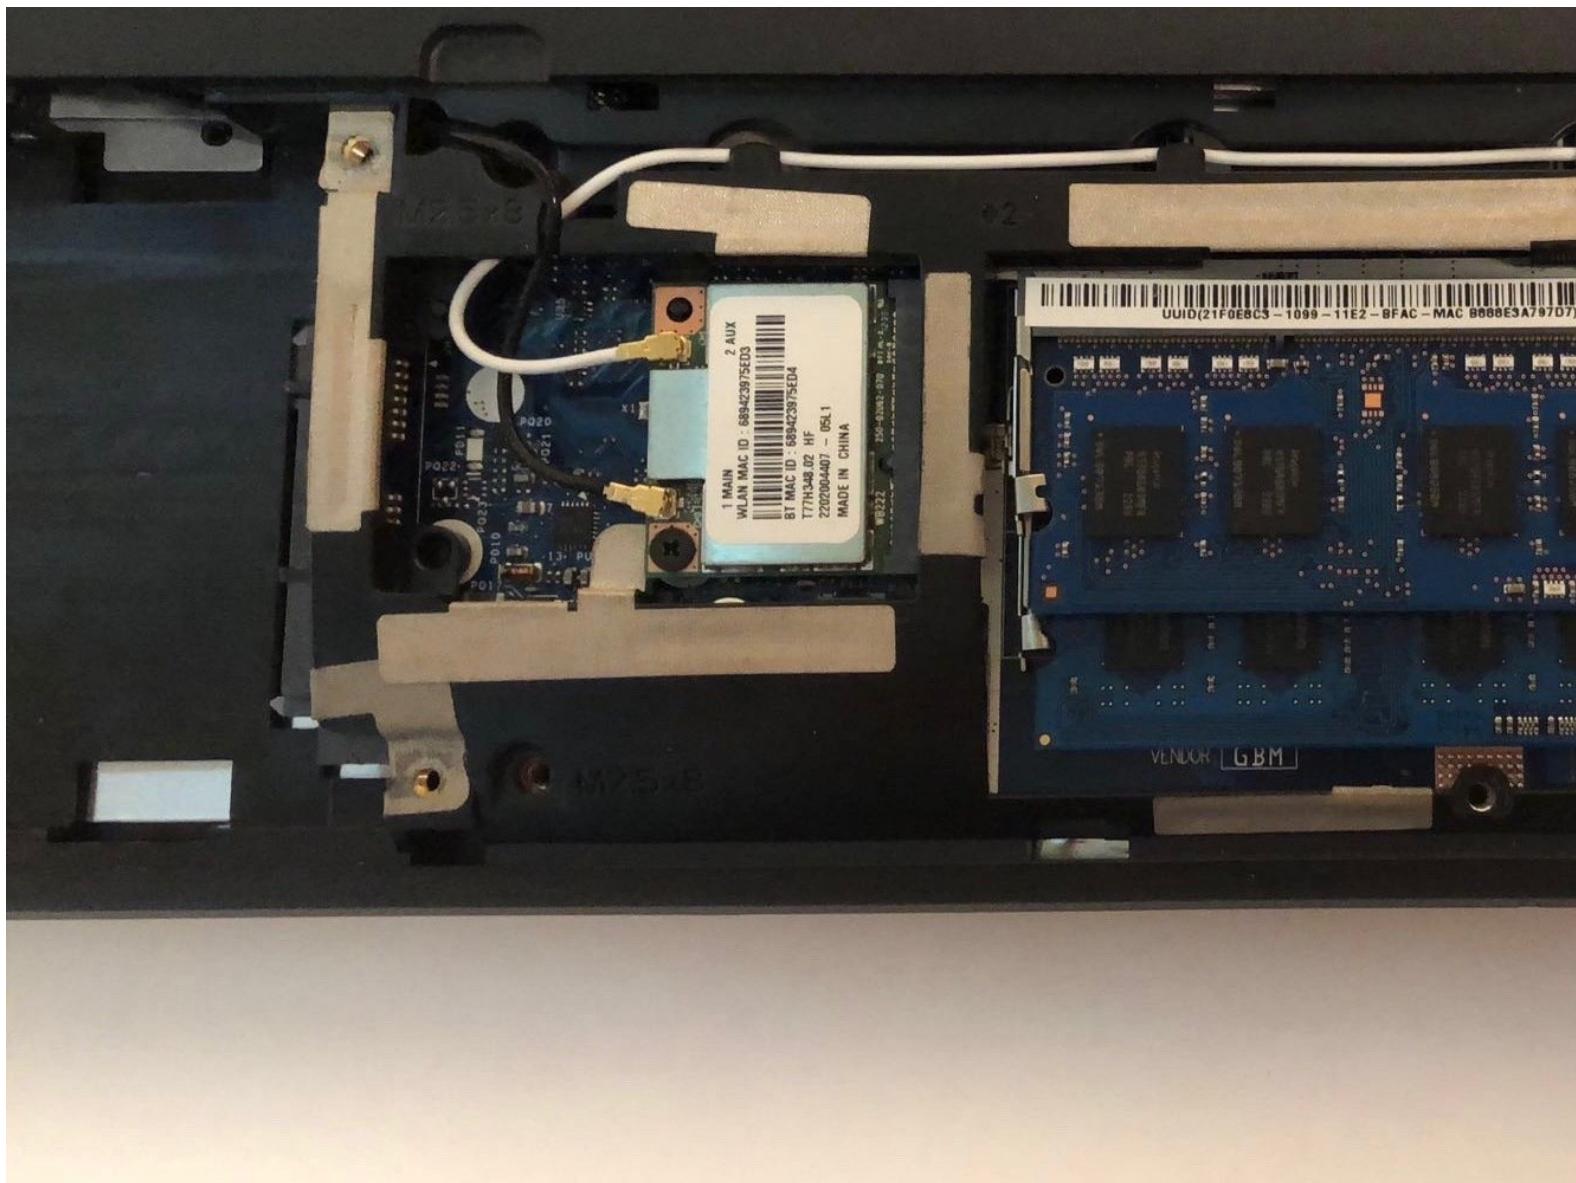

 **TOOLS:**


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Wifi Card




- Flipping your laptop over, the wifi card is located on the lower half of the laptop
- Remove the two screws shown on diagram using a Phillips head screwdriver
- Use the opening tool to help lift and remove the lower case

Step 2

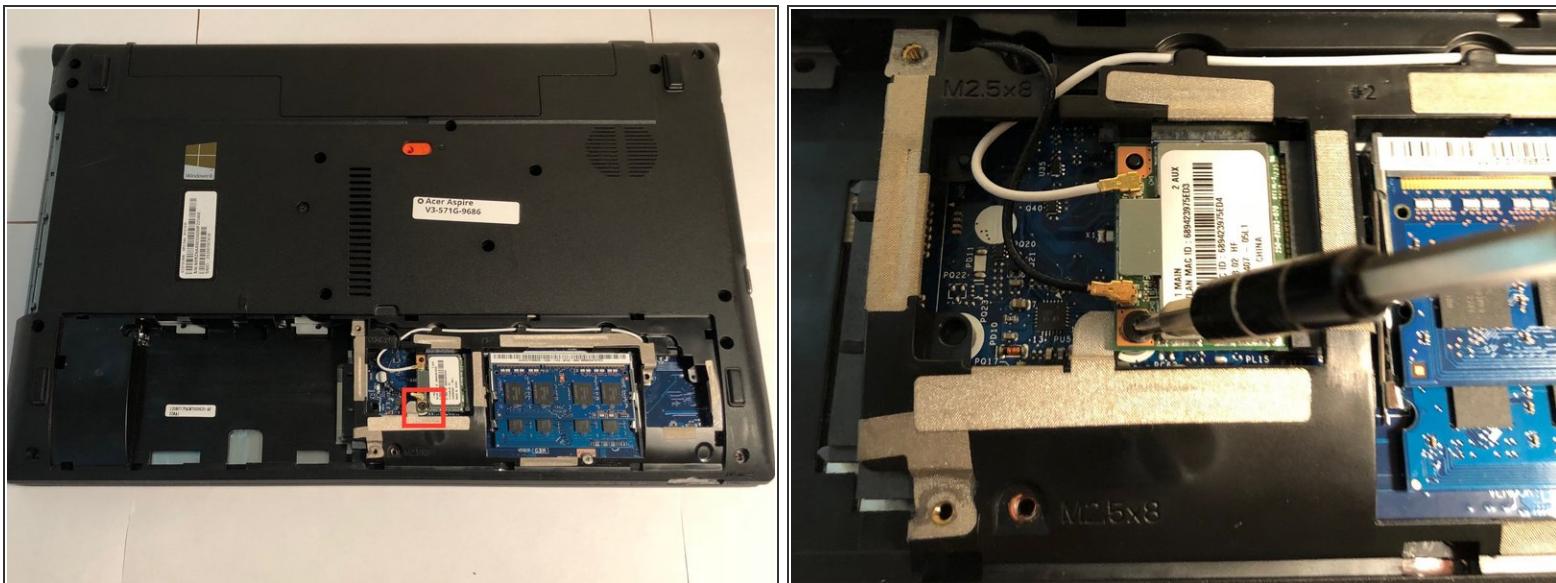

- Remove the screw that is securing the wifi card in place

Step 3

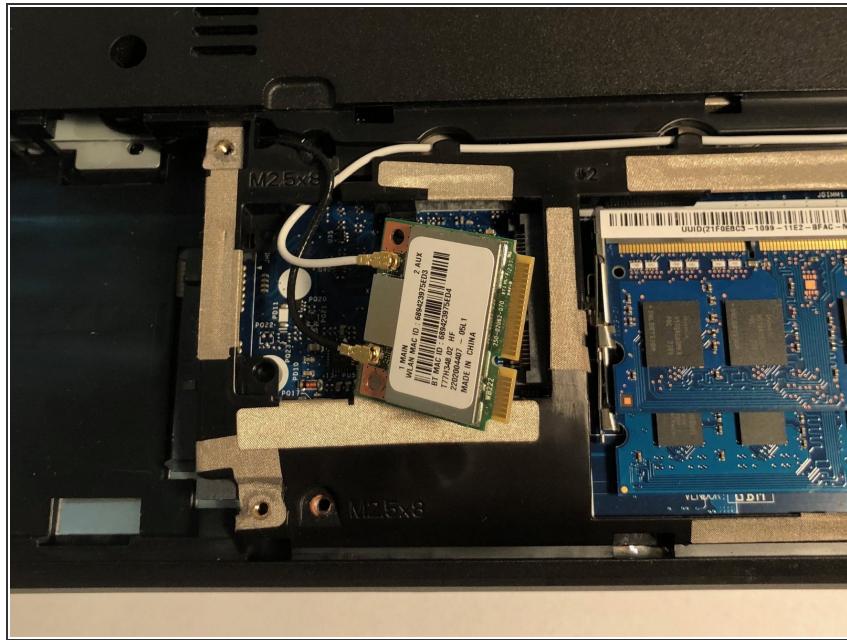

- Use your fingers to gently pull out the wifi chip

Step 4



- Disconnect the black and white wire from the wifi chip

To reassemble your device, follow these instructions in reverse order.