




Acer Aspire V5-131-2629 RAM Replacement

Follow this guide in order to replace or add RAM on the Acer Aspire V5-131-2629.

Written By: Nicholas Vassiliadis

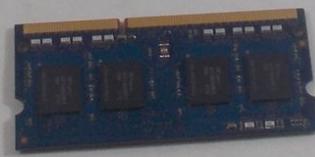

INTRODUCTION

Looking to increase or replace the memory on your Acer Aspire V5-131-2629 laptop? Follow this simple 6 step guide to replace your RAM and give your computer a boost in no time!

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery



- Carefully turn your Acer Aspire V5-131-2629 upside down, so that the battery cell is visible and nearest to you.

Step 2



- Identify the small, oval slide switch on the left hand side of the laptop, directly above the battery.

Step 3




- Insert an opening tool into the hole on the right side of the oval switch. Use the opening tool to slide the switch to the right.

Step 4



- With the switch engaged to the right, firmly pull the battery out and towards yourself, parallel to your work surface.

Step 5 — Cover

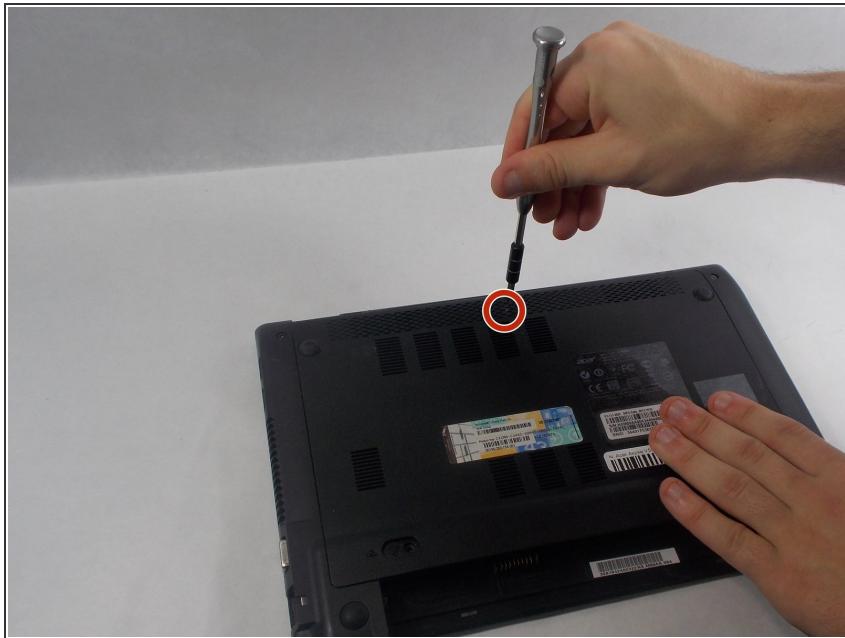


- Remove the single Phillips #0 screw from the cover on the underside of the laptop.

Step 6



- Remove the cover by sliding it outwards and remove it from the device.

Step 7 — RAM

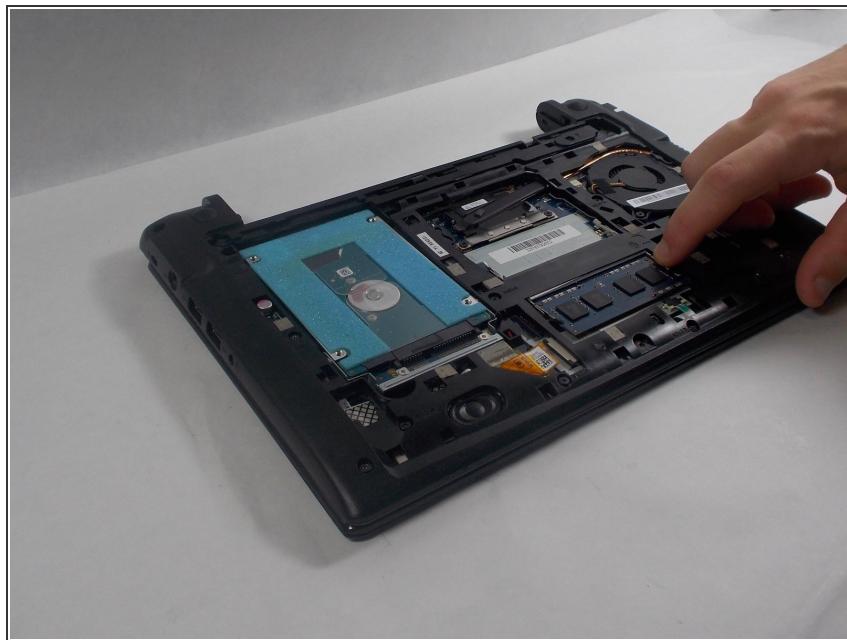

- Using your finger, press the small tab on each side of the memory card.
- The memory card will eject at a 45 degree angle.

Step 8



- Pull the memory cards out from the laptop.

To reassemble your device, follow these instructions in reverse order.