



# Acer Aspire V5-552PG-X469 RAM Replacement

This guide will show you how to replace your random access memory (RAM) in your Acer Aspire V5-522PG laptop.

Written By: Noah lishman




## INTRODUCTION

In this guide the back cover, and RAM card will be removed so that a new RAM card can be inserted.

### TOOLS:


- JIS #0 Screwdriver (1)

## Step 1 — Back Case

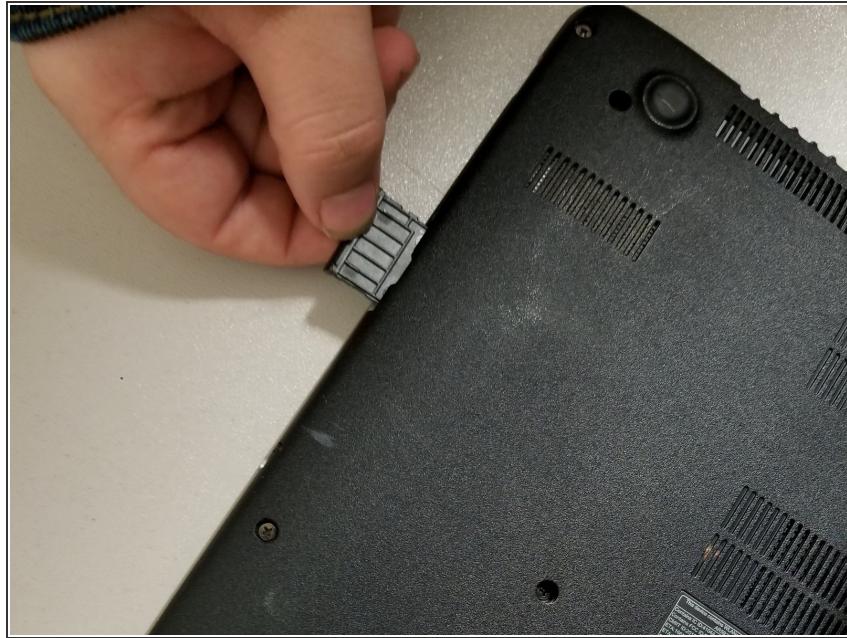


- Remove the storage tray on the left edge of the device.

## Step 2

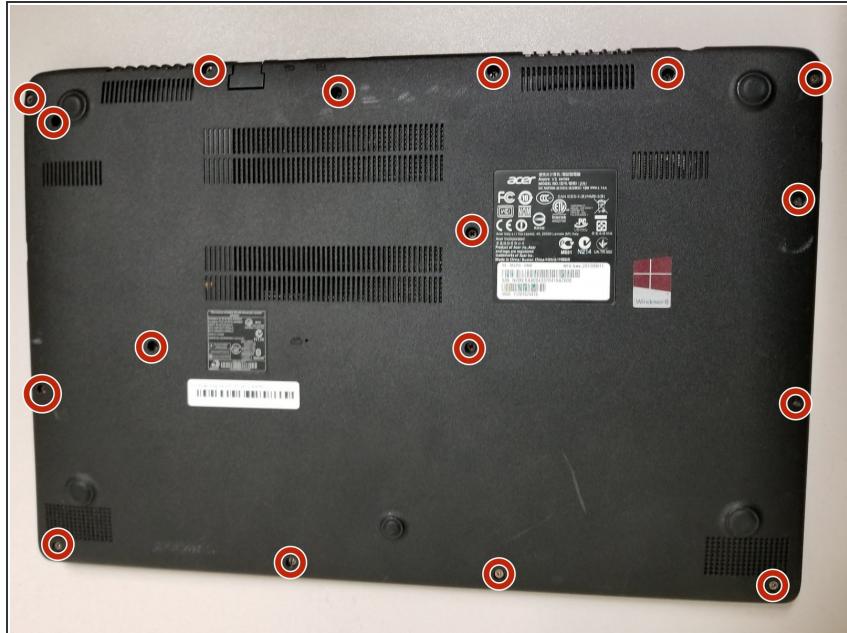

- Use a Phillips #0 screwdriver to remove seventeen 7mm screws from the lower case.

## Step 3

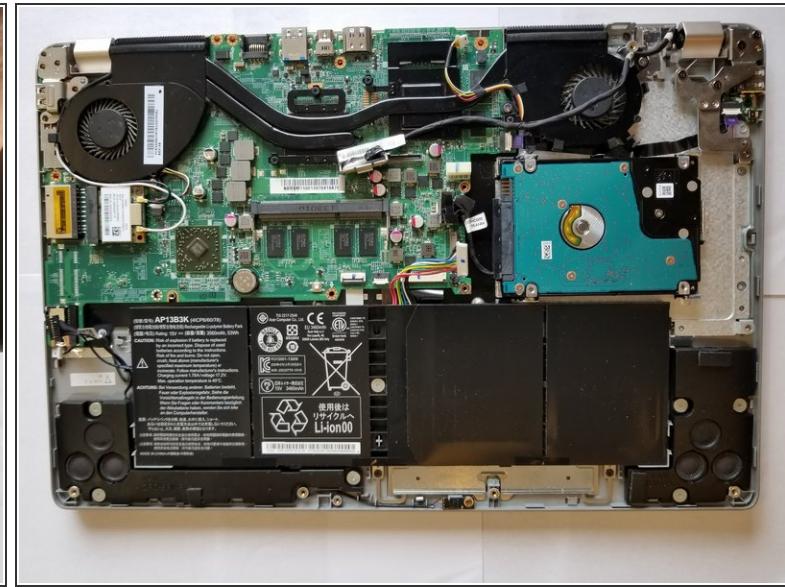


- Lift up the back case to remove it.

## Step 4 — RAM



- Locate the RAM slot and push outwards on the metal tabs to release the RAM card.

## Step 5

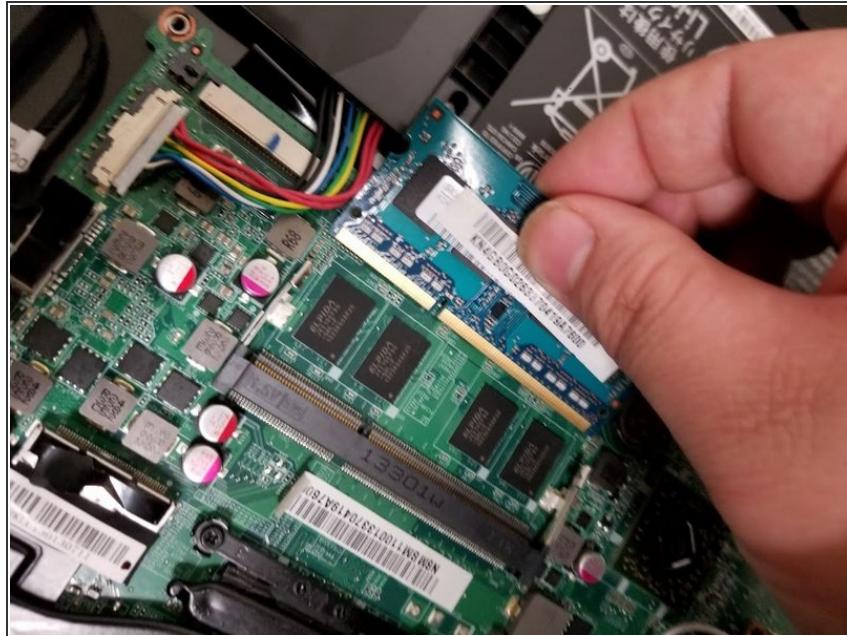

- Carefully slide the RAM card out of its slot, and insert the replacement card

To reassemble your device, follow these instructions in reverse order.