



# Acer Aspire V5-571P-6815 Keyboard Replacement

This guide will show how to replace the keyboard on a Acer Aspire V5-571P-6815 laptop.

Written By: Jmarqu2



## INTRODUCTION

This guide will show how to replace the keyboard on a Acer Aspire V5-571P-6815 laptop.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Keyboard




- Remove the two 7mm Phillips #00 screws from the bottom of the laptop.

## Step 2



- Insert a plastic opening tool underneath the keyboard and pry upwards.
- Slide the plastic opening tool around the perimeter to free the keyboard.
- Flip the keyboard over and onto the palm rest.

## Step 3

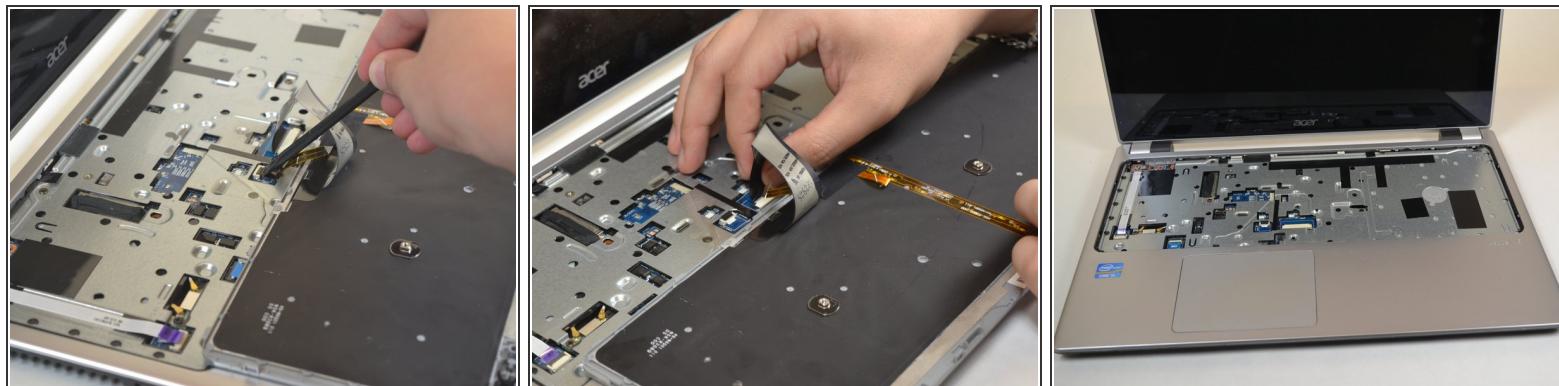

- Use a spudger to flip up the retaining flap on the keyboard ribbon cable [ZIF](#) socket.
- Pull the ribbon cable out of the socket.
- Remove the keyboard from the laptop.

To reassemble your device, follow these instructions in reverse order.