


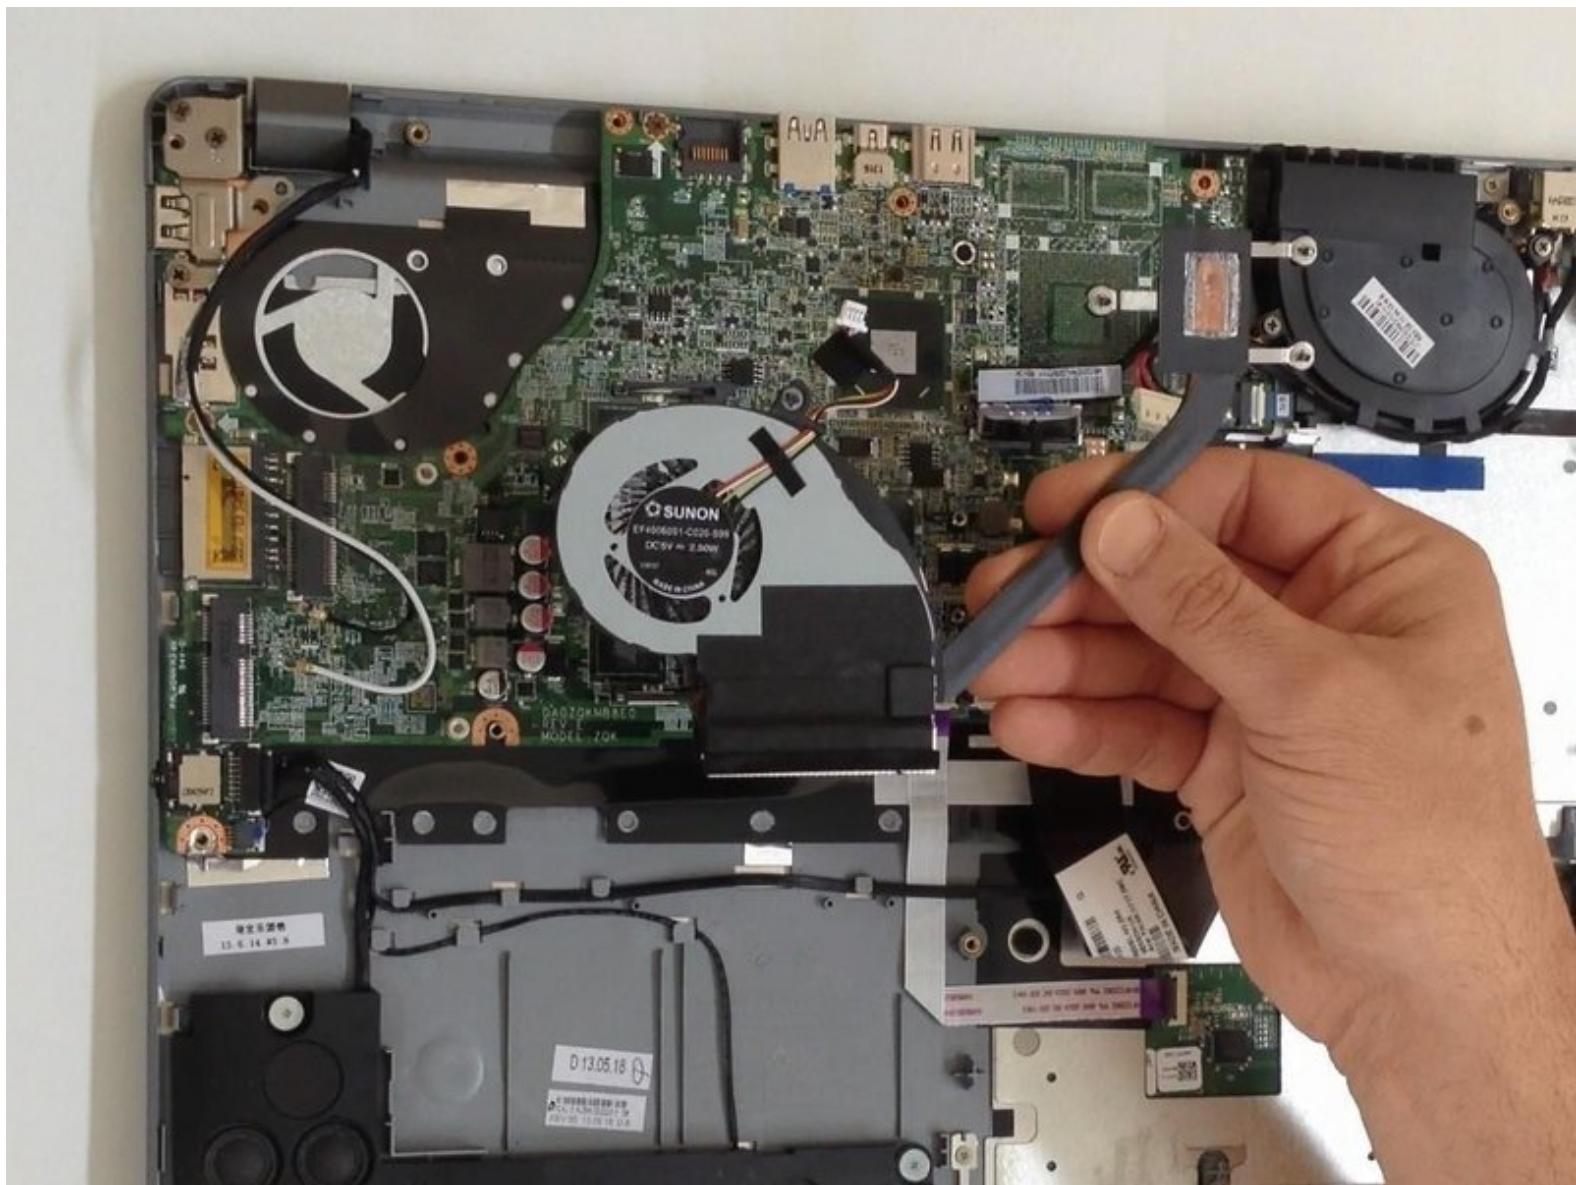

Acer Aspire V5-572 Cooling / Fan System Replacement

Acer Aspire V5-572 Cooling System Replacement

Written By: ZFix




INTRODUCTION

How to disassemble the laptop and change the Cooling system.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [Brush \(1\)](#)

Step 1 — Bottom Cover

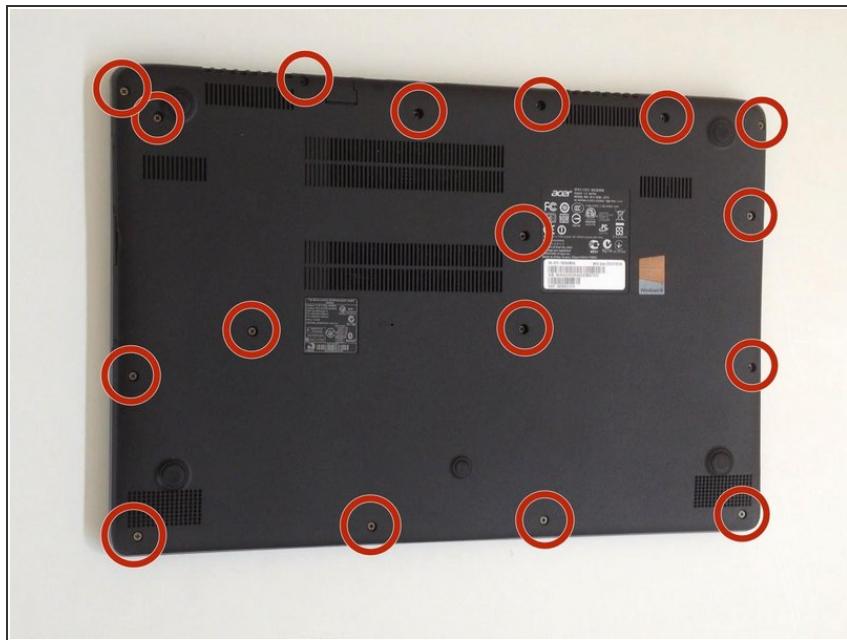

ⓘ Switch-off the Laptop.


- Remove the seventeen Philips #0 screws.

Step 2




- If there is a plastic storage tray in the laptop, remove it.

Step 3

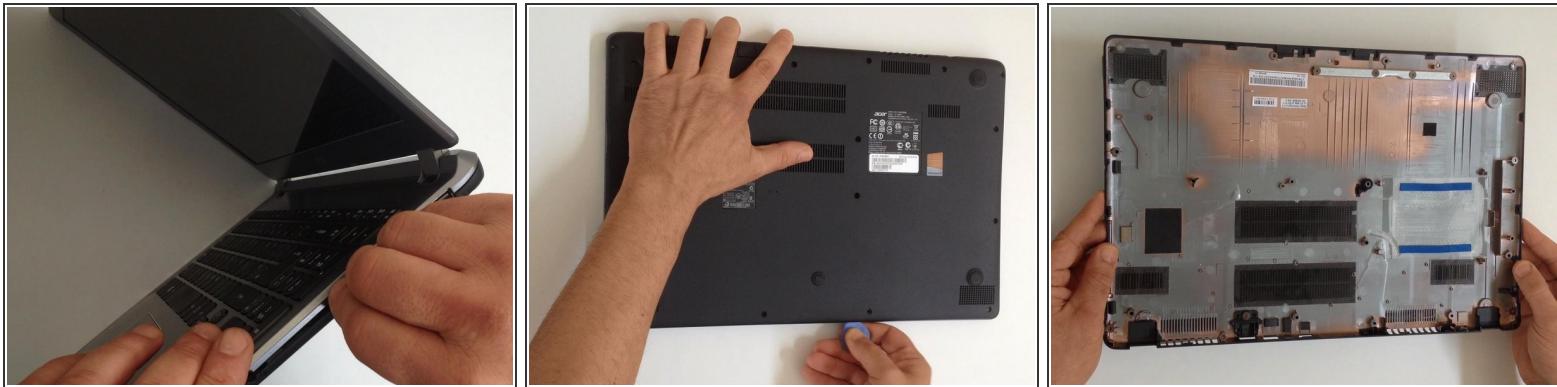

- Starting from the SD Memory Card hole, start prying between the top and bottom cases.
- ⚠ Use plastic tools to avoid damaging the cover.
- Remove the bottom case.



Step 4

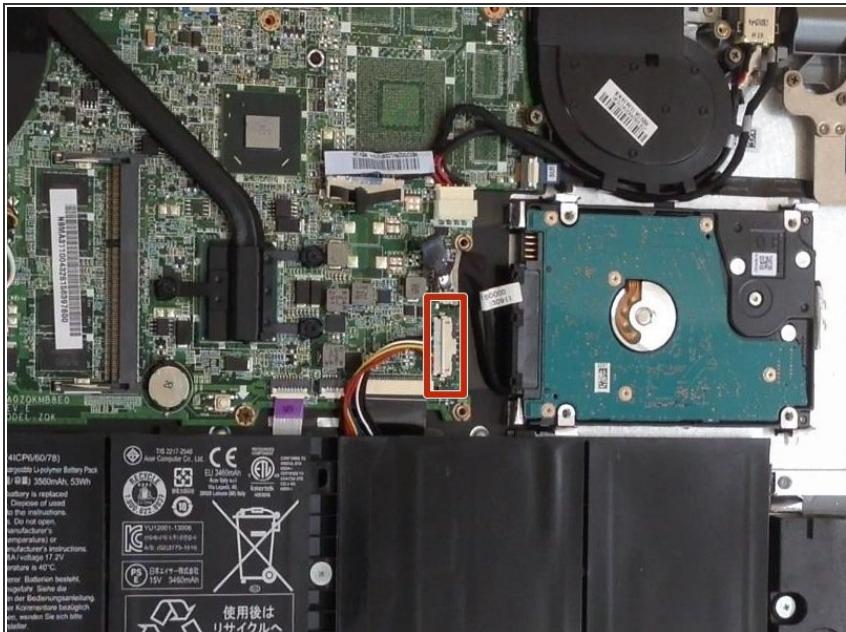

⚠ Disconnect the battery immediately for a safer repair.

- Pull the battery connector away from the hard drive to disconnect it.

Step 5 — Cooling / Fan System

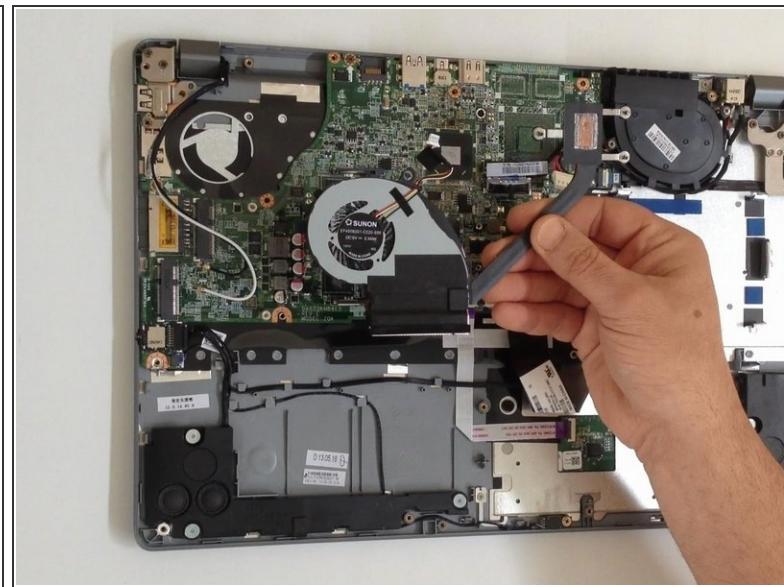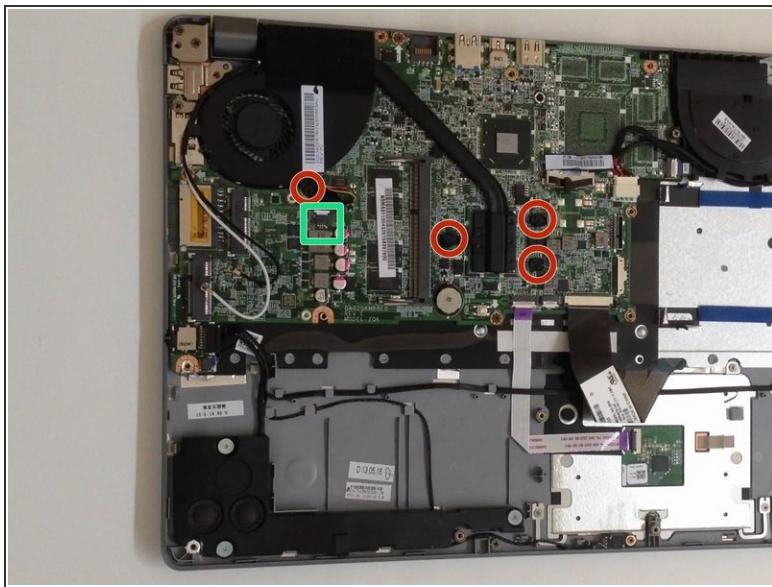

- Disconnect the Fan cable.
- Remove the three screws from the CPU cooler and one from the Fan module.

⚠ When you change the Cooling system, you must clean the processor from old thermal compound and put new.

To reassemble your device, follow these instructions in reverse order.