


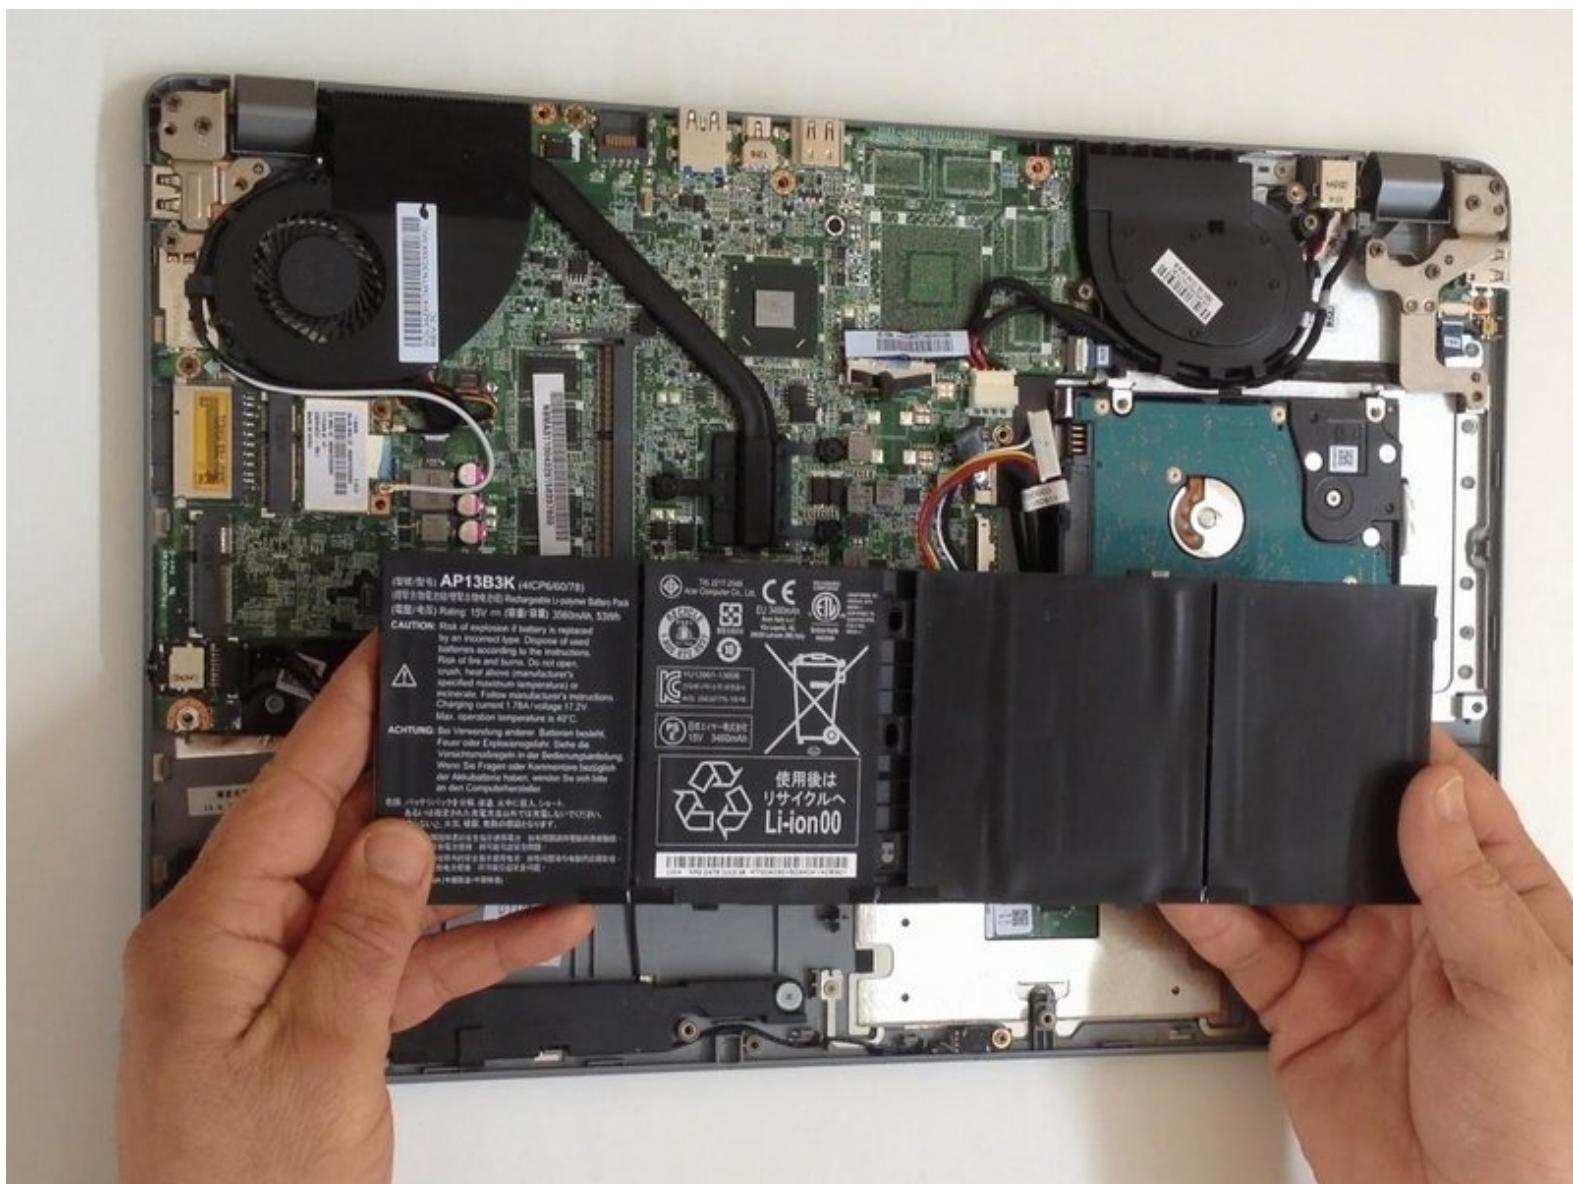

Acer Aspire V5-572, V5-572G Battery Replacement

Acer Aspire V5-572 Battery Replacement

Written By: ZFix



INTRODUCTION

How to disassemble Acer Aspire - V5-572, V5-572G and replace the old Battery.

[video: <http://youtu.be/Sg8tUXZL864>]



TOOLS:


- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)
- iFixit Opening Picks set of 6 (1)



PARTS:

- Acer AP13B3K and AP13B8K Replacement Laptop Battery (1)

Step 1 — Bottom Cover

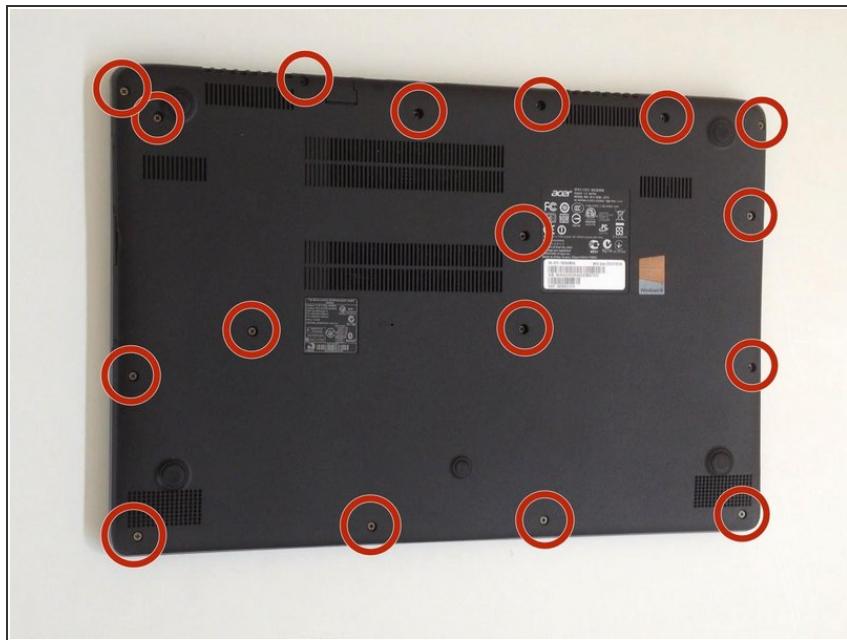

ⓘ Switch-off the Laptop.


- Remove the seventeen Philips #0 screws.

Step 2




- If there is a plastic storage tray in the laptop, remove it.

Step 3

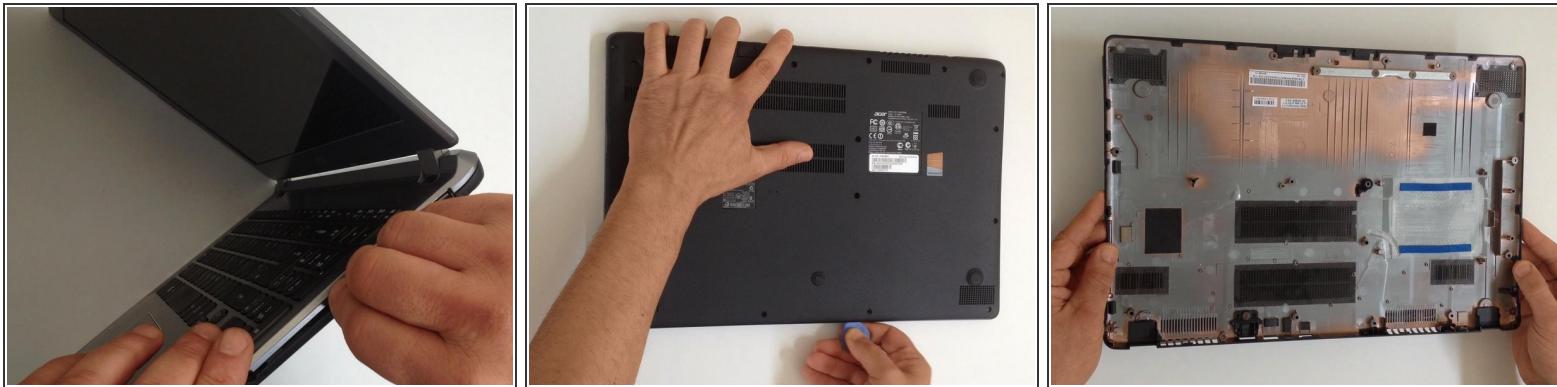

- Starting from the SD Memory Card hole, start prying between the top and bottom cases.
- ⚠ Use plastic tools to avoid damaging the cover.
- Remove the bottom case.

Step 4

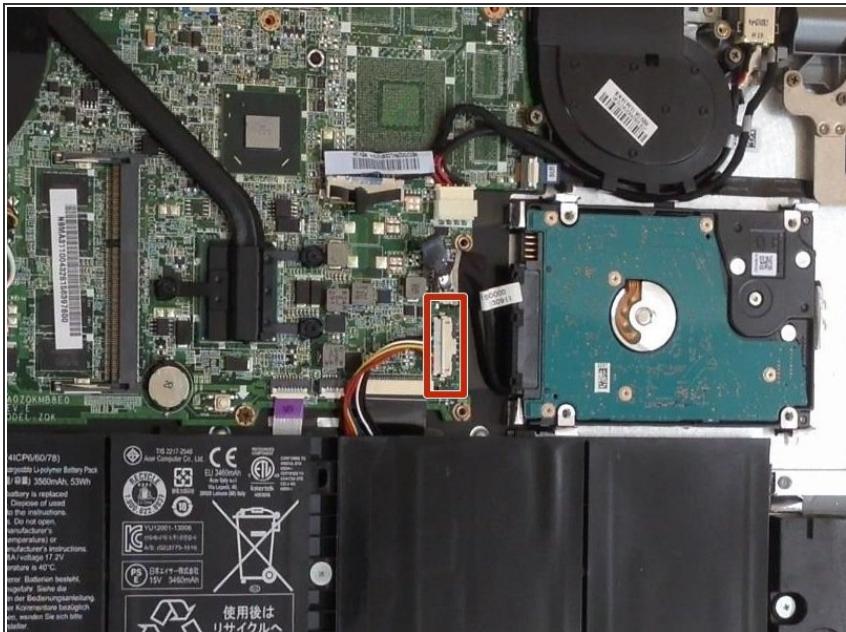

⚠ Disconnect the battery immediately for a safer repair.


- Pull the battery connector away from the hard drive to disconnect it.

Step 5 — Battery



- Remove the single Phillips 0 screw securing the battery.

Step 6

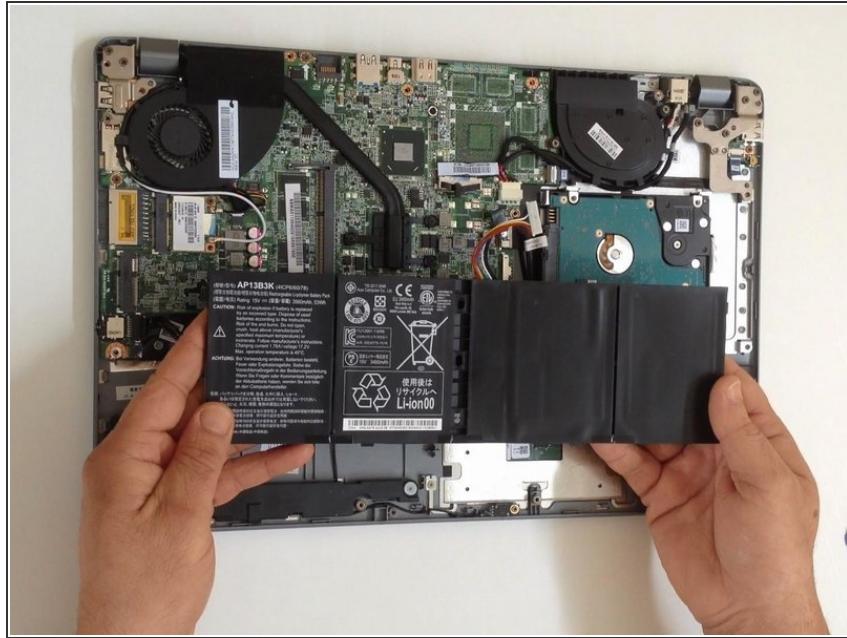

- Remove the battery

To reassemble your device, follow these instructions in reverse order.