




# Acer Aspire V5-572, V5-572G Loudspeakers and Microphone Replacement

Acer Aspire V5-572, V5-572G Loudspeakers and Microphone Replacement

Written By: ZFix

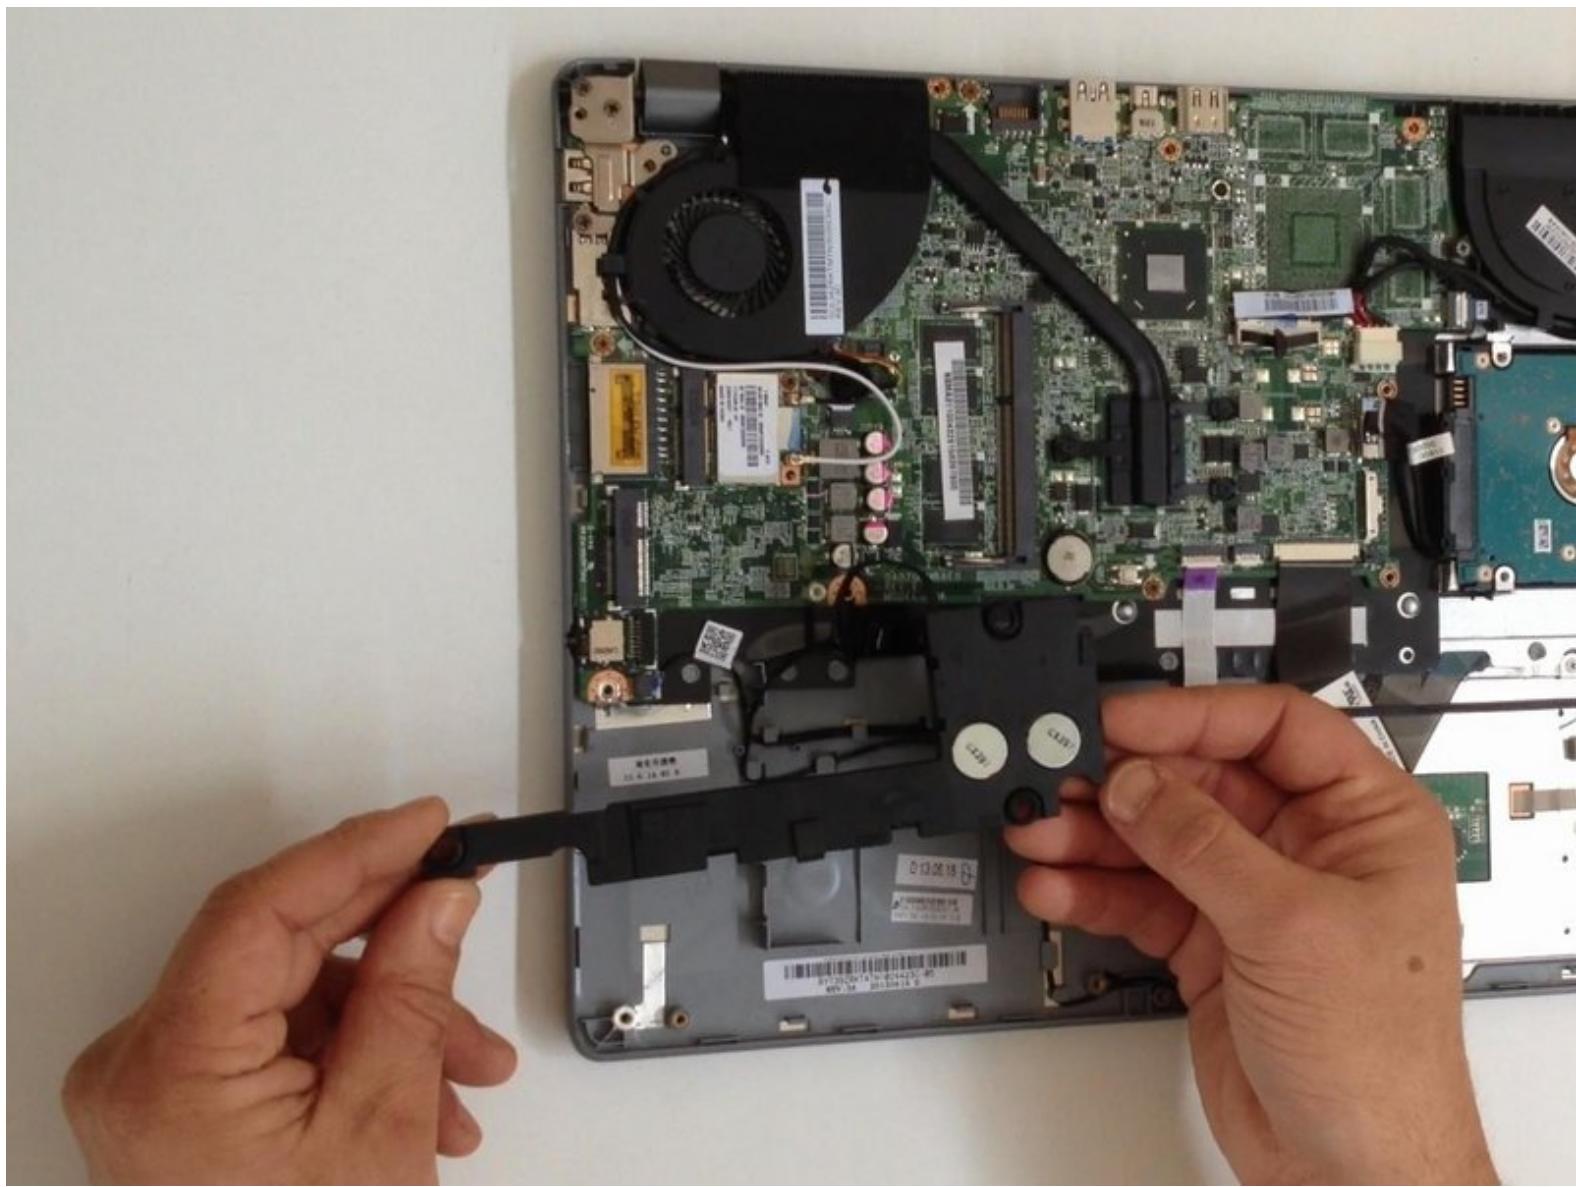

# INTRODUCTION

Acer Aspire - V5-572, V5-572G


How to disassemble the Laptop and change the Loudspeaker modules.

[video: <http://youtu.be/Sg8tUXZL864>]

## TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)
- iFixit Opening Picks set of 6 (1)

## Step 1 — Bottom Cover

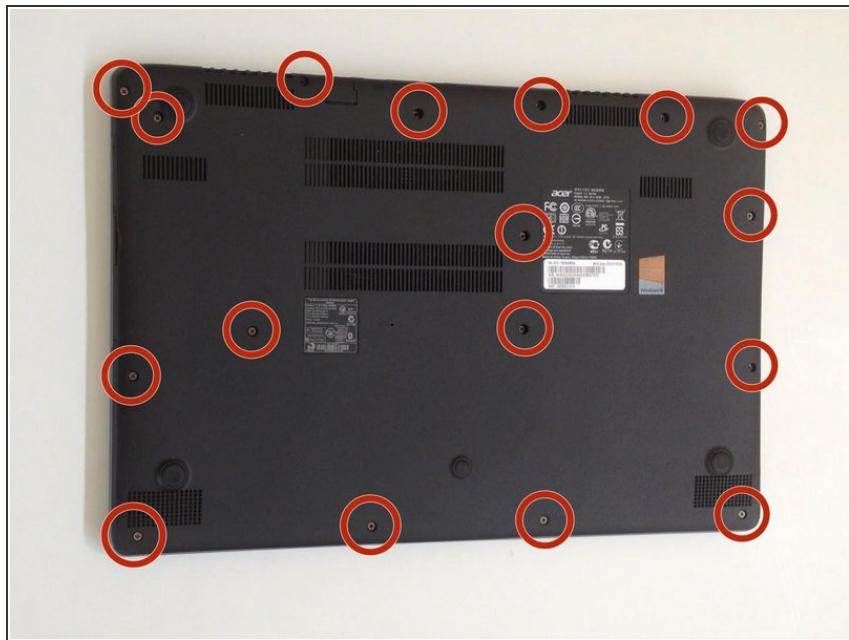

ⓘ Switch-off the Laptop.


- Remove the seventeen Philips #0 screws.

## Step 2




- If there is a plastic storage tray in the laptop, remove it.

## Step 3

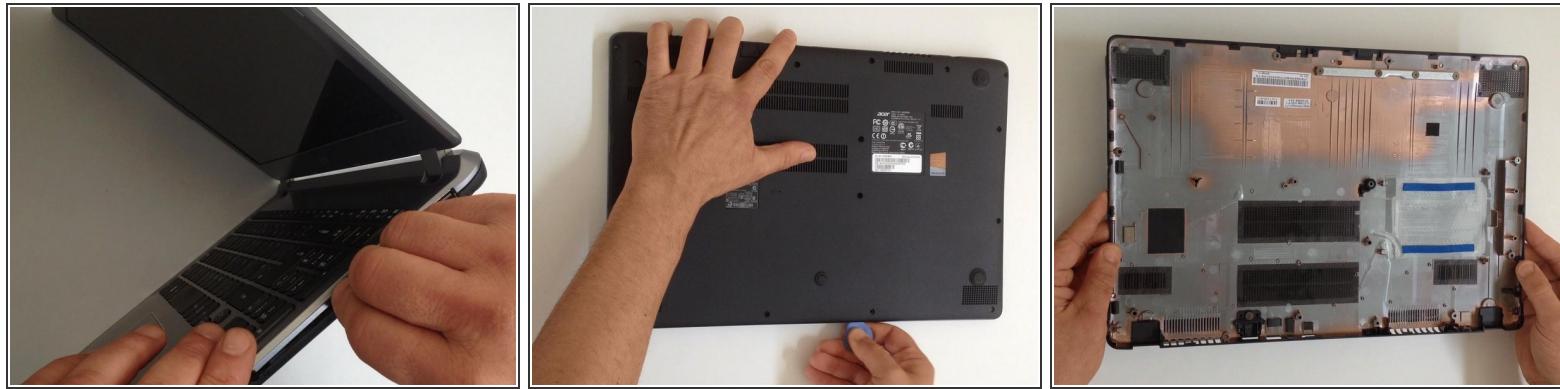

- Starting from the SD Memory Card hole, start prying between the top and bottom cases.
- ⚠ Use plastic tools to avoid damaging the cover.
- Remove the bottom case.


## Step 4

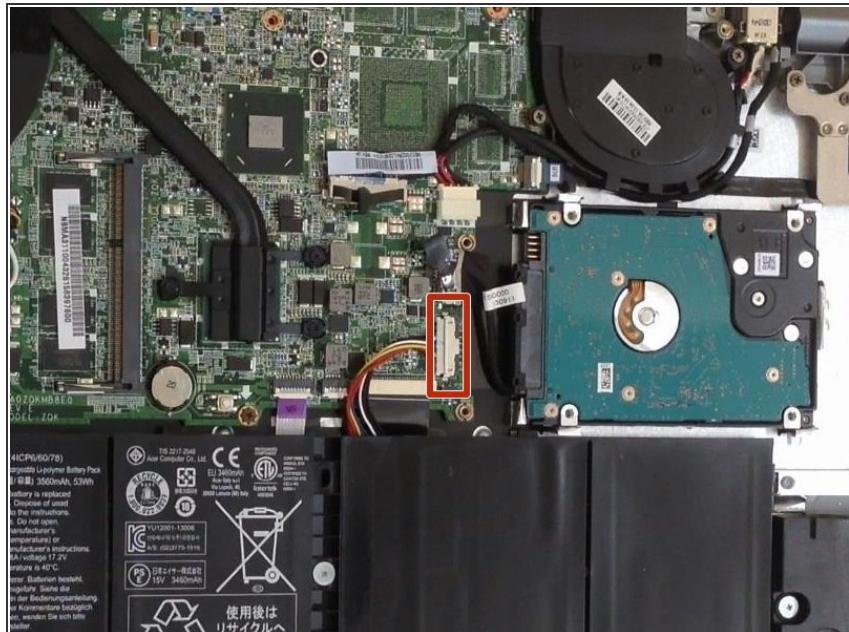

⚠ Disconnect the battery immediately for a safer repair.


- Pull the battery connector away from the hard drive to disconnect it.

## Step 5 — Battery

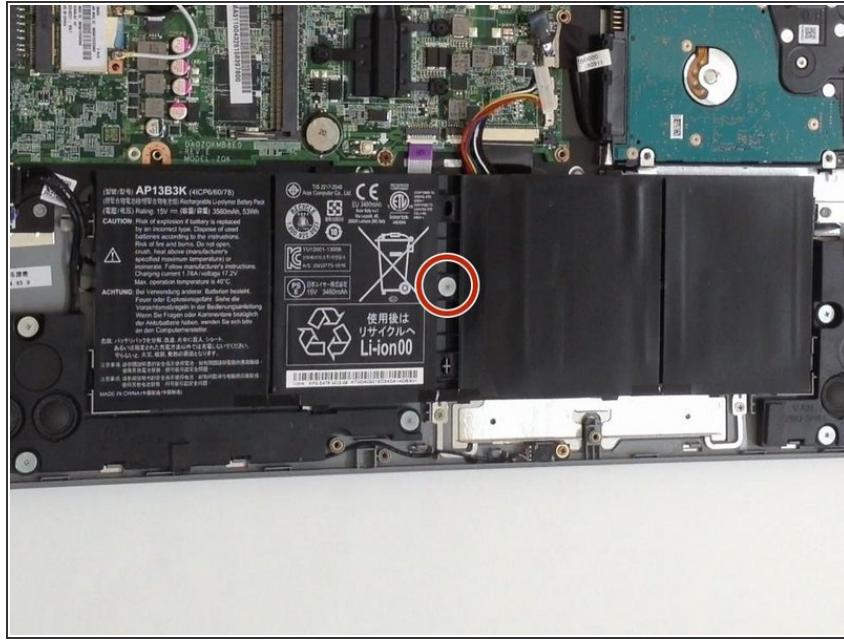


- Remove the single Phillips 0 screw securing the battery.

## Step 6

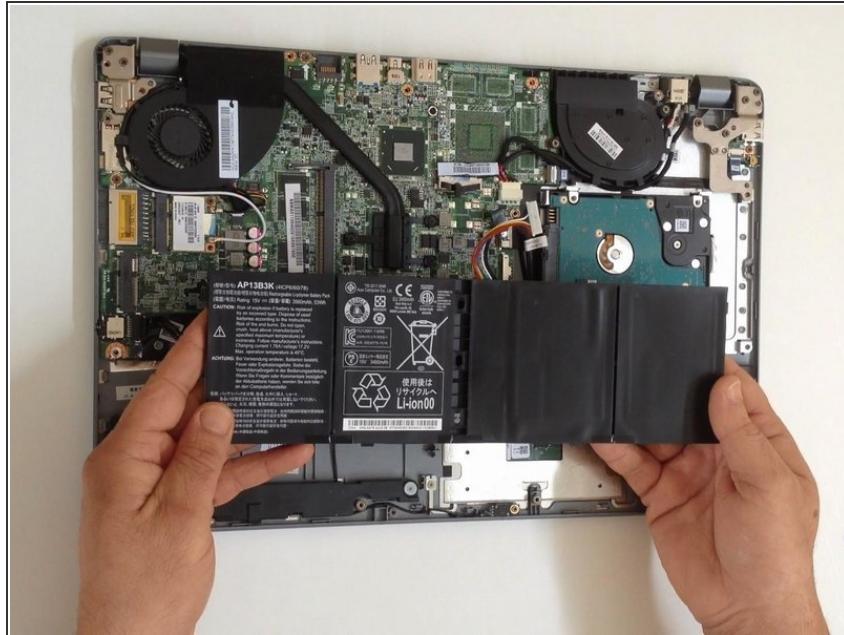

- Remove the battery

## Step 7 — Loudspeakers and Microphone

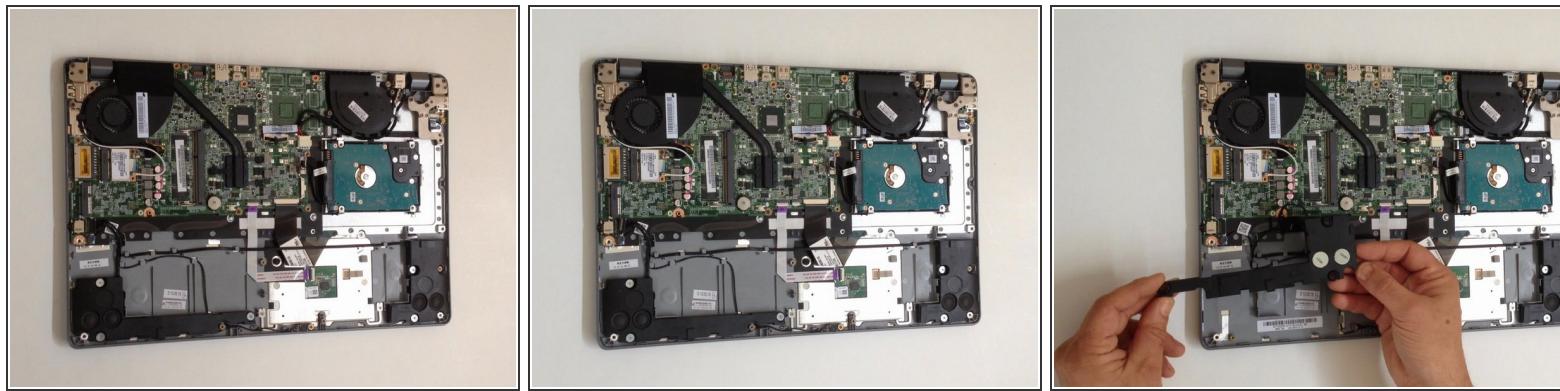

- Disconnect the Loudspeakers cable.
- There are two modules with loudspeakers, connected with one wire.
- Unscrew the screws and remove the Loudspeaker modules together with the cable.

To reassemble your device, follow these instructions in reverse order.