



Acer Aspire V5-591G-75KE Disassembly

This guide will show the user how to open up the Acer Aspire V5-591G-75KE in order to identify, remove, and potentially replace its components.


Written By: Tasier Hagler



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Acer Aspire V5-591G-75KE Disassembly

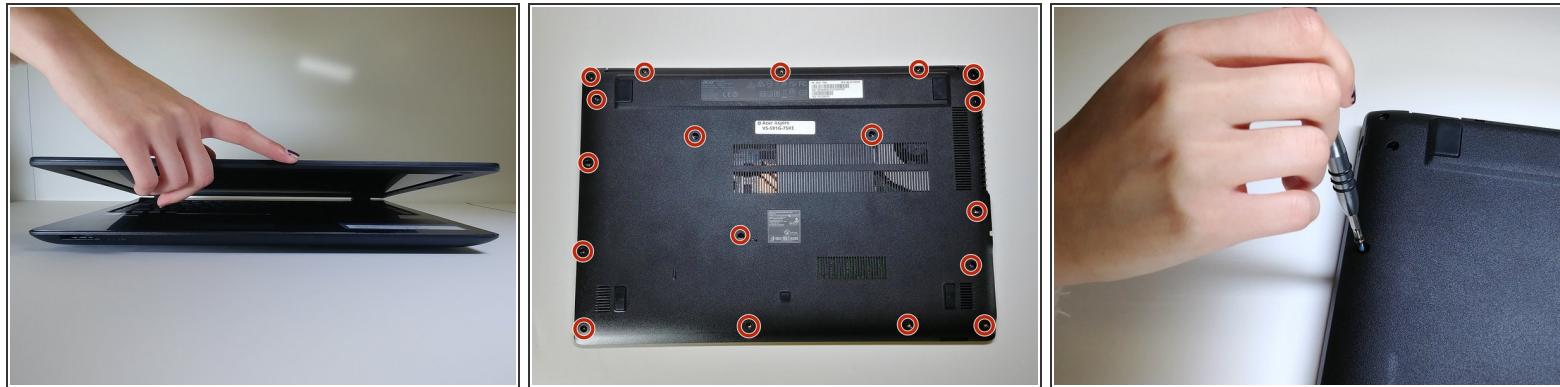

- Close down the display and flip the device upside down.
- Use a **Phillips #1 screwdriver** to remove 18 black **10mm Phillips Head screws** in order to loosen up the protective bottom casing.

Step 2



- With the screws removed, flip the device right-side up and open up the display.
- Run a **plastic spudger** tool along the seam of the face-plate in order to loosen up the protective bottom casing.

⚠ *Popping sounds are normal, but forceful prying can damage delicate components. Be especially careful near the USB and HDMI ports.*

Step 3




- Close the display down once more, and flip the laptop upside down, with the hinge facing away from you.

⚠ *Do not yank the bottom casing off. There is a small speaker wire that connects it to the motherboard.*

- Taking note of the small speaker wire, gently **lift only the left side** of the bottom casing.

Step 4

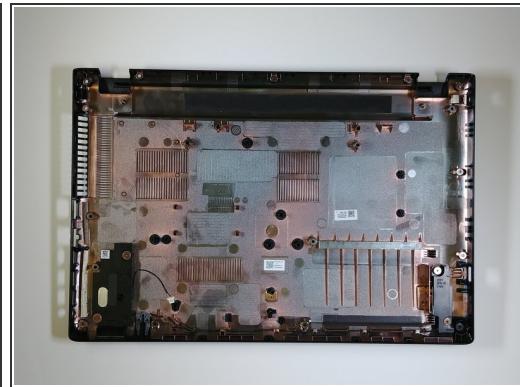

- Using a pair of **blunt tweezers**, push on the tabs of the small white connector to separate it from the motherboard.
- (i) The entire bottom casing should lift with no resistance. If there is too much resistance, verify you removed all the screws, and run the plastic spudger tool around the face-plate again.*

To reassemble your device, follow these instructions in reverse order.