



Acer Chromebook 14 CB3-431-C3WS Screen Replacement

If your screen is cracked, distorted, or otherwise not working properly, this guide will help you replace the screen in your Acer Chromebook14 CB3-431-C3WS

Written By: Samantha Postma



This document was generated on 2020-04-01 03:21:48 AM (MST).

INTRODUCTION

If your Acer Chromebook 14 CB3-431-C3WS screen either won't turn on or doesn't function correctly when turned on, you may need to replace your screen.


Try following this [troubleshooting guide](#) before attempting to replace the screen to see if you can find an easier solution.

Before beginning, make sure your computer is completely turned off and disconnected from any external power sources.

TOOLS:


- [iFixit Opening Picks set of 6 \(1\)](#)
- [JIS #0 Screwdriver \(1\)](#)

Step 1 — Screen

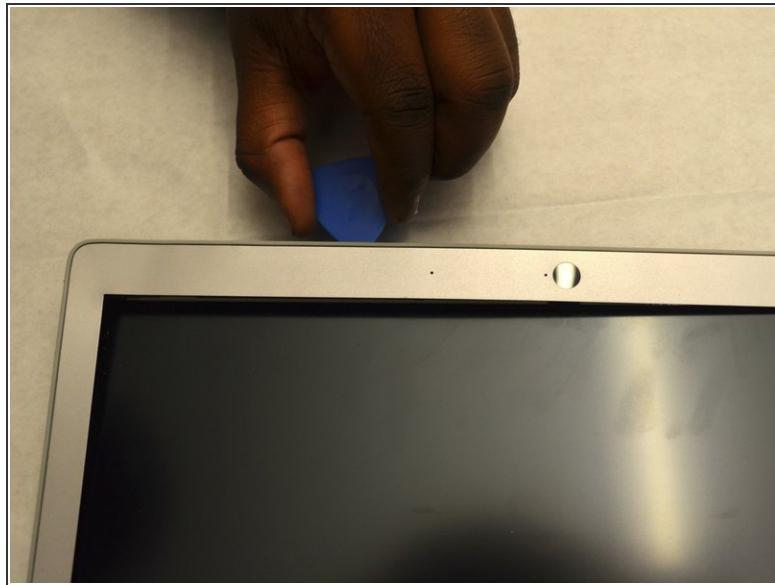

- Using an iFixit opening pick, pop off the bezel from around the screen, beginning on one side and continuing around the whole screen.
- Remove the barrier from the front of the screen.

Step 2

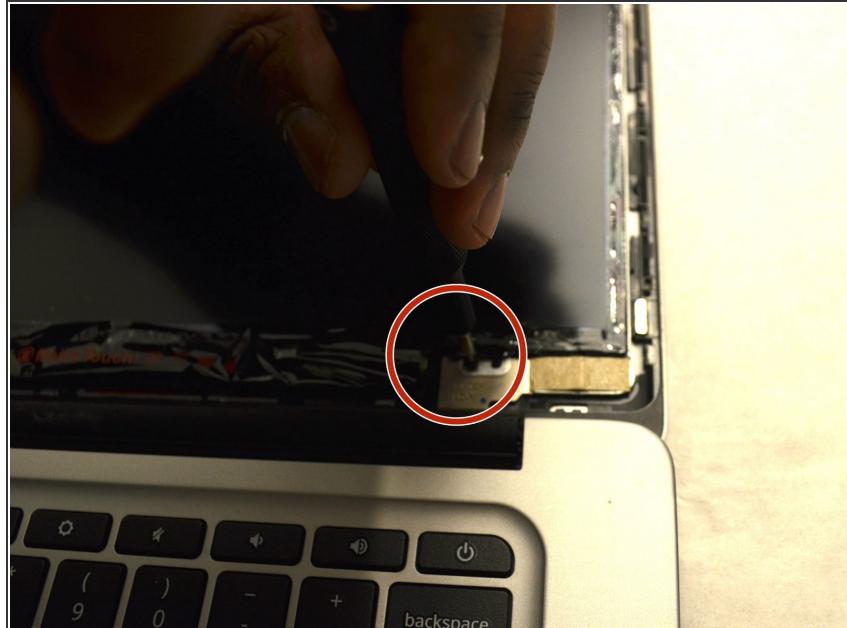

- Starting in the top right of the screen, remove the six 4mm JIS #0 screws that secure the computer screen to the top.
- *(i)* There will be two sets of two screws on the top, one screw on each side of the bottom of the screen.

Step 3



- Pull the screen down, and lay it flat against the keyboard.

Step 4



- Disconnect the input connector from the screen.

Step 5



- Remove the screen.

To reassemble your device, follow these instructions in reverse order.