



# Acer Chromebook C710 RAM Replacement

This guide will show you how to replace the RAM memory module(s).

Written By: Bradley Pavv



## INTRODUCTION

RAM provides programs with quick access to the data they need. The more programs you have open at once, the more RAM your computer will need.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Battery



- Place the laptop on a flat surface with the bottom side facing up.
- Place the tip of a spudger or finger into the hole on the battery release slider.

## Step 2



- Use the spudger to move the slider to the right and hold it there.
- With the slider held, use your other hand to pull the battery back away from the laptop.

## Step 3 — Back Cover



 This step will void your device warranty.


- Use the screwdriver to pierce the warranty sticker.
- Unscrew and remove the #0 6mm Phillips screw and set it aside.

## Step 4



- Slide the back panel towards you. The best spots to place your fingers are on the bumpers.
- Lift on the front edge to remove the panel.



## Step 5 — RAM

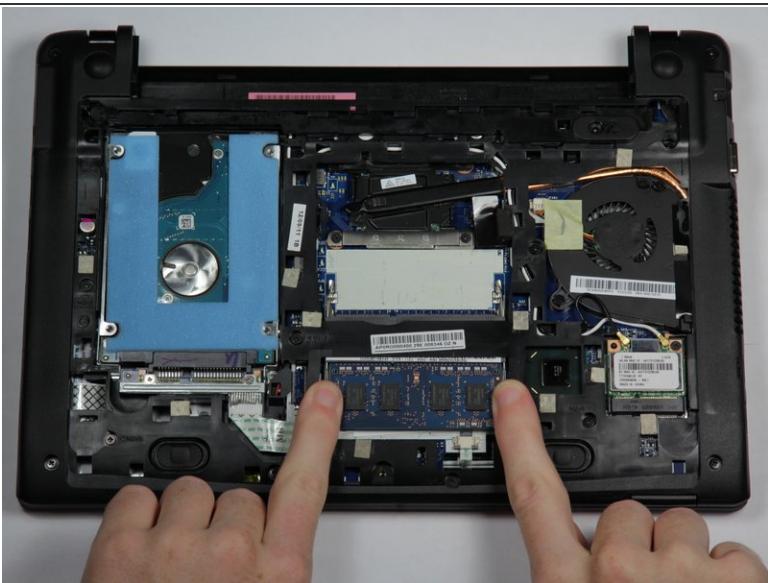

- Pull the metal tabs sideways away from the memory stick.

- ⓘ The RAM stick will pop up.

## Step 6

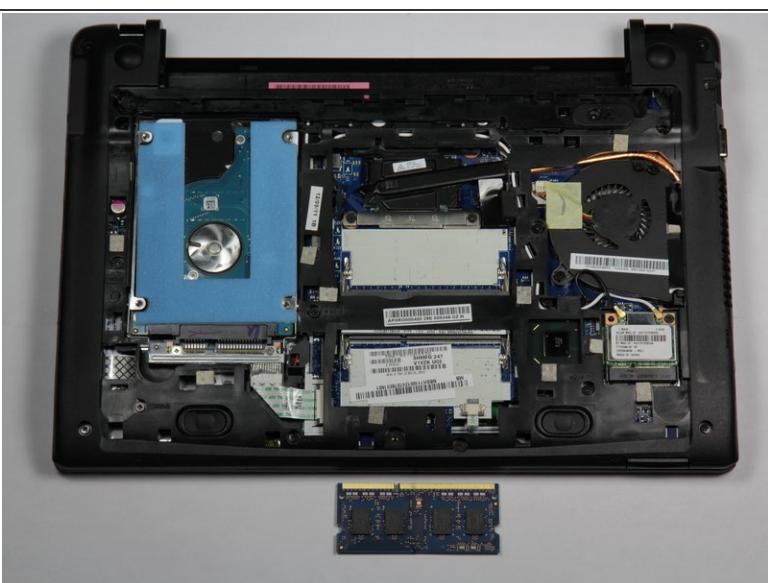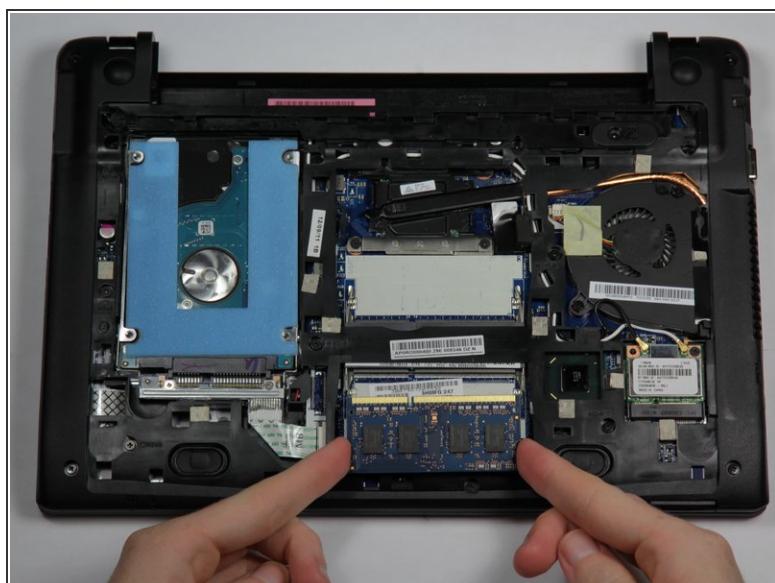

- Pull the RAM stick up and away from the laptop.

To reassemble your device, follow these instructions in reverse order.