



# Acer Chromebook C710-2833 Wifi Card Replacement

A replacement guide that walks through how to safely remove and install a wireless card for the Acer Chromebook C710-2833.

Written By: Nicholas Latorre



# INTRODUCTION

In this replacement guide, you will remove and install a wireless (wifi) card.

## TOOLS:

- [64 Bit Driver Kit \(1\)](#)
- [Anti-Static Wrist Strap \(1\)](#)
- [Magnetic Project Mat \(1\)](#)

## PARTS:

- [Acer Chromeboook C710 Atheros Wireless Card \(1\)](#)

## Step 1 — Wifi Card



- Flip your Chromebook over so the bottom is facing up.


## Step 2



- Locate the 6 mm Phillips #00 screw that holds the back cover together. Use your driver with the PH00 bit attached to unscrew it.
- Once completely unscrewed, carefully lift the cover off.
- Place the cover and screw safely to the side for now.

This document was generated on 2019-10-01 09:41:55 AM (MST).


## Step 3

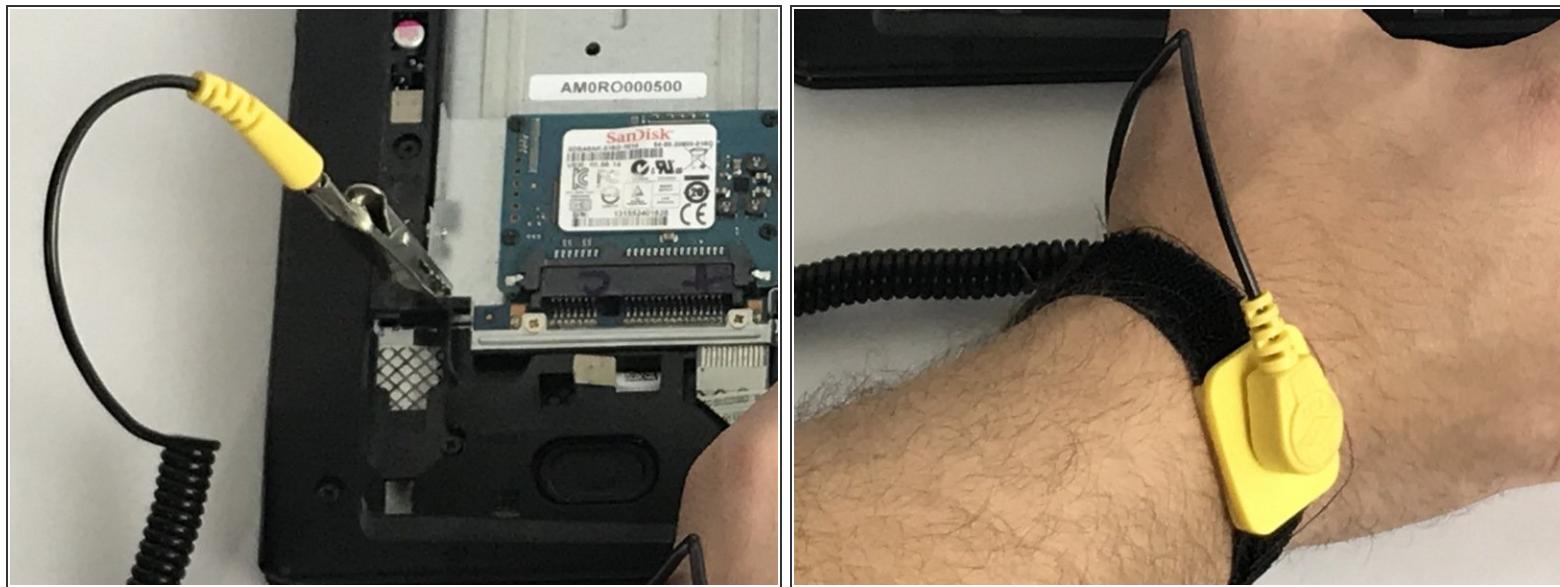

- Now take your anti-static wrist strap and place it tightly on your wrist.
- Attach the alligator clamp of the wrist strap to something that will ground yourself to avoid possible electric zaps.

*(i)* The location chosen in the picture is recommended.

## Step 4

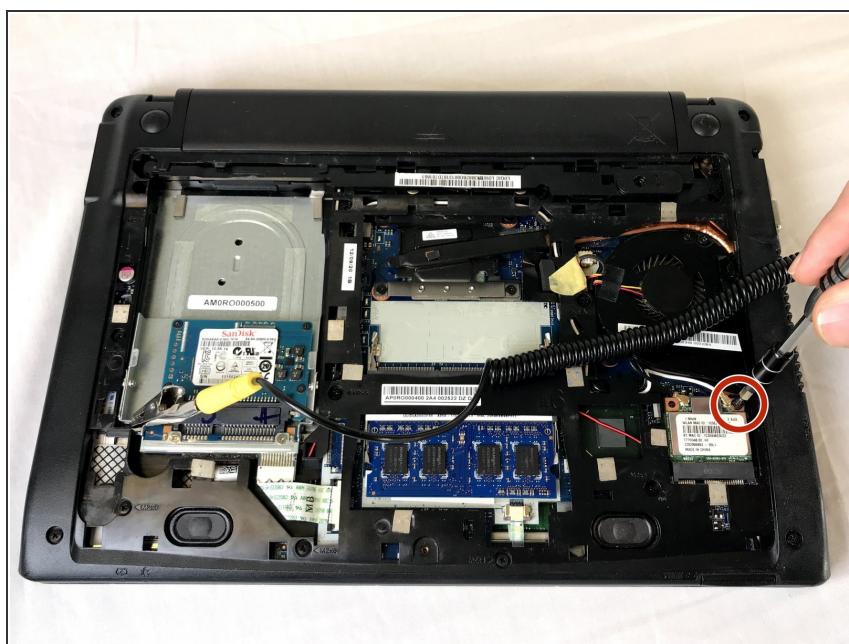

- Locate the 3 mm Phillips #00 screw on the wireless card port.
- Unscrew the screw and place it aside for now.

## Step 5



- Safely remove the wireless card by pulling it out of the bottom of the port.
- Lastly, disconnect the two white and black wire connectors attached to the wireless card.

To reassemble your device, follow these instructions in reverse order.