



Acer Chromebook C710-2856 Battery Replacement

This guide will give detailed instructions in order to replace the battery in the Acer Chromebook C710-2856

Written By: Rebecca Enright



This document was generated on 2019-10-03 07:59:36 PM (MST).

INTRODUCTION

The battery wears out over time, causing the device to not hold a charge. By replacing the battery, it will increase the length of use between charges.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery Replacement



- On the underside of the laptop towards the back, locate the battery lock slider. Push the slider, and remove the battery.

To reassemble your device, follow these instructions in reverse order.