



Acer Chromebook C710-2856 RAM Replacement

This guide will help you remove and replace the RAM from your Acer Chromebook C710-2856

Written By: Juan Villafuerte



INTRODUCTION

This guide will help you remove and replace the RAM from your Acer Chromebook C710-2856.

TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — RAM





- Remove the one 4.3mm Phillips #1 screw holding the back cover on.

Step 2

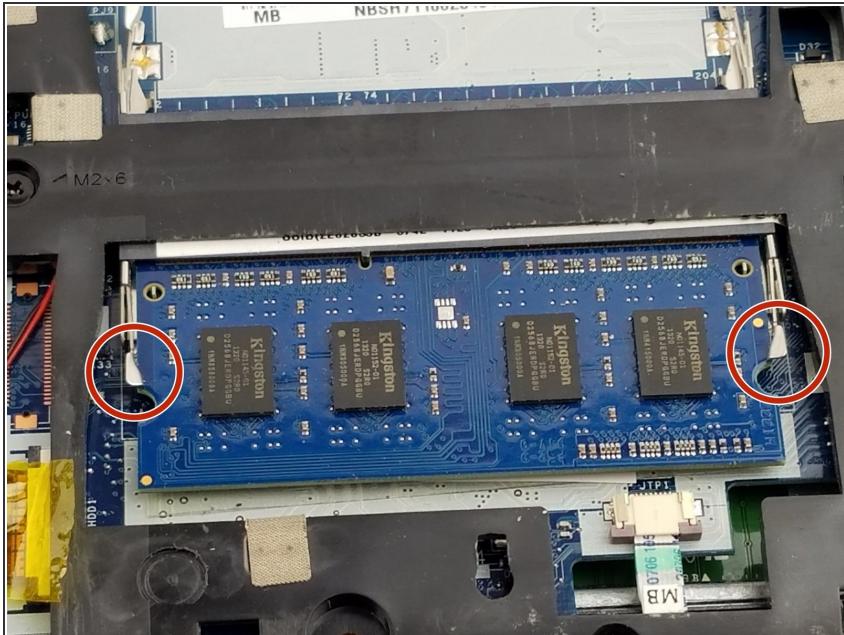


- Locate the RAM and the metal clips holding the RAM in place.

Step 3

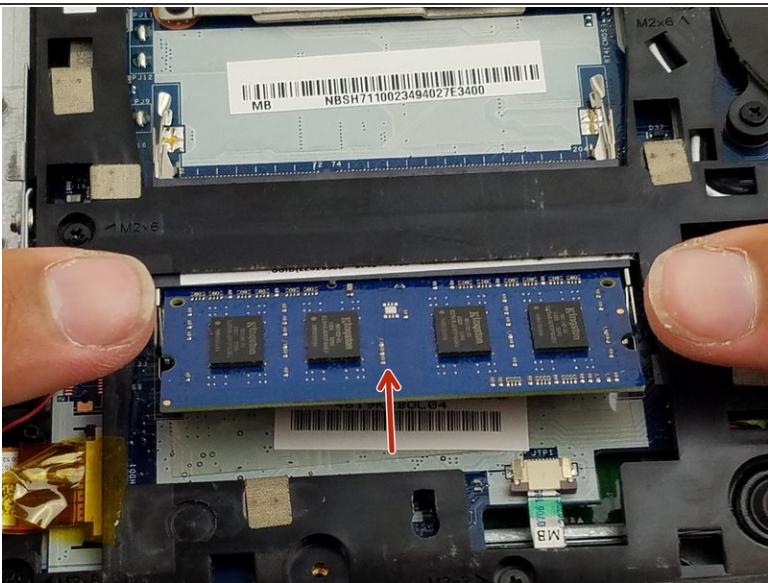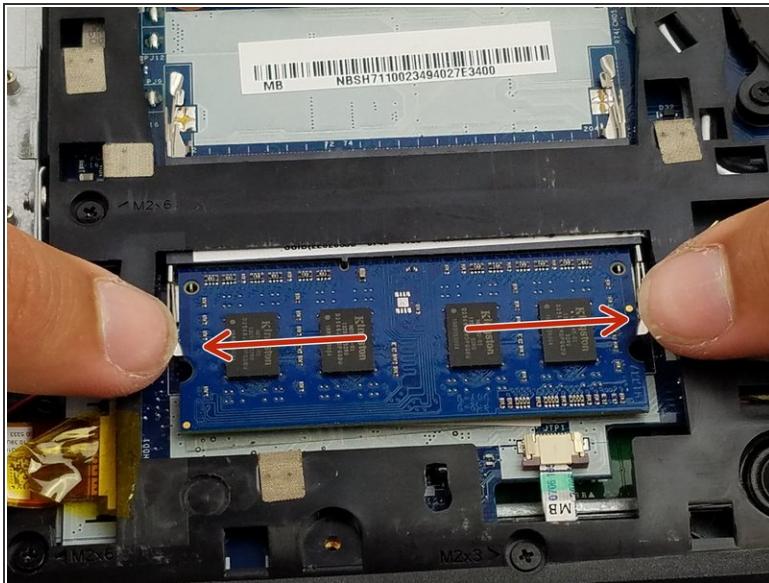

- Push the two clips outwards at the same time with your fingers. The RAM will gently pop upwards.

Step 4

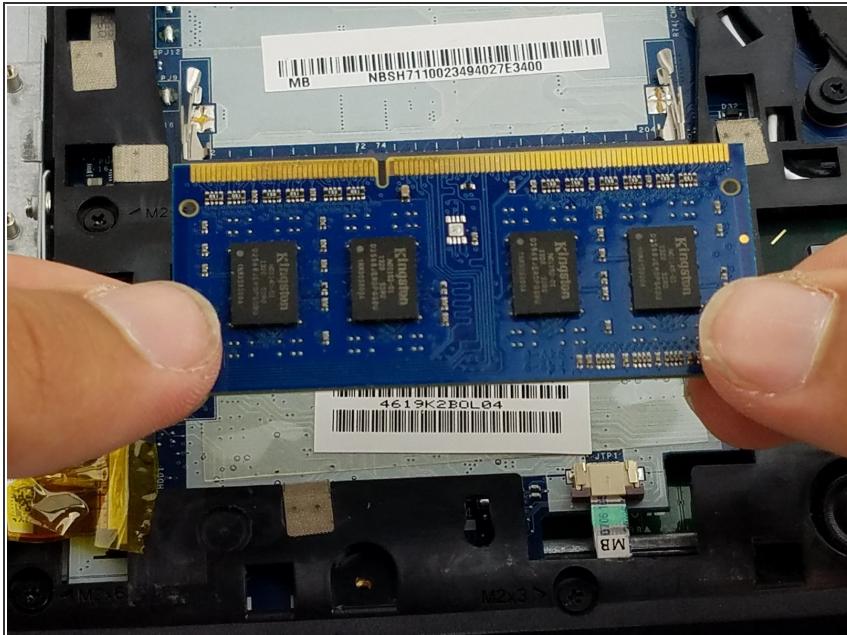

- Pull the RAM out of the slot.

To reassemble your device, follow these instructions in reverse order.