 



Written By: Matthew Holt



INTRODUCTION

This guide goes through the steps on how to replace a broken key for the Acer Chromebook C720-2103. This is an extremely easy replacement guide. The only thing needed in this guide is either a new key to replace a broken one or the same one that fell off.

 Step 1 — A Single Key

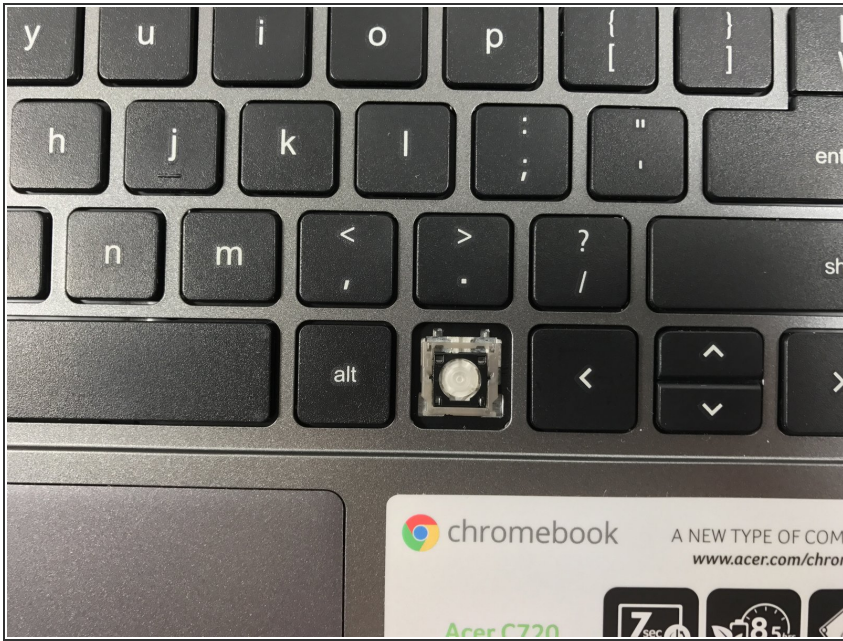

- Place the new key or the old key that has fallen off in the area indicated in the image.
- Apply pressure on the key until it pops into place.

To reassemble your device, follow these instructions in reverse order.