


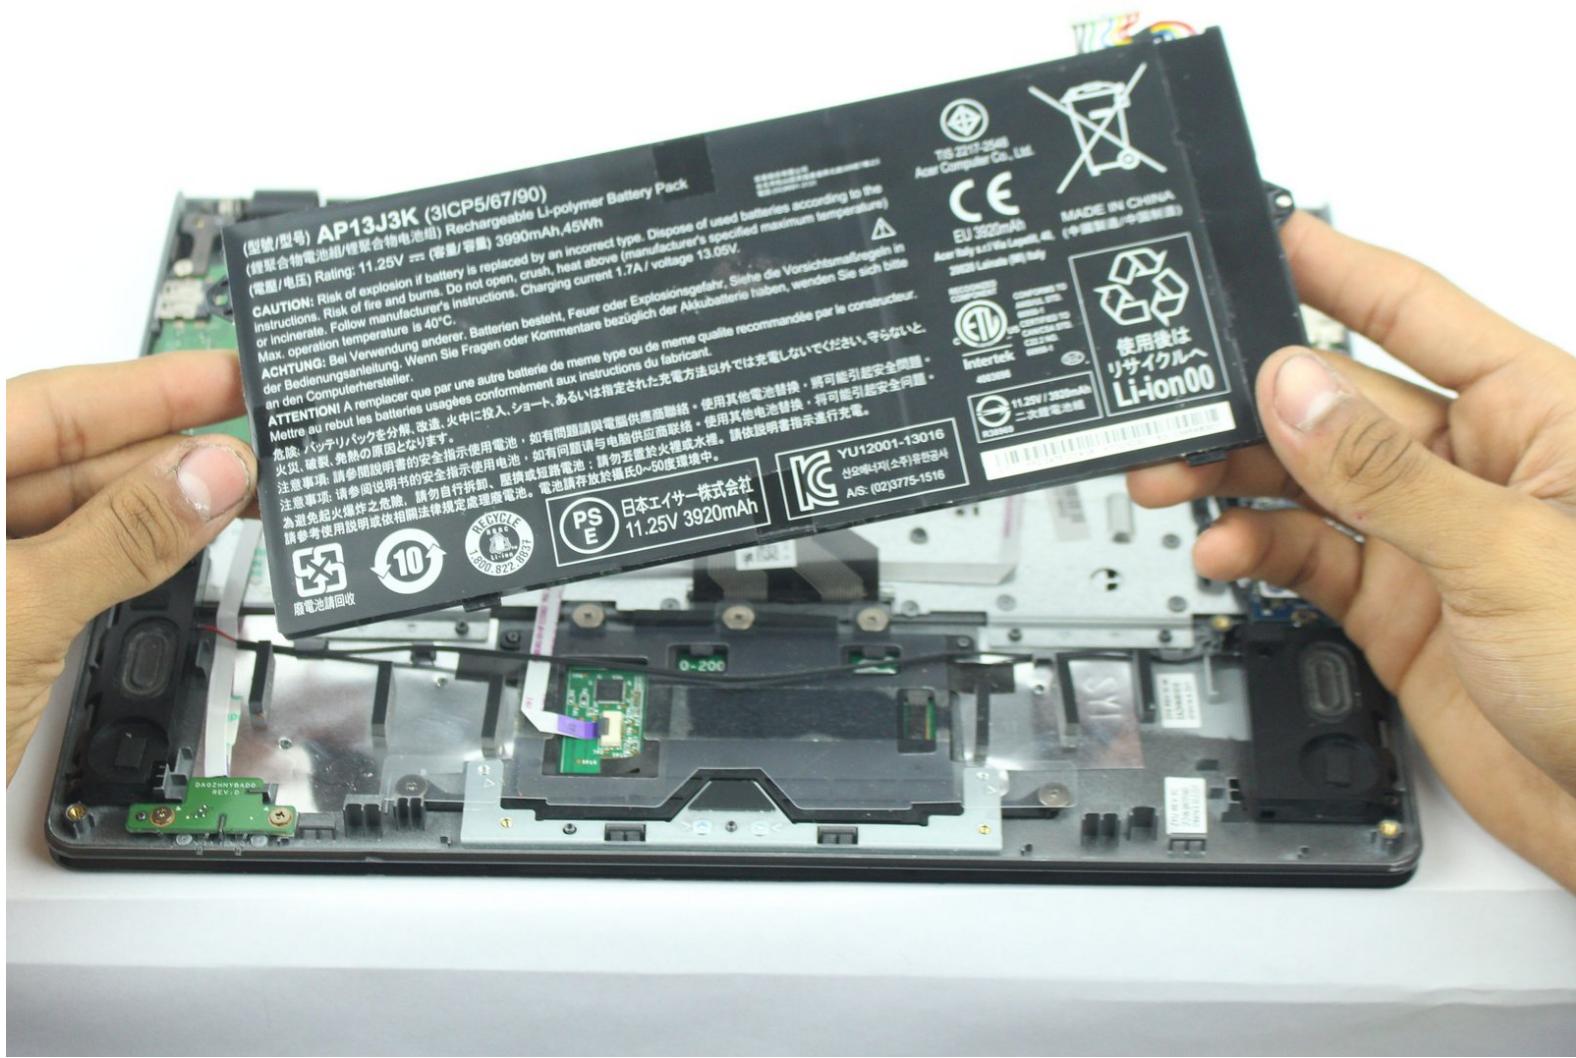

Acer Chromebook C720-2420 Battery Replacement

Use this guide to replace the battery in your Acer Chromebook C720-2420.

Written By: Jessica Beckford



This document was generated on 2019-09-20 12:07:50 PM (MST).

INTRODUCTION

This guide will provide you with simple and clear steps on how to replace a dead battery in an Acer Chromebook C720-2420.


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Acer C720P Chromebook Bottom Cover](#) (1)
- [Acer Chromebook C740/C720/C720P Battery](#) (1)

Step 1 — Back Cover Replacement

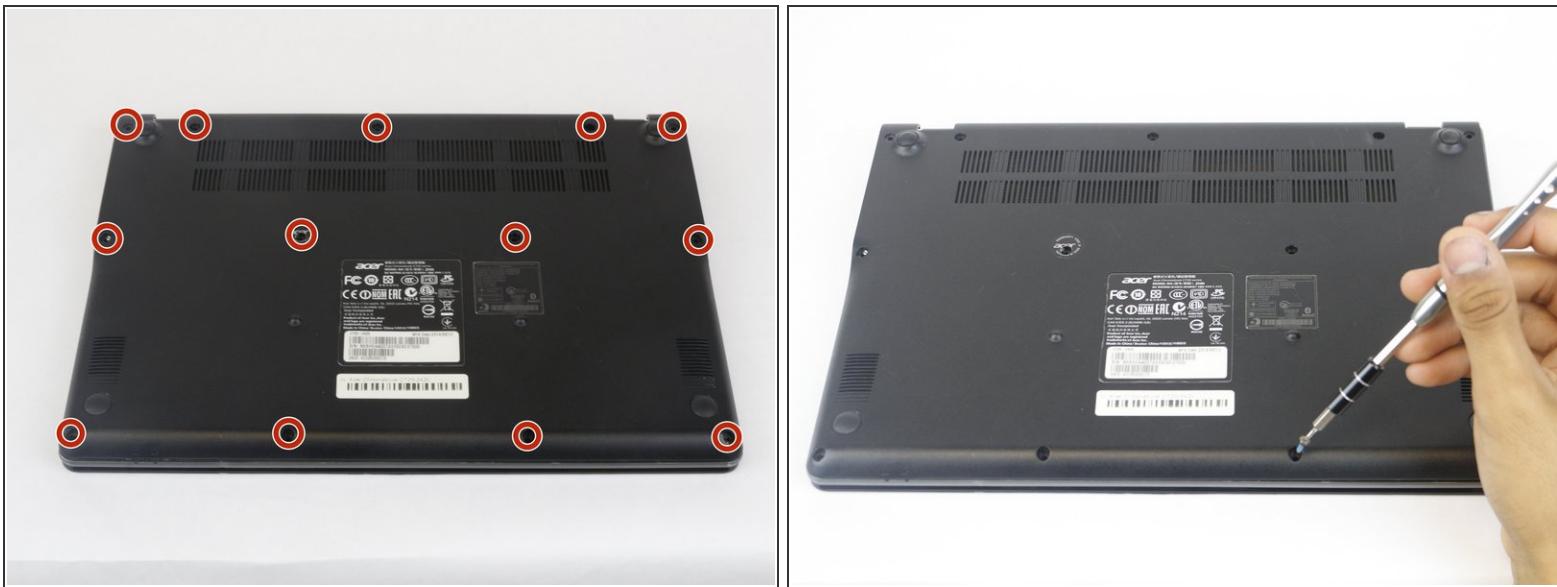

(i) Place your Chromebook upside down.

- Utilizing the precision magnetized Phillips #0 screwdriver, remove all thirteen 6.5 mm Phillips screws that secure the back cover.


! Before doing anything, make sure your Acer Chromebook is completely turned off.

Step 2



- Use the plastic opening tool to carefully remove the bottom.

Step 3 — Battery

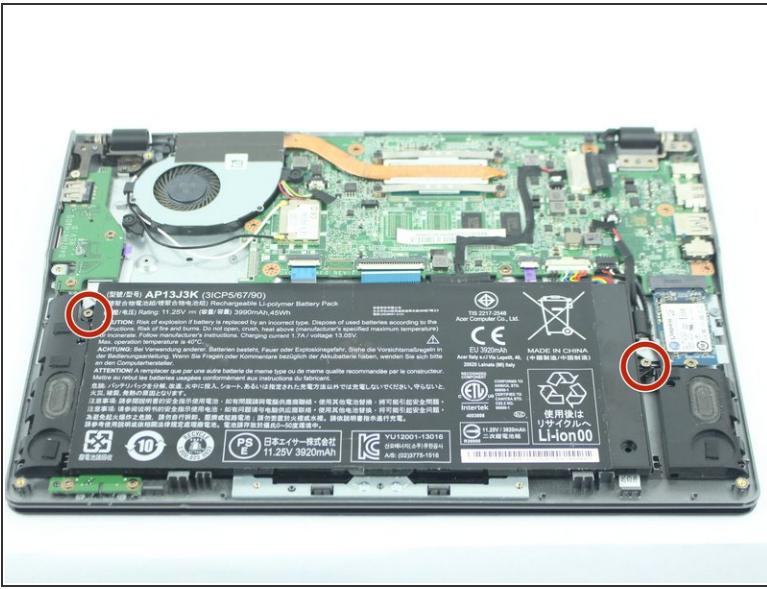

- Remove the two 3.6 mm Phillips screws holding the battery in place.

Step 4



- Disconnect the connector that attaches the battery to the Chromebook with a pair of pliers or tweezers.

(i) Alternatively, you could use your hands, as it may be difficult to unhook the connector.

Step 5

- Remove the battery.



To reassemble your device, follow these instructions in reverse order.