




Acer Chromebook C720-2420 Fan Replacement

Use this guide to replace the fan on your Acer Chromebook C720-2420.

Written By: Jessica Beckford

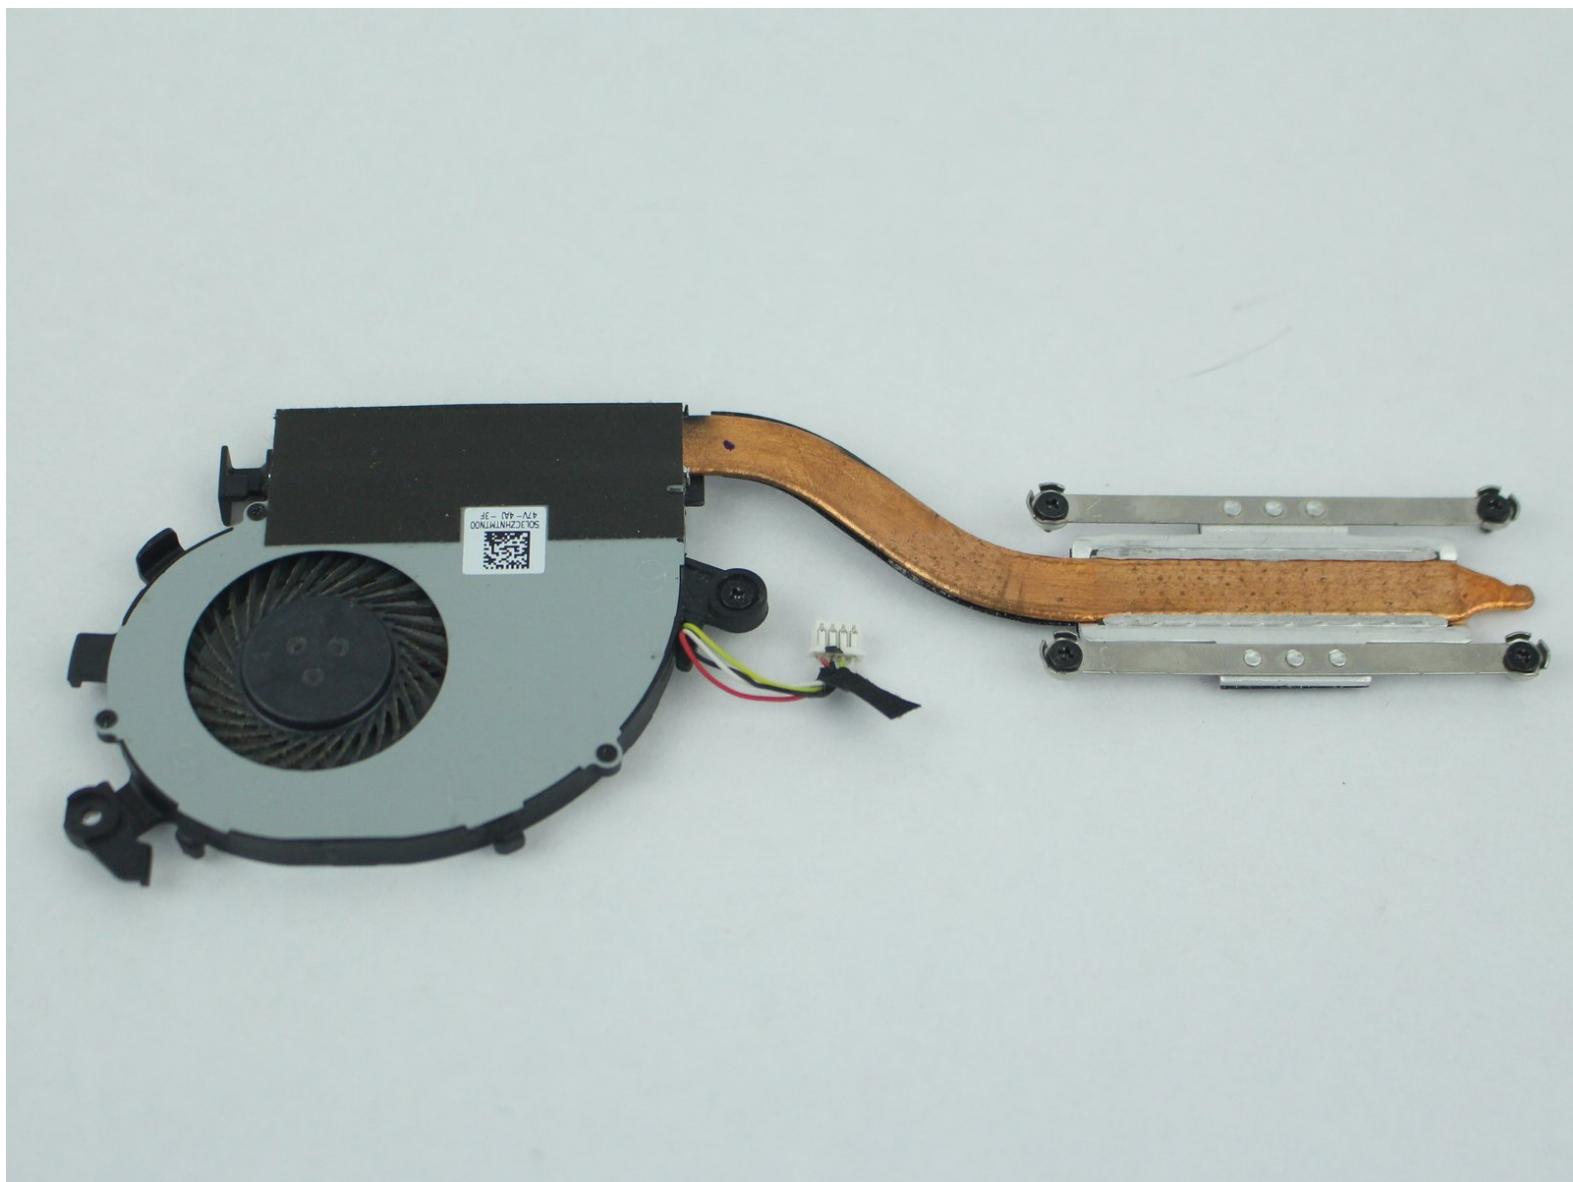


INTRODUCTION

This guide will provide you with simple and clear steps on how to remove the fan on your Acer Chromebook C720-2420.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS #1](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Back Cover Replacement

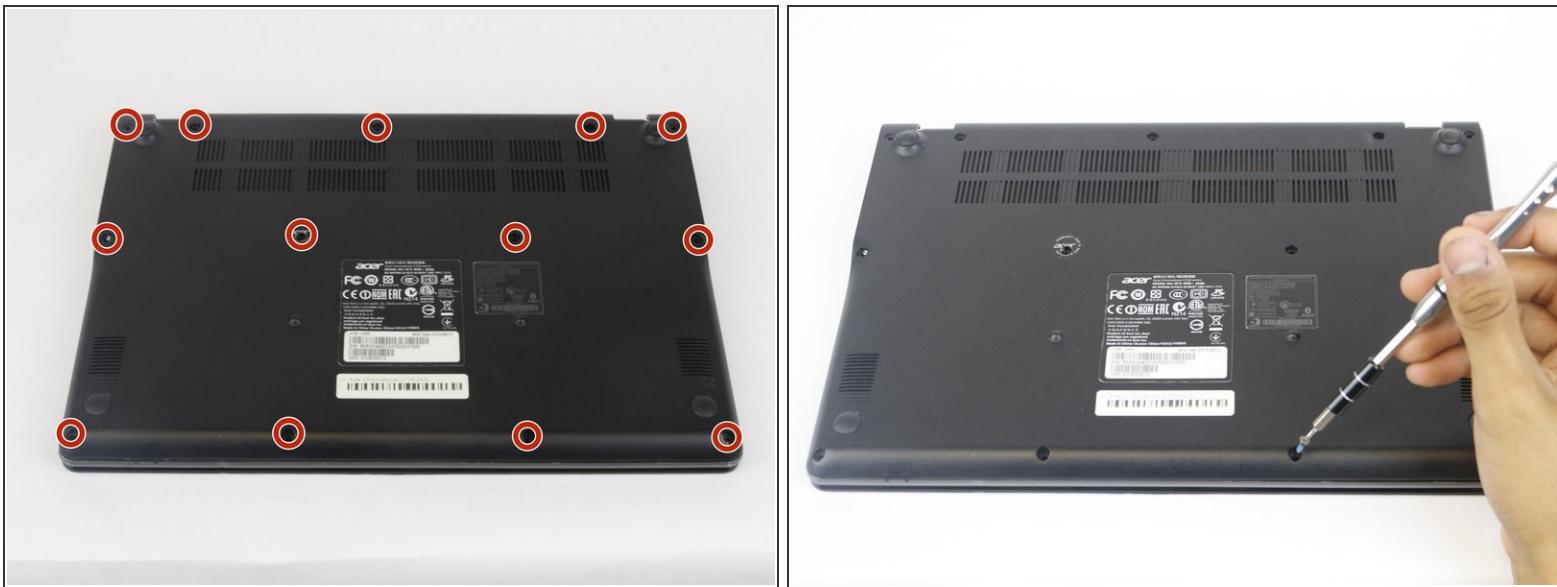

(i) Place your Chromebook upside down.

- Utilizing the precision magnetized Phillips #0 screwdriver, remove all thirteen 6.5 mm Phillips screws that secure the back cover.

! Before doing anything, make sure your Acer Chromebook is completely turned off.

Step 2



- Use the plastic opening tool to carefully remove the bottom.

Step 3 — Battery



- Remove the two 3.6 mm Phillips screws holding the battery in place.


Step 4



- Disconnect the connector that attaches the battery to the Chromebook with a pair of pliers or tweezers.



(i) Alternatively, you could use your hands, as it may be difficult to unhook the connector.

Step 5

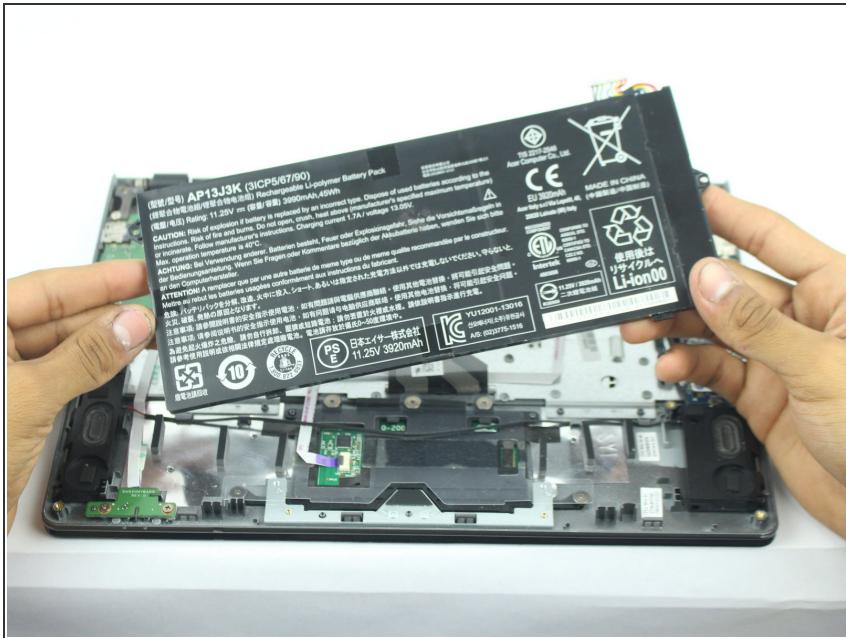

- Remove the battery.

Step 6 — Fan

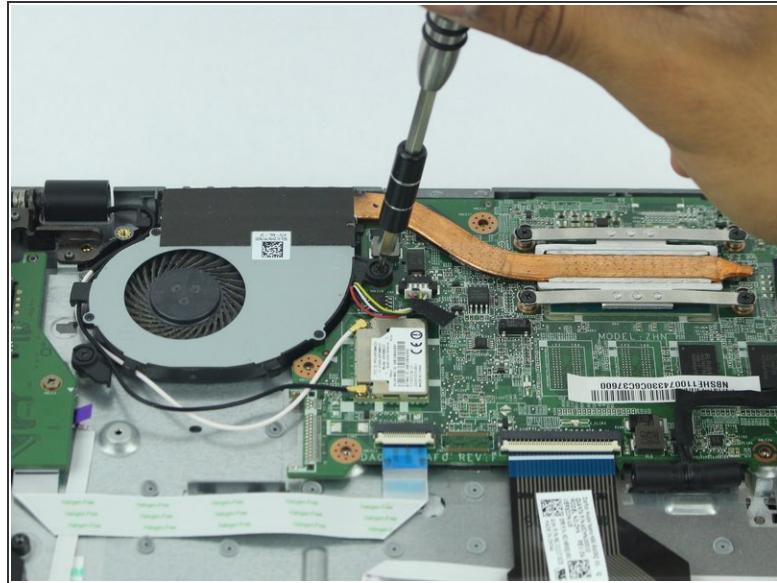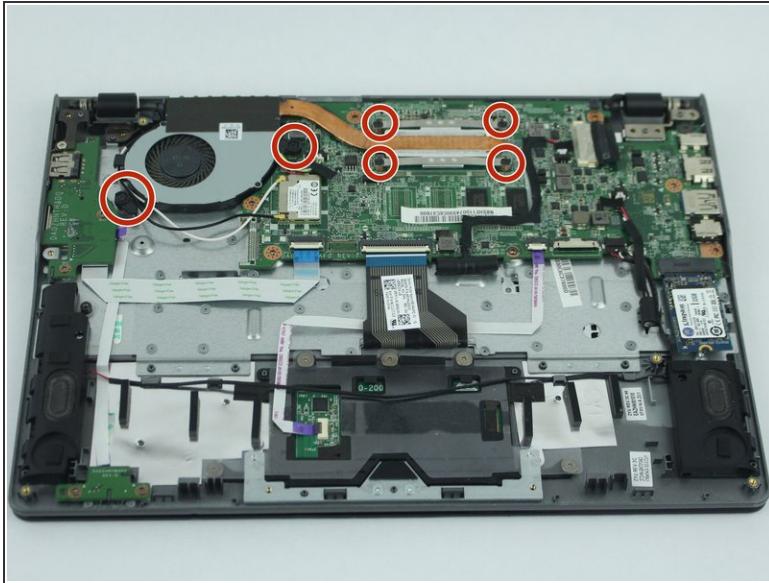

- Remove the six 4.7 mm Phillips screws that secure the fan.

Step 7



- Disconnect these cables from the motherboard using the tweezers.
- *(i)* Alternatively, you may use your hands.
- Pull out the fan.

To reassemble your device, follow these instructions in reverse order.