



Acer Chromebook C720-2848 Screen Replacement

A repair and replacement guide for a defective LCD screen.

Written By: Cory Provost



INTRODUCTION

This guide instructs the reader how to disassemble, extract, replace, and reassemble the LCD monitor for an Acer Chomebook C720-2848

TOOLS:


- Pro Tech Toolkit (1)

Step 1 — Screen



- Insert a metal spudger around the inner side of the screens plastic perimeter.
- Thread around the perimeter while prying to snap the top part out like so.

Step 2

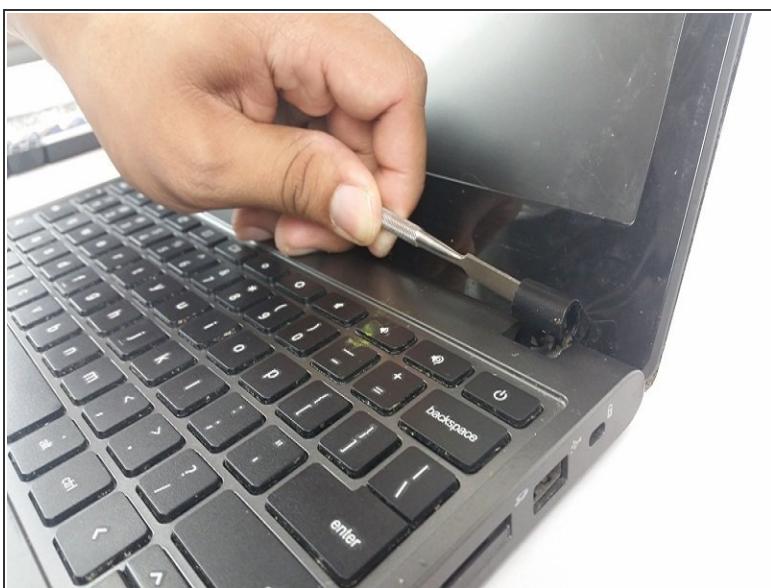

- Remove the faceplate's bottom hinges that connect to the body of the device. This will free the plastic perimeter, which may now be removed.

Step 3




- Use a screw driver to remove the screws in these locations.

Step 4



- Reposition the screen onto the keyboard like so.

Step 5

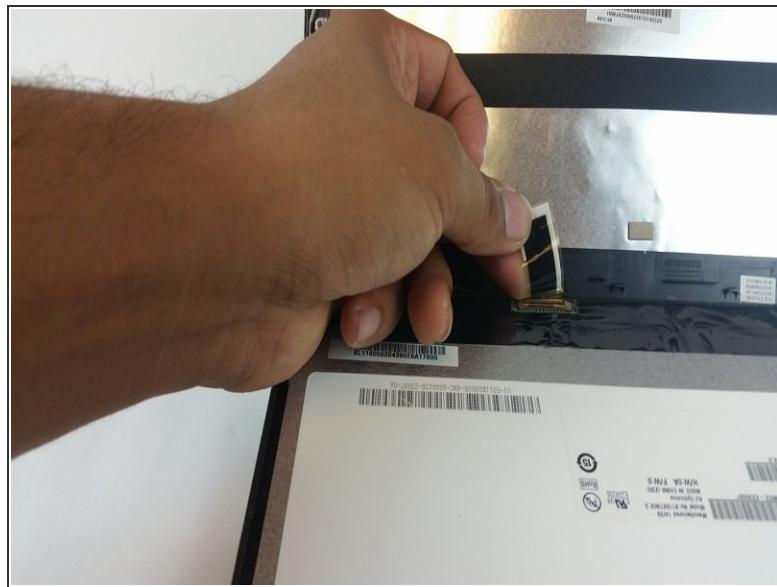

- Locate this bar code strip and then remove it.

To reassemble your device, follow these instructions in reverse order.